



The SRV45 App allows you to adjust settings and controls, monitor unit conditions in real time, check the weather forecast, and fill out the warranty card.

How to Download

 


Scan The QR Code

-OU-
Ouvrir Google Play




Search for
"SRV45 Clairitech"
Tap to download

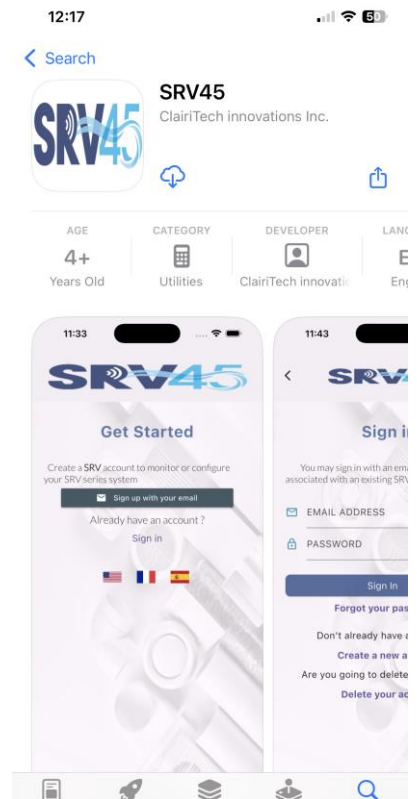


ClairiTech
INNOVATIONS
advanced clean air technology
technologie avancée de l'air pur

 Sign in by creating a new account

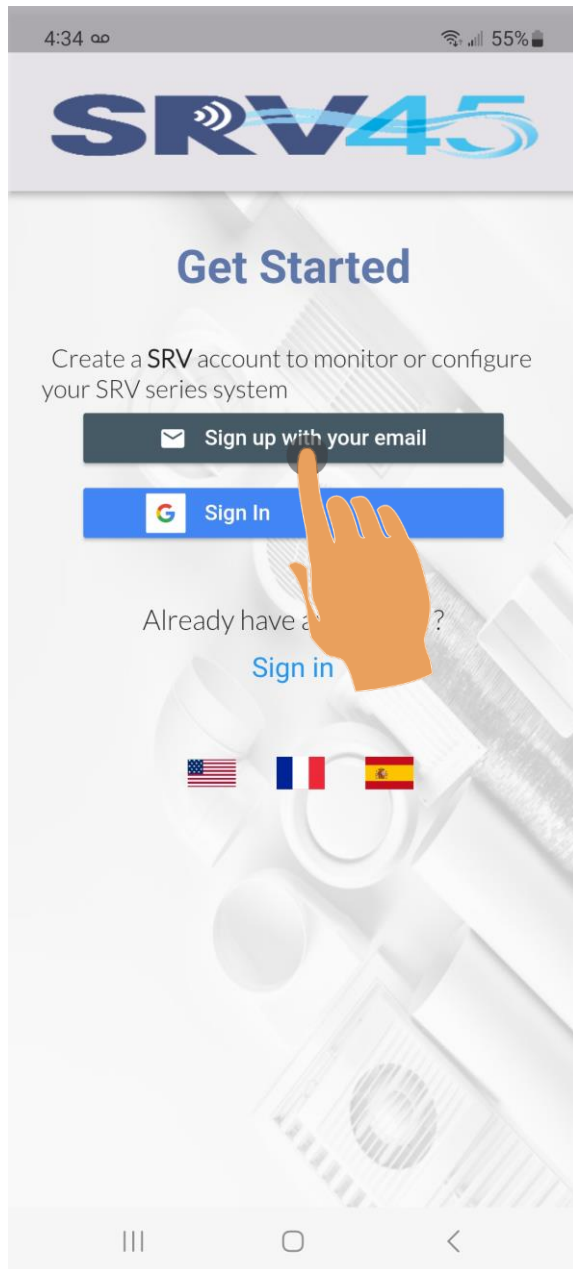


 Step 1:
Tap
"Sign up with your email"

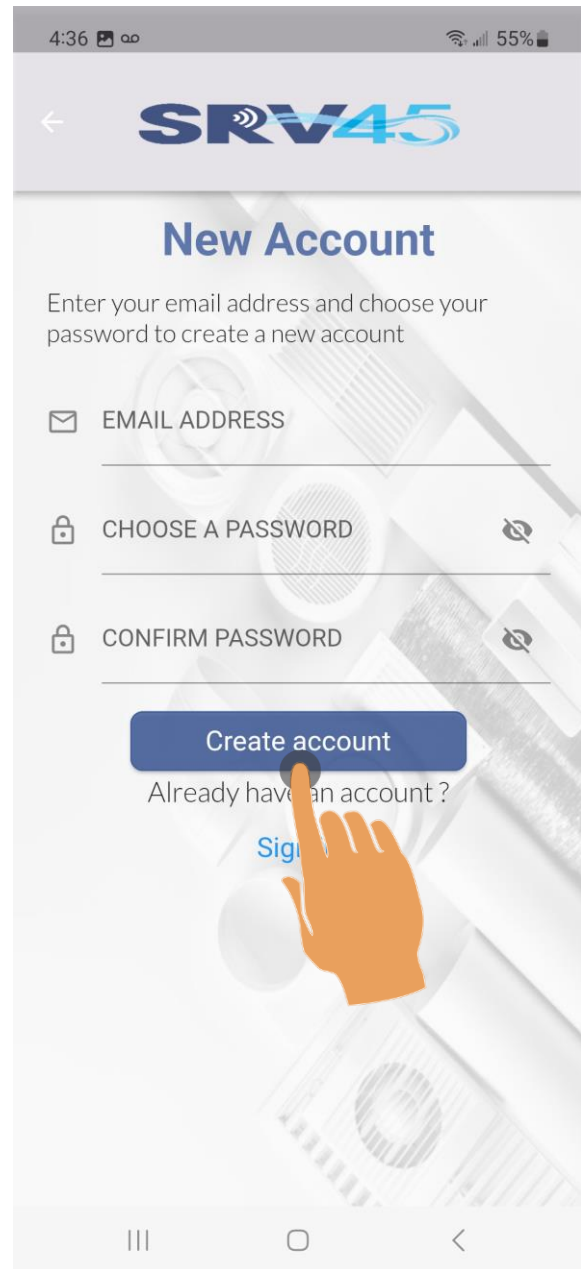


Step 2:
Fill in your email address and
password.
Tap "Create account"

 Sign in by creating a new account

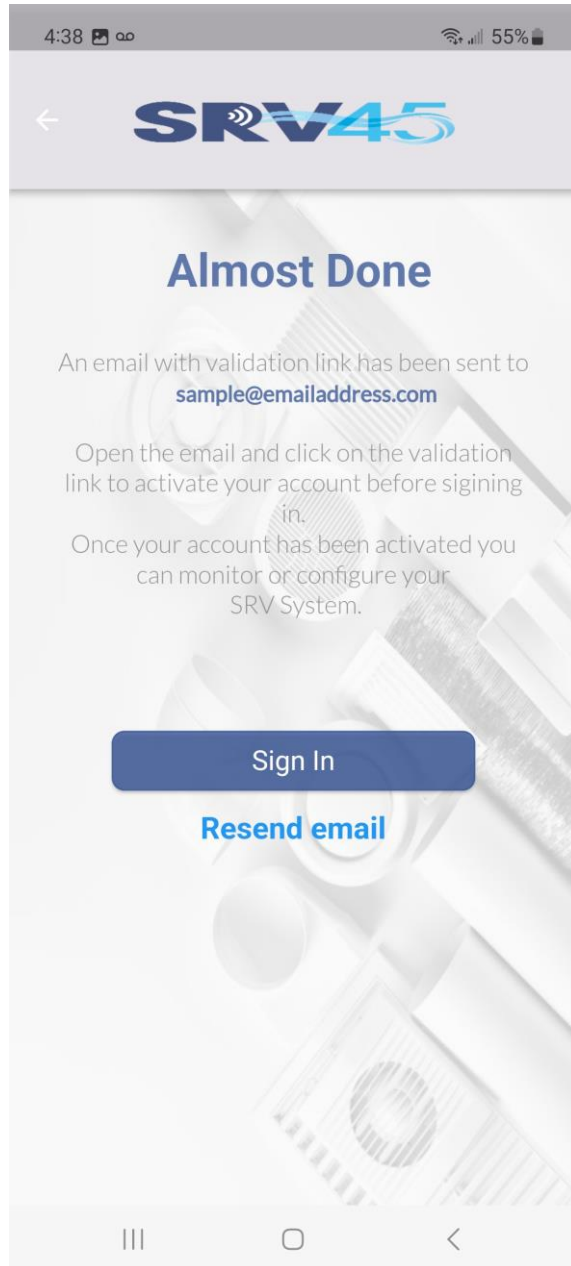

Step 3:

 
An email will be sent to verify your email address

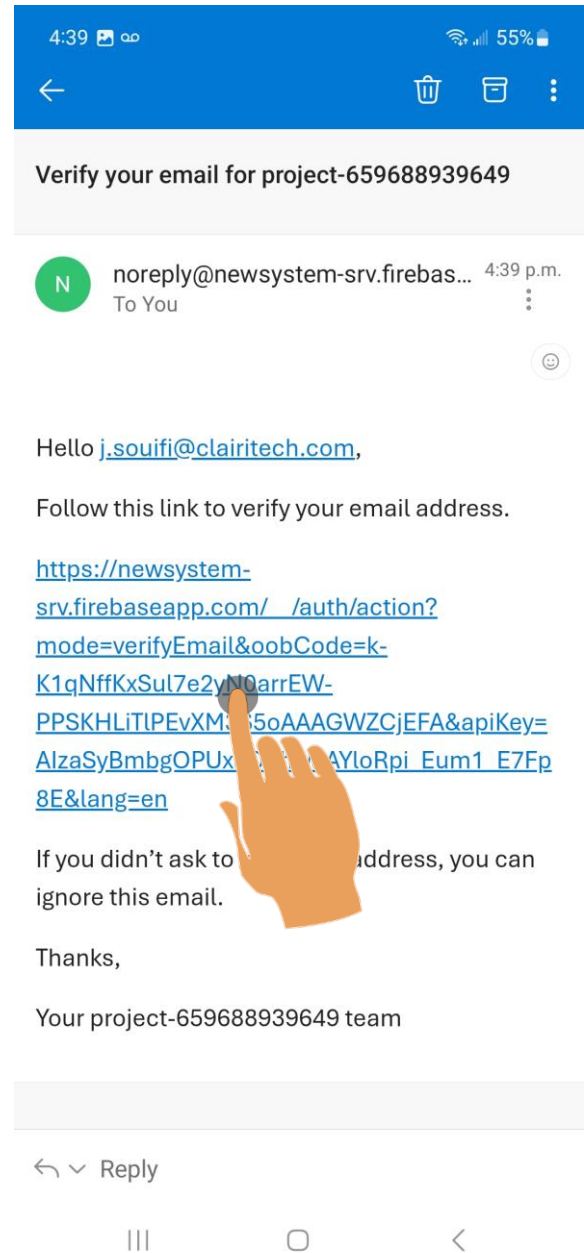


Step 4:

Check your email inbox or spam. Click on (or tap) the link to verify your email address

 Sign in by creating a new account

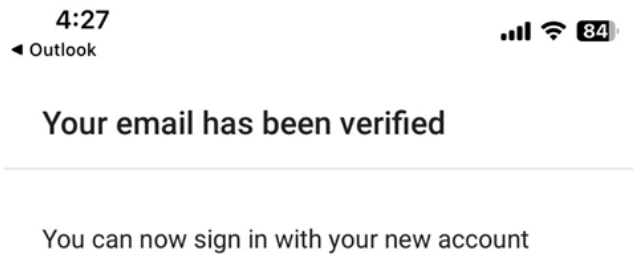


 Step 5:
The validation process is
complete

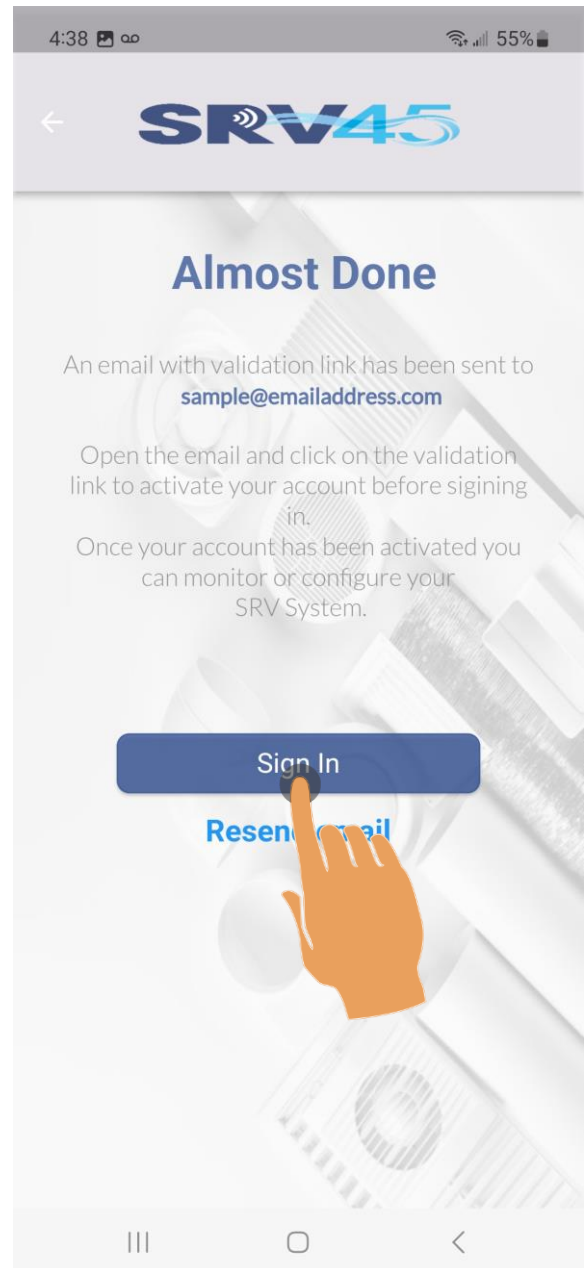

Step 6:
Tap "Sign In"

 Sign in by creating a new account

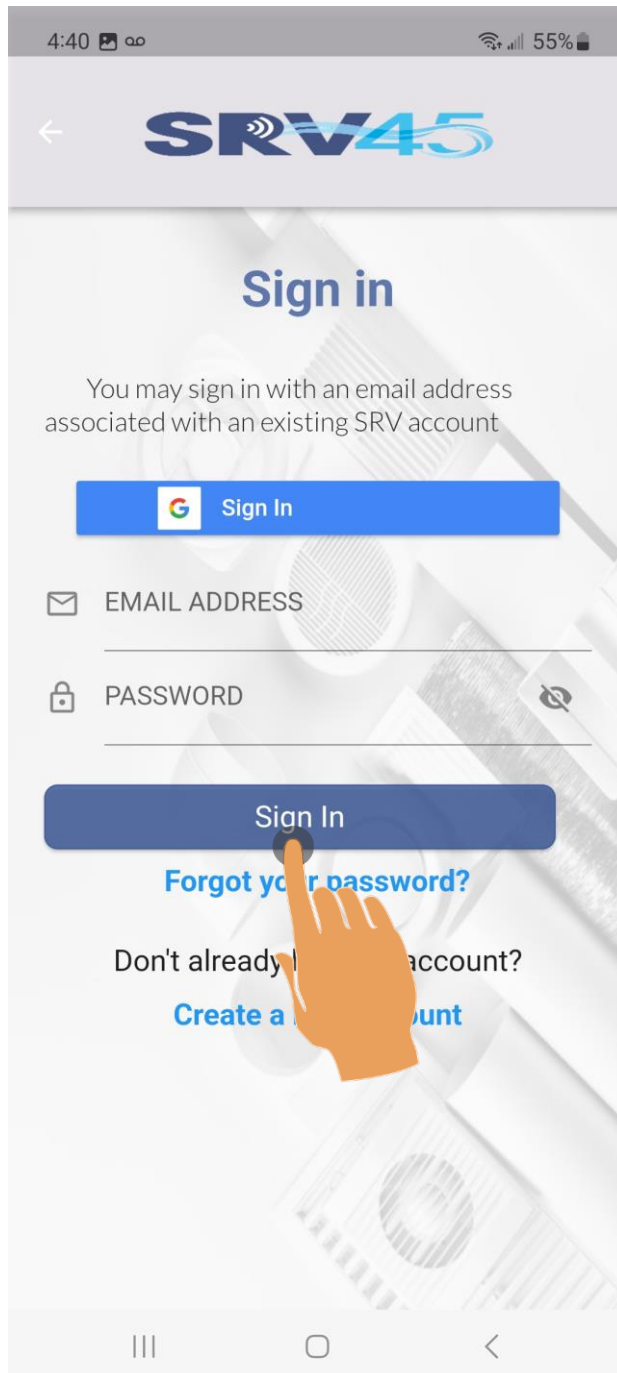

The image shows a mobile app interface for SRV45. At the top, there's a status bar with the time 4:40, signal strength, and 55% battery. Below that is a header with a back arrow and the SRV45 logo. The main heading is "Sign in". A subtext says "You may sign in with an email address associated with an existing SRV account". There are two input fields: "EMAIL ADDRESS" and "PASSWORD". Below these is a blue "Sign In" button. A hand icon is pointing at the "Sign In" button. Below the button are links for "Forgot your password?" and "Don't already have an account? Create a new account".

4:40 55%

← SRV45

Sign in

You may sign in with an email address associated with an existing SRV account

 Sign In

✉ EMAIL ADDRESS

🔒 PASSWORD 

Sign In

 
[Forgot your password?](#)

Don't already have an account? [Create a new account](#)


Step 7:

Enter your email address
and password.
Tap "Sign In"

How to reset your password

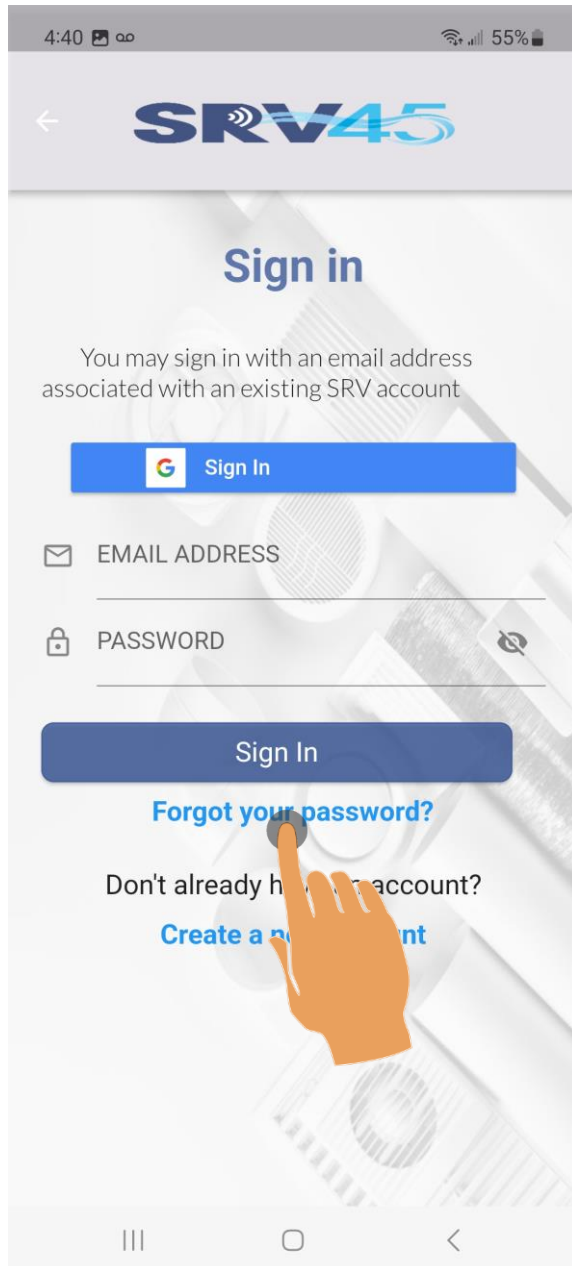


 Step 1:
Tap "Forgot your password?"

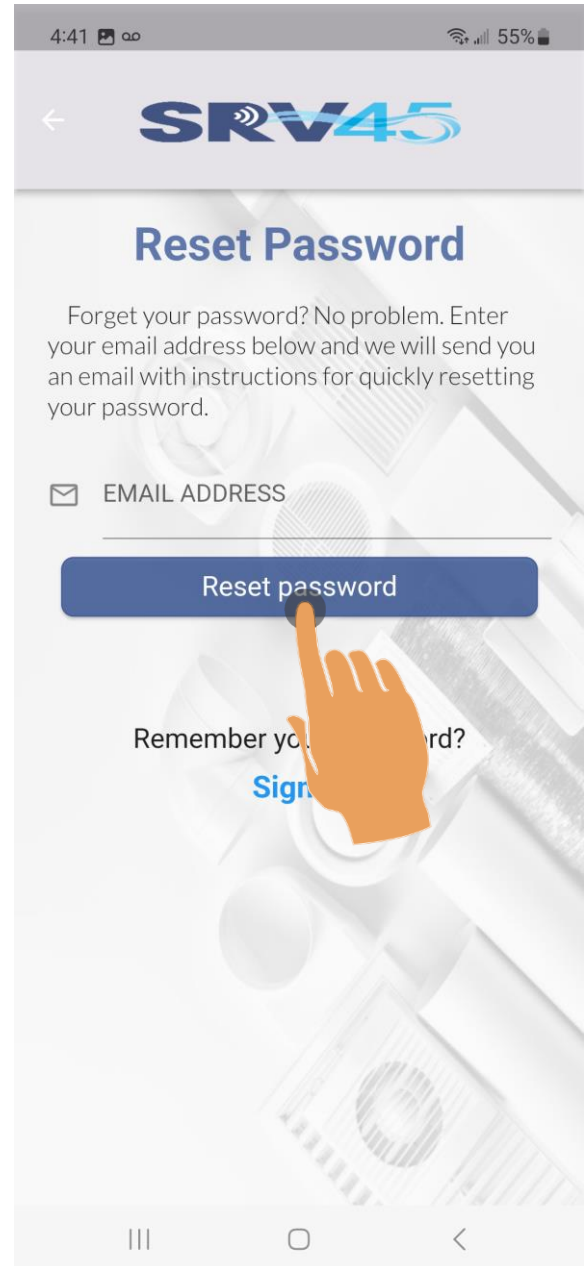


Step 2:
Enter your email address.
Tap "Reset password"

 How to reset your password

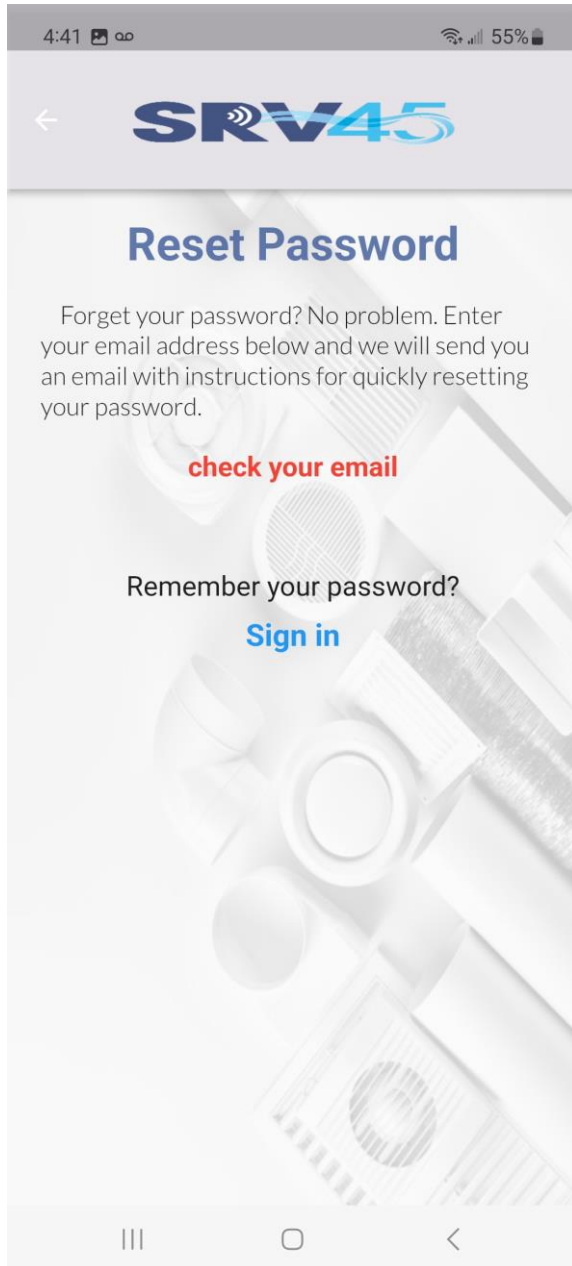


 Step 3:
An email will be sent to
reset your password

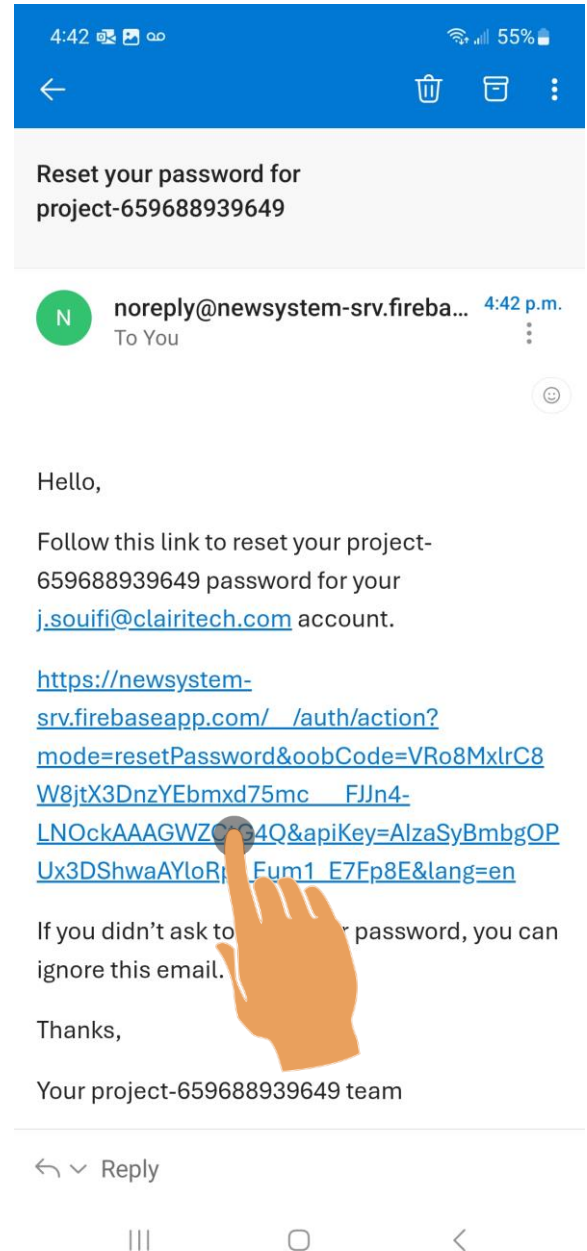

Step 4:
Check your email's inbox or spam.
Click the link to reset your
password.

 How to reset your password

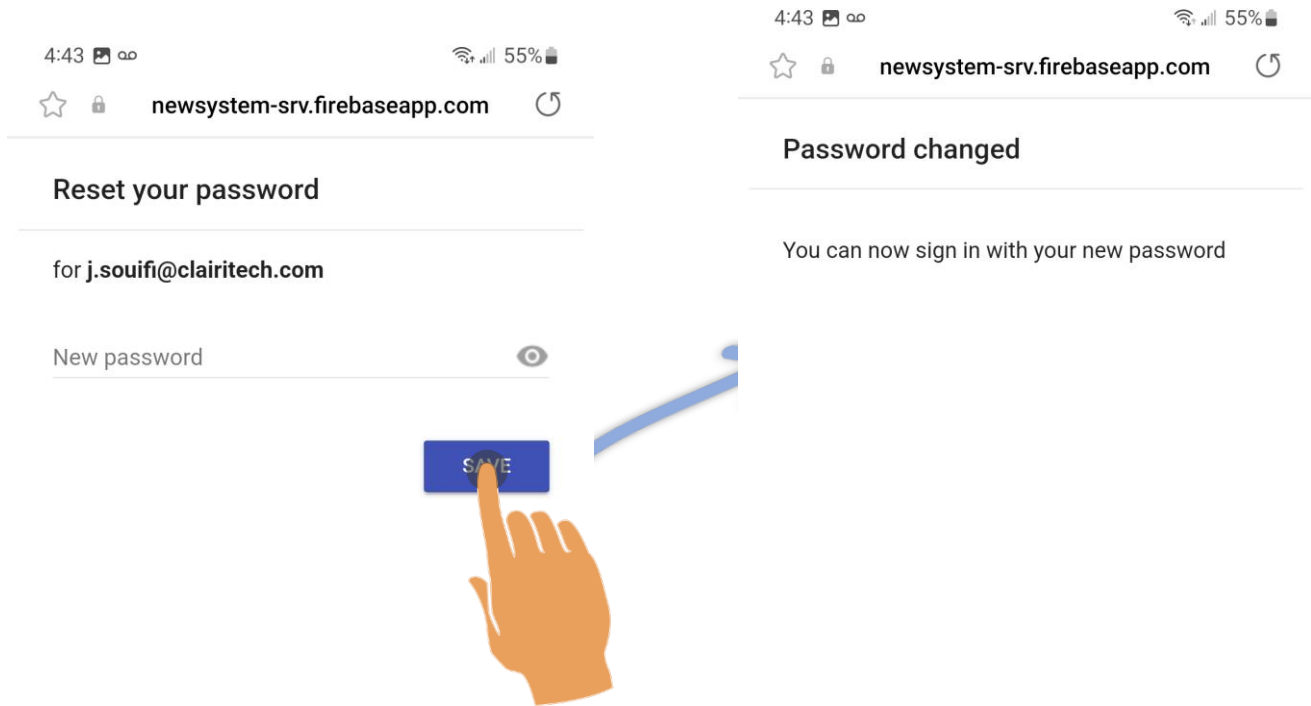


Step 5:

Enter your new password.
Tap "SAVE"


Step 6:

The reset password
process is completed.

 How to reset your password

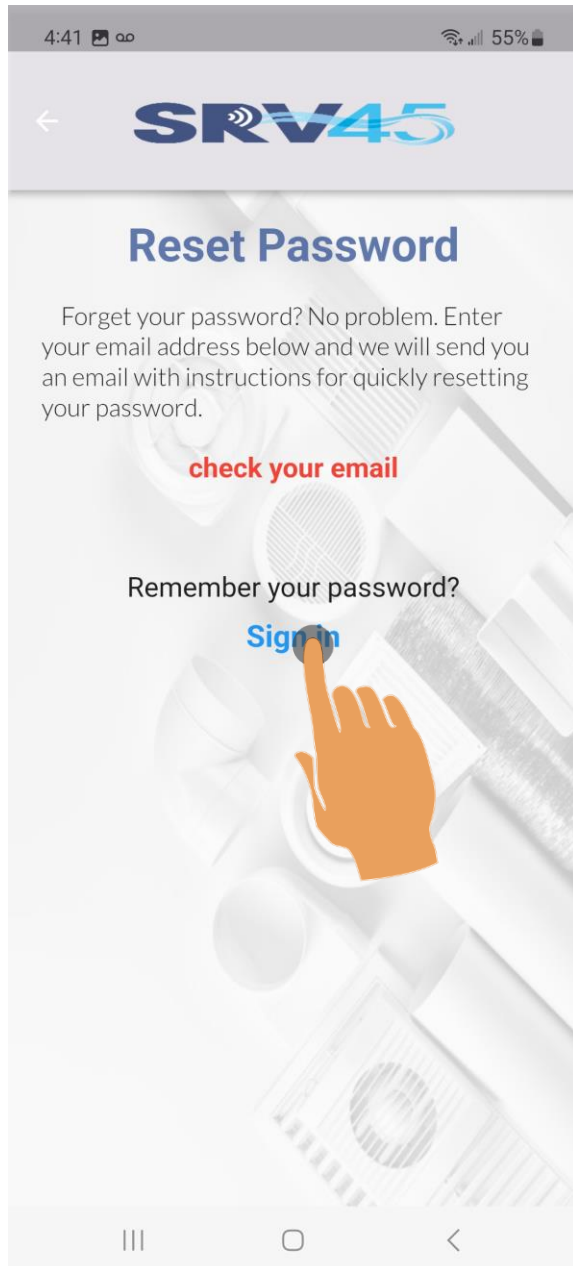


 Step 7:
Tap "Sign In"

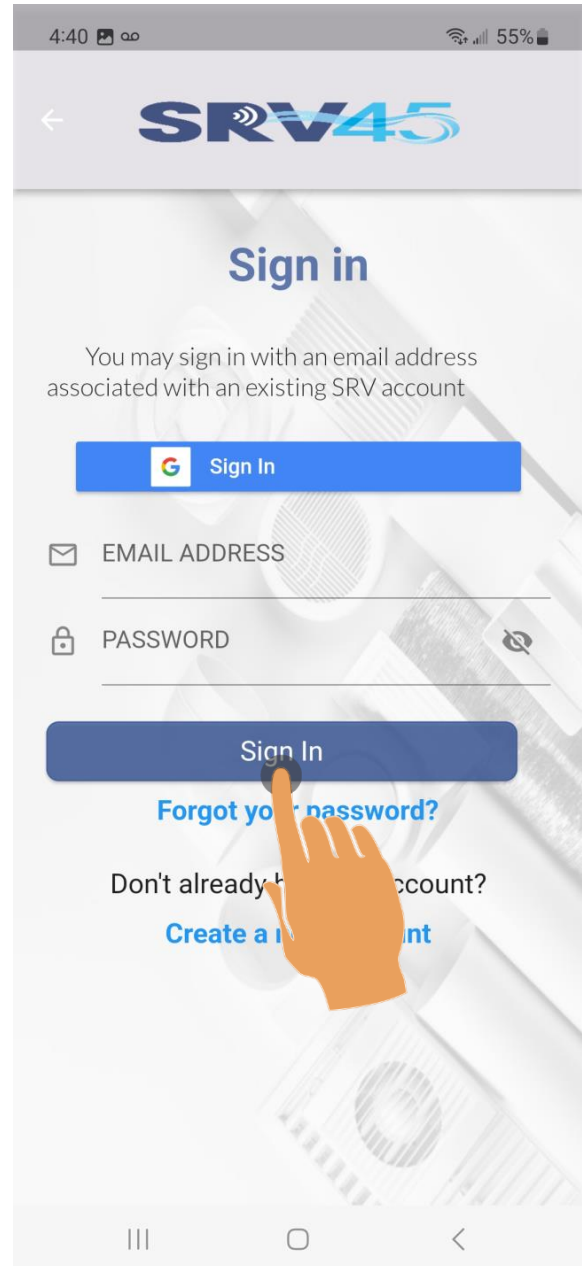


Step 8:
Enter your email address
and your new password.
Tap "Sign In"

 How to add your system


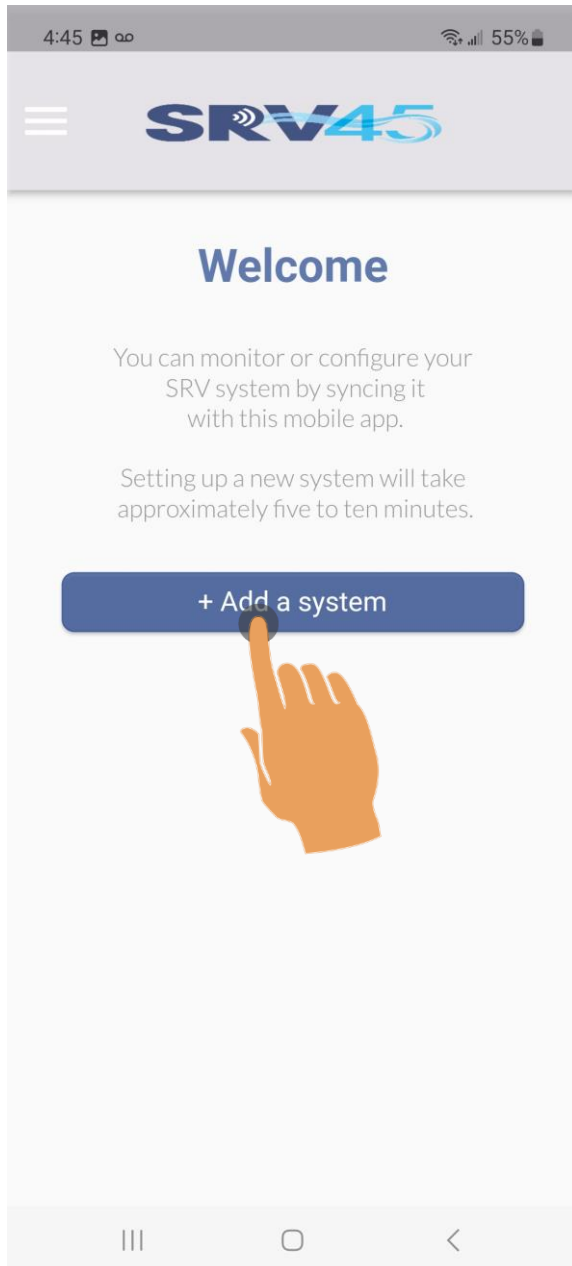


 Step 1:
Tap "Add a system"

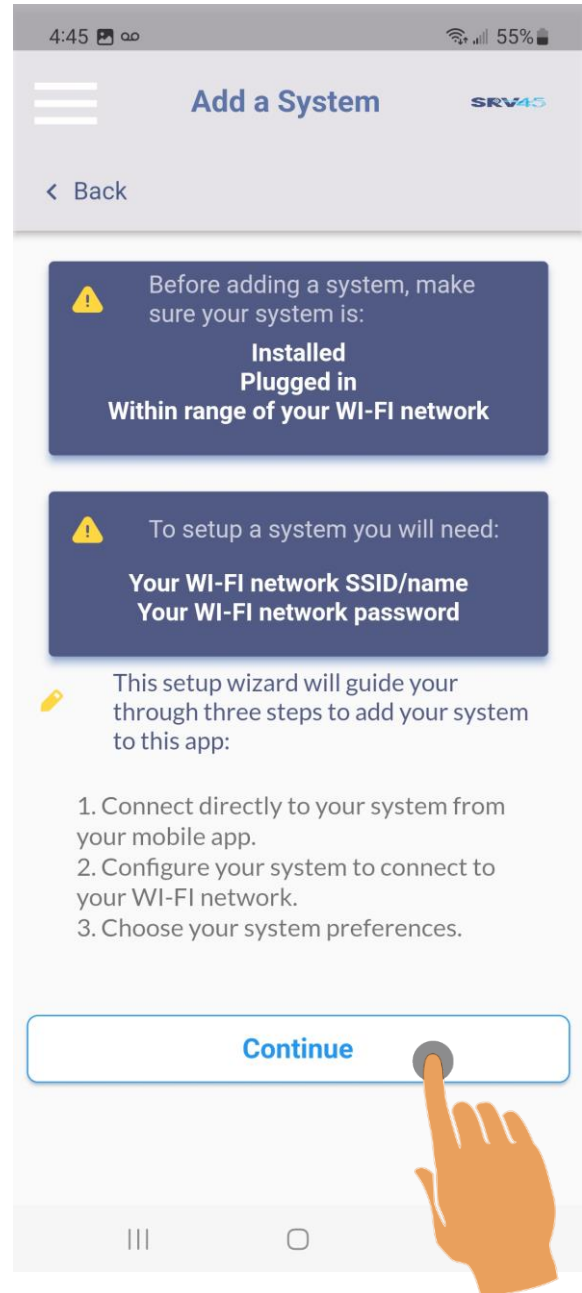

Step 2:
This screen outlines the steps to add your system.
Tap "Continue"

  How to add your system

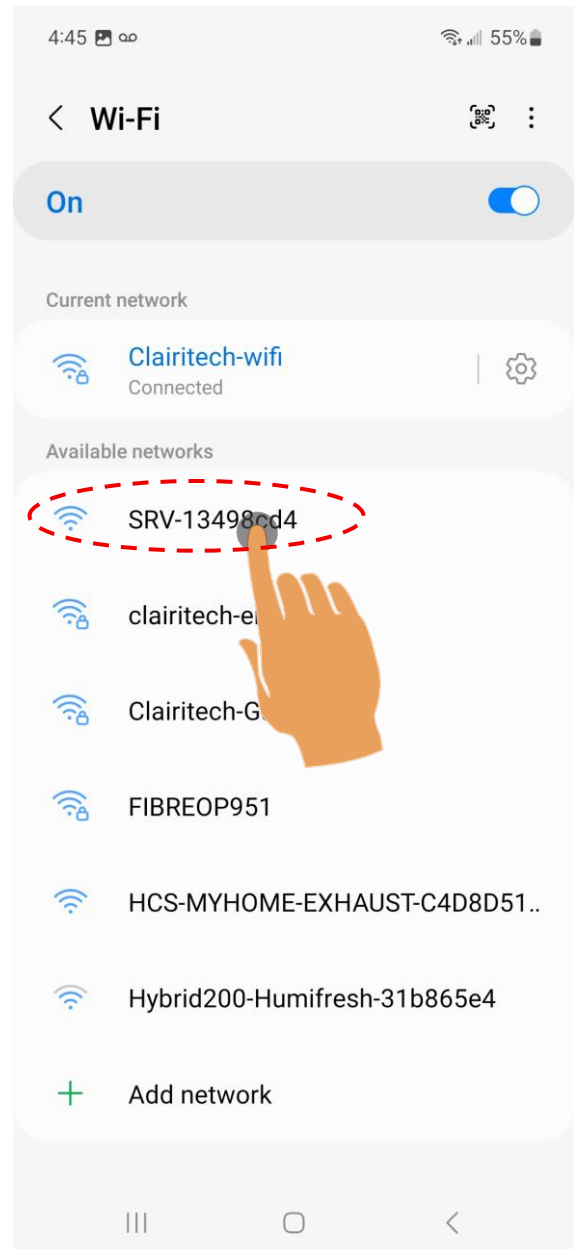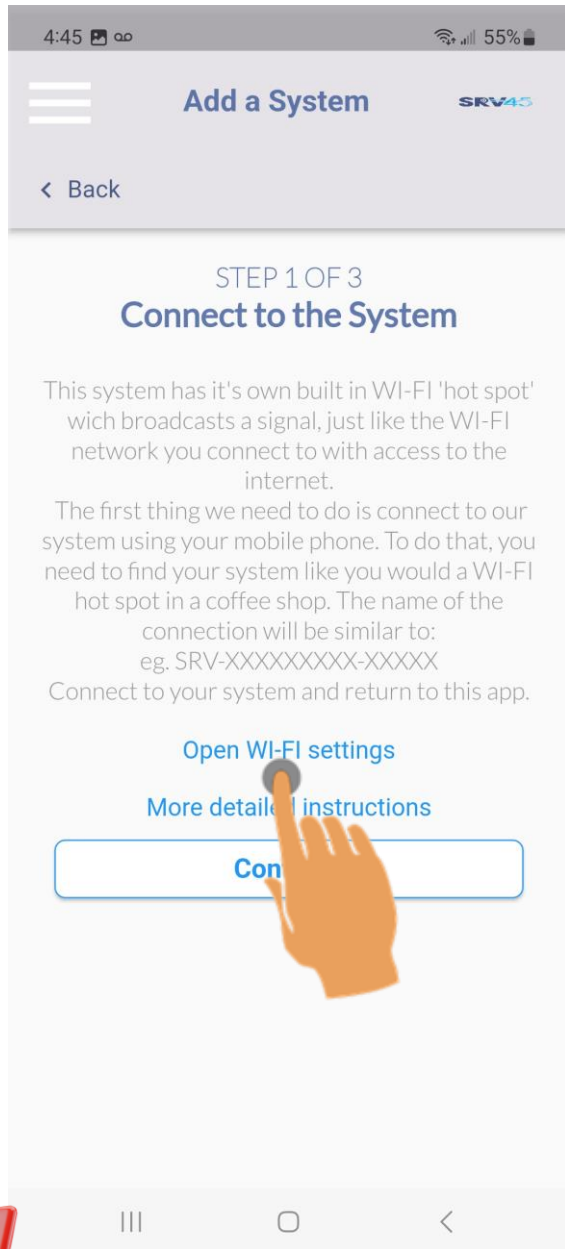

You need to connect to the Wi-Fi network of your SRV45 unit.

Step 3:

 
 
Tap "Open Wi-Fi settings"

Step 4:

The unit generally shows up OTHER NETWORKS as "SRV45-xxxxxxx"

Tap "SRV45-xxxxxxx"

How to add your system

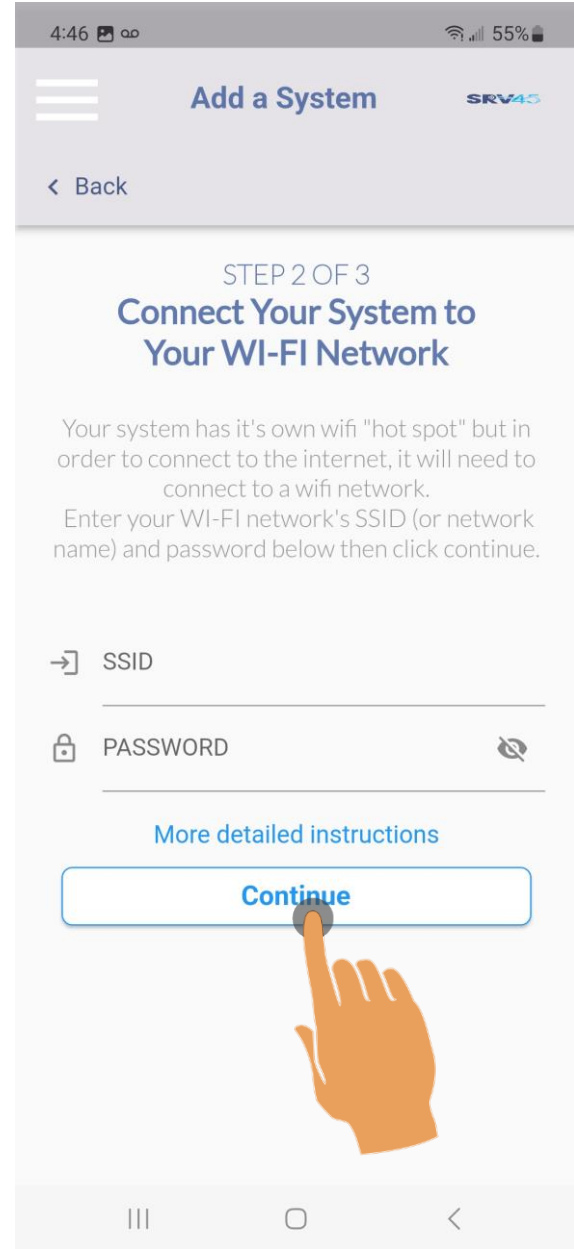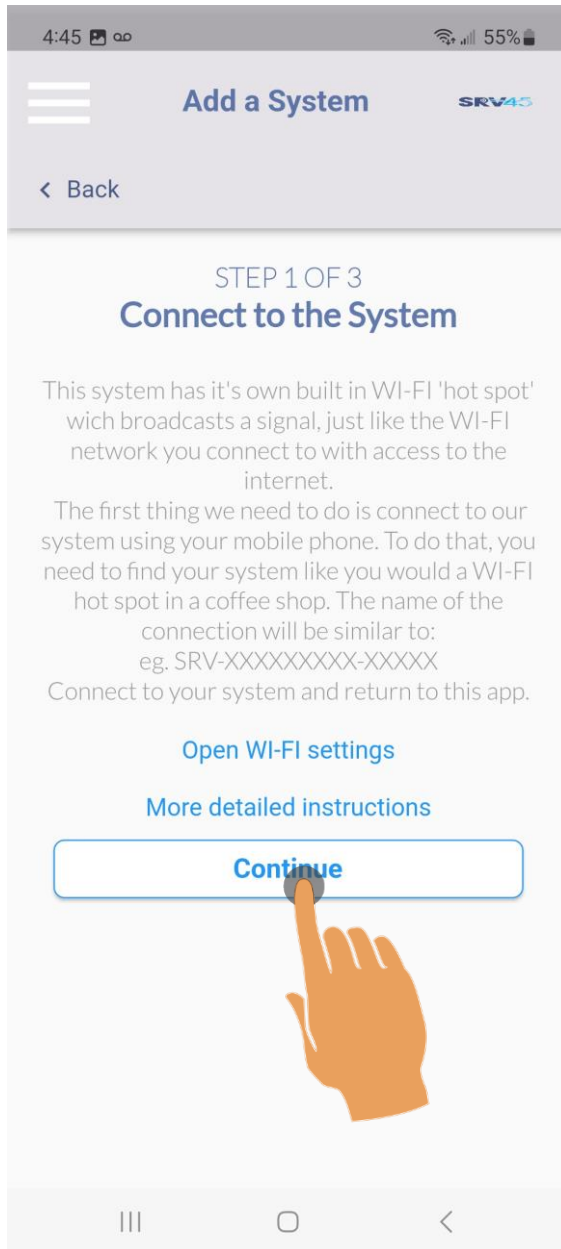

Once connected to the Wi-Fi network of your Hybrid200 unit, return to the app to continue the setup steps.

Step 5:
Tap "Continue"

Step 6 :
Enter your Wi-Fi SSID and password.
Tap "Continue"

How to add your system

4:47 55%

☰ Add a System SRV45

< Back

STEP 2 OF 3

Connect Your System to Your WI-FI Network

Your system has it's own wifi "hot spot" but in order to connect to the internet, it will need to connect to a wifi network.

Enter your WI-FI network's SSID (or network name) and password below then click continue.

SSID
→ Clairitech-wifi

PASSWORD
.....

[More detailed instructions](#)

Continue

Please wait few seconds !

Step 6:
Wait while the system is being added.

11:13 55%

☰ Add a System SRV45

< Back

STEP 2 OF 3

Connect Your System to Your WI-FI Network

Your system has it's own wifi "hot spot" but in order to connect to the internet, it will need to connect to a wifi network.

Enter your WI-FI network's SSID (or network name) and password below then click continue.

SSID
→ Clairitech-wifi

PASSWORD
.....

 
[More detailed instructions](#)

Continue

Searching for devices...

Step 7:
Your system has been successfully added.

How to add your system

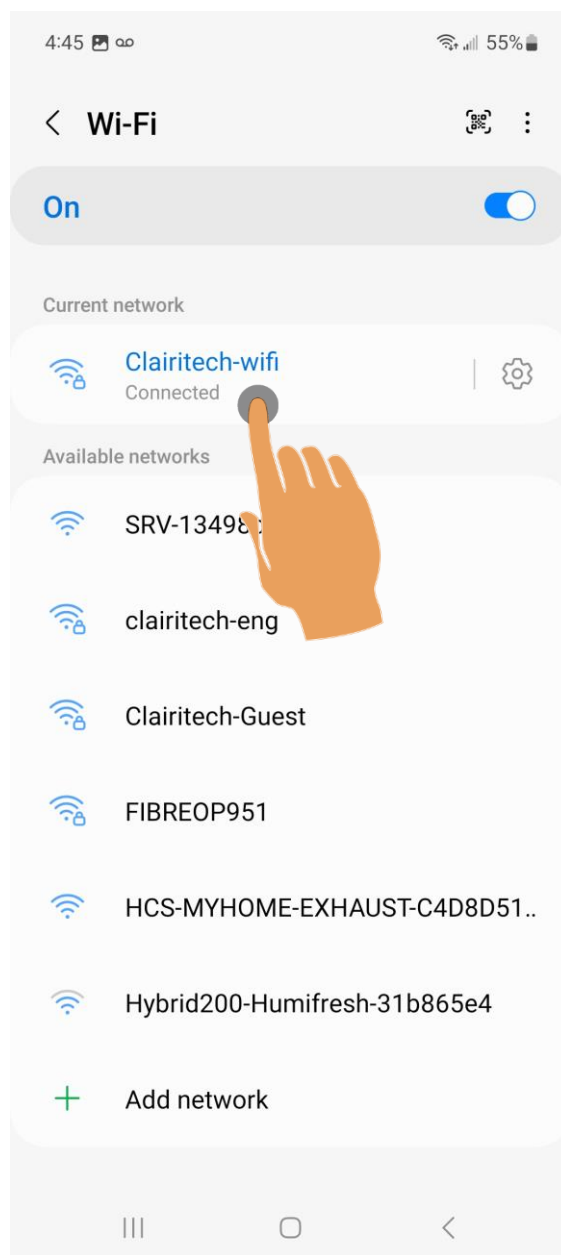

Once your system is connected, you need to reconnect to your home Wi-Fi network.

Step 7:

Tap " Open Wi-Fi settings "

Step 8:

Select your home Wi-Fi

How to add your system

4:55 54%

Add a System SRV45

< Back

STEP 3 OF 3
Choose Your System Settings

For accurate data, please enter the physical address where the system is installed.

SELECT COUNTRY Canada ▾

Continue

Step 8:
You may select your country
Tap "Continue"

4:55 54%

Add a System SRV45

< Back

STEP 3 OF 3
Choose Your System Settings

For accurate data, please enter the physical address where the system is installed.

ADDRESS

CITY

 
State/Province
Select State ▾

ZIP CODE


Continue

Step 9:
Enter your address
Tap "Continue"

How to add your system

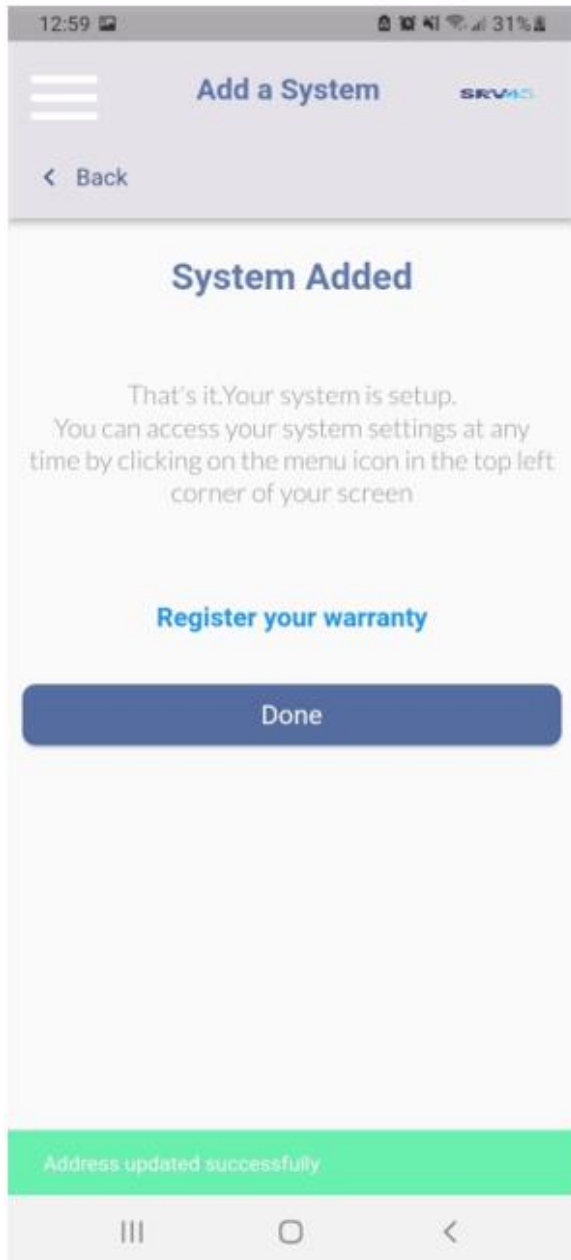


 Step 10:
Your address successfully
added.

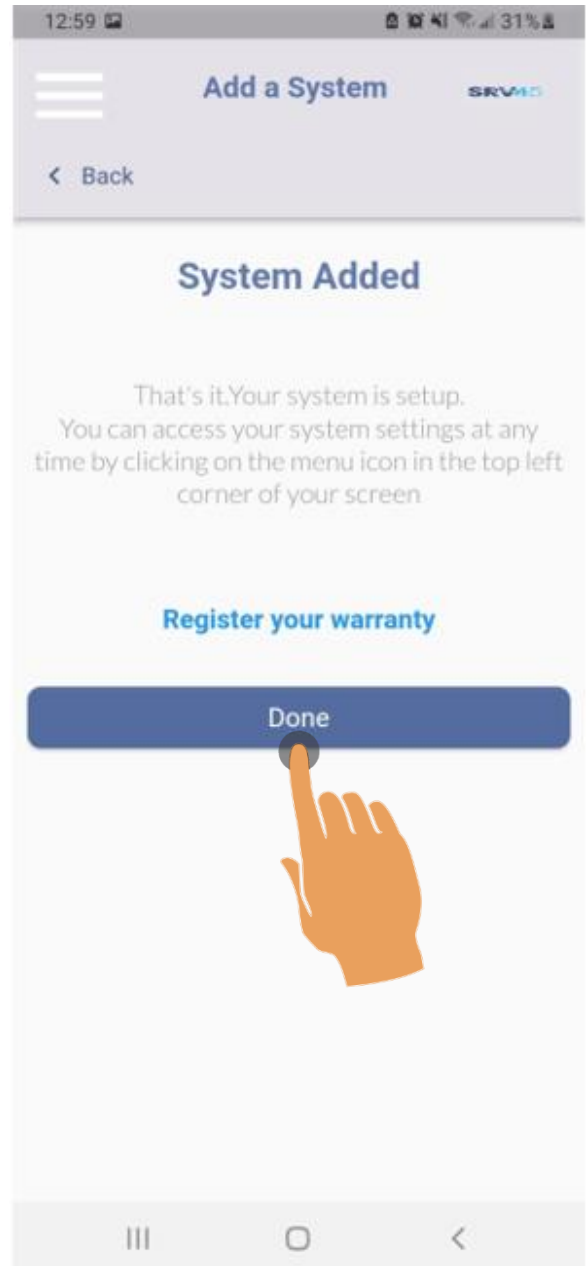


Step 11:
Tap "Done"

 How to add your system

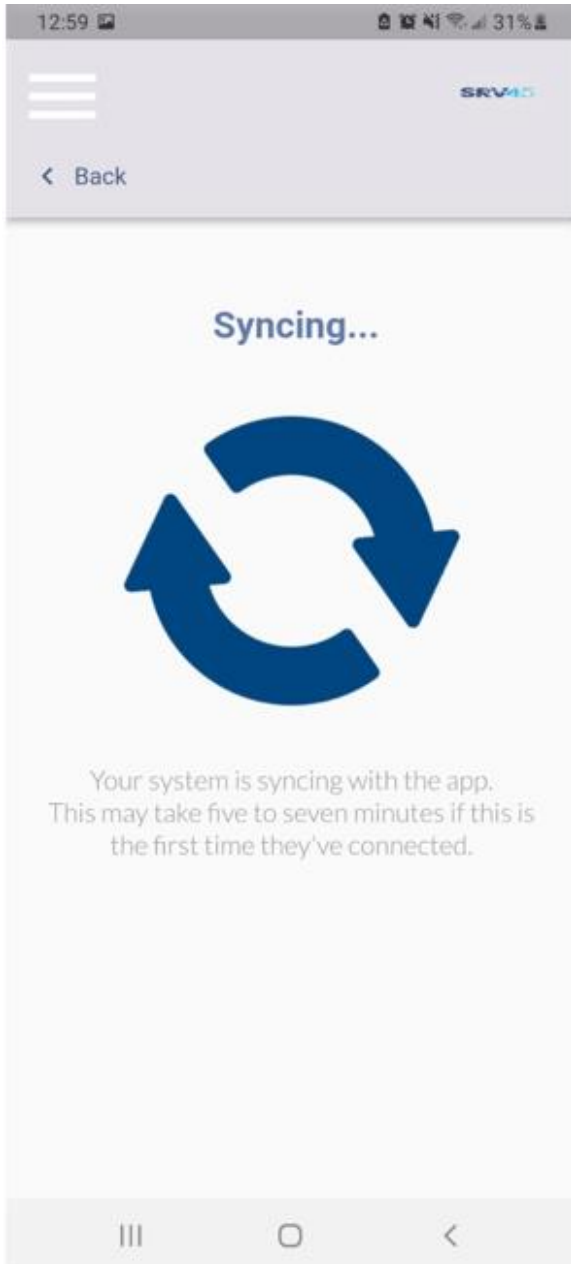


 Step 12:
Your Humifresh is syncing with the SRV45 App.

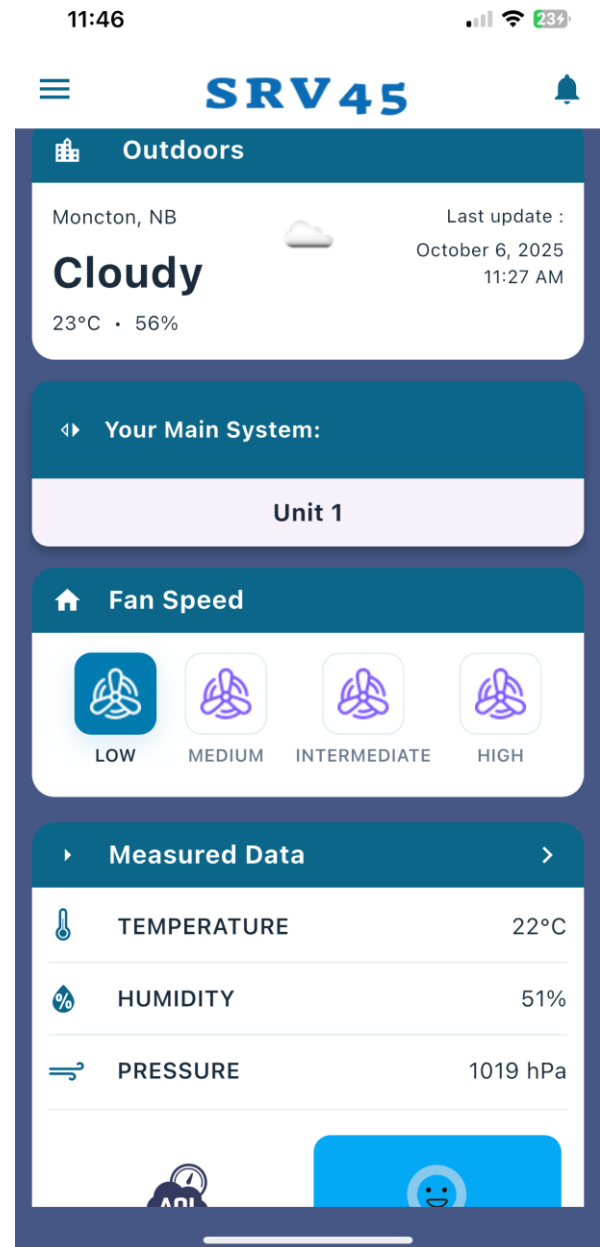


Step 13:
Every 30 minutes, new SRV data will be displayed, and the outdoors temperature and humidity will be displayed

 How to add your system using the menu

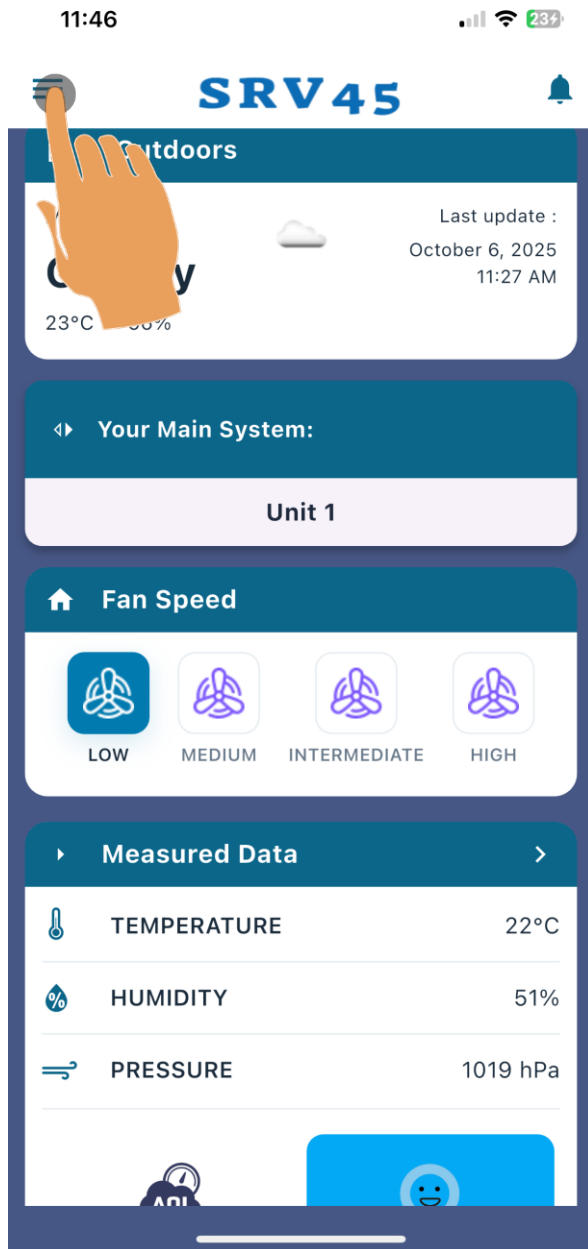


 Step 1:
Tap the menu icon

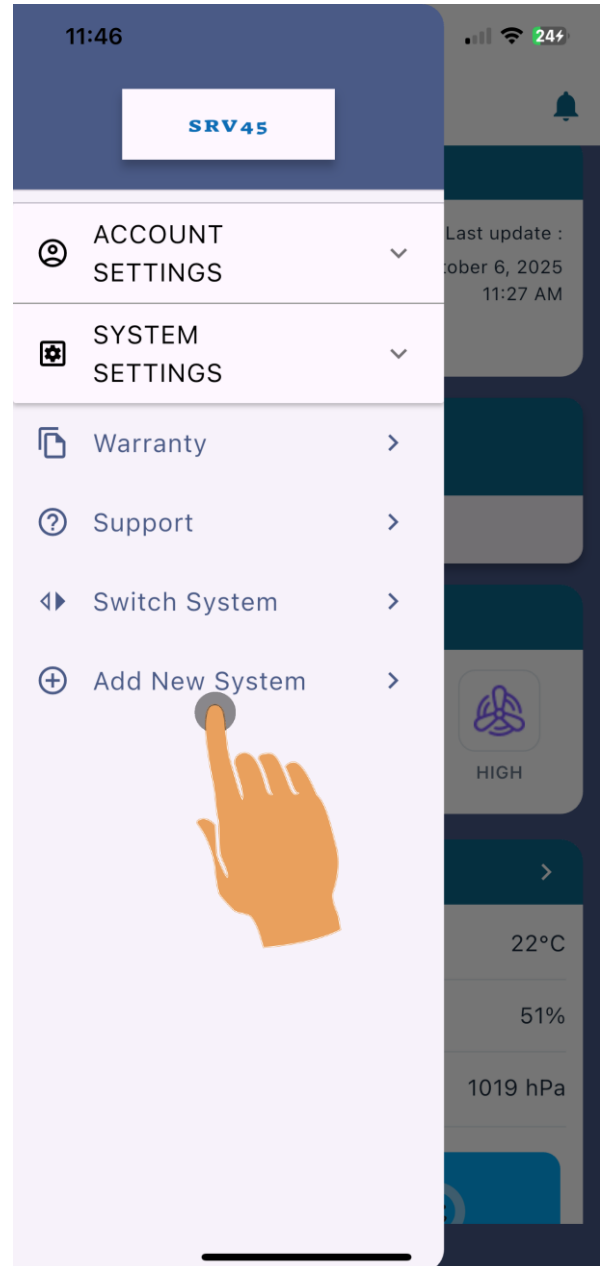


Step 2:
Tap "Add New System"

 How to change the temperature unit (Fahrenheit to Celsius)

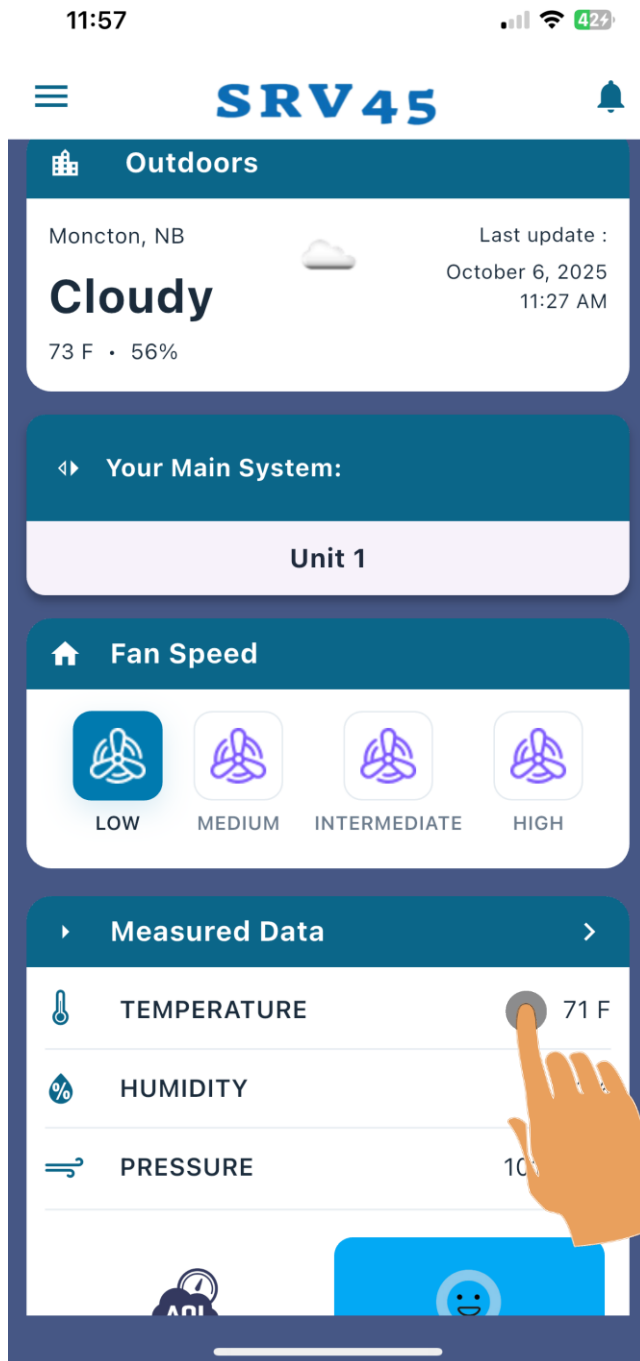


Step 1:
To change the temperature
(from Fahrenheit to Celsius)
Click on the temperature value

 How to change the maximum fan speed

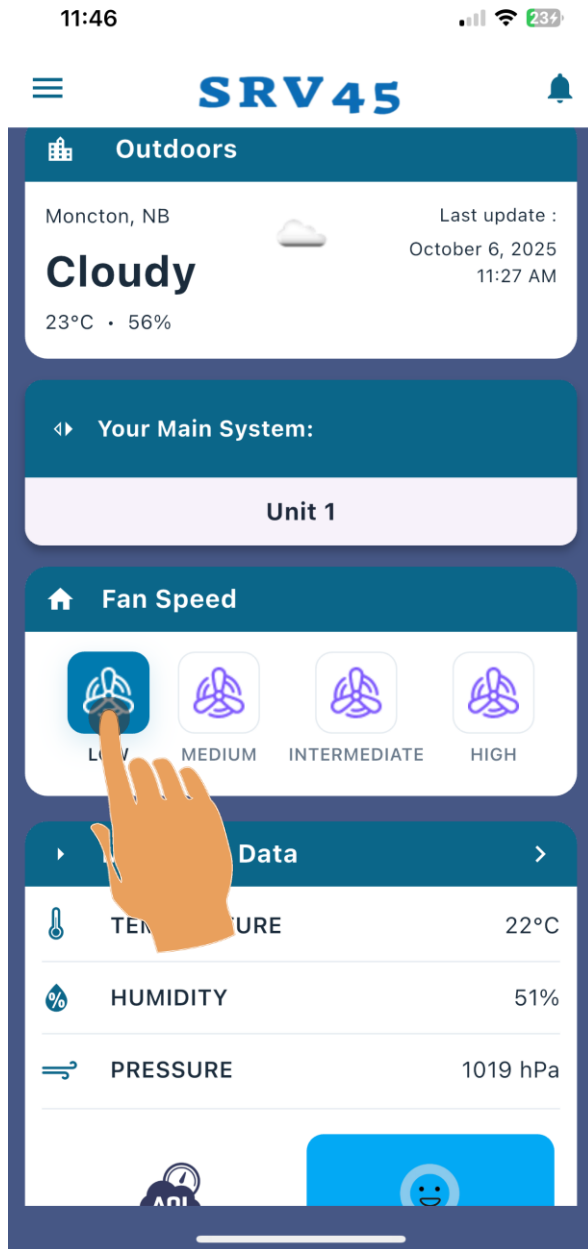


 Step 1:
Tap the fans

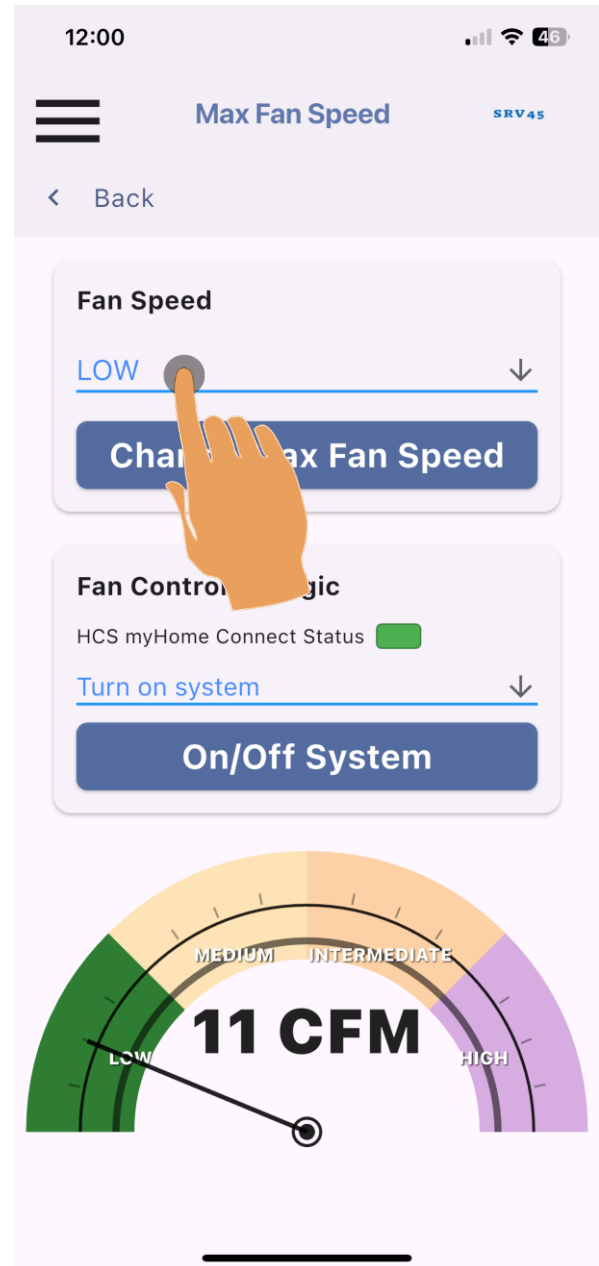


Step 2:
Tap "LOW" for available fan speeds.

 How to change the maximum fan speed

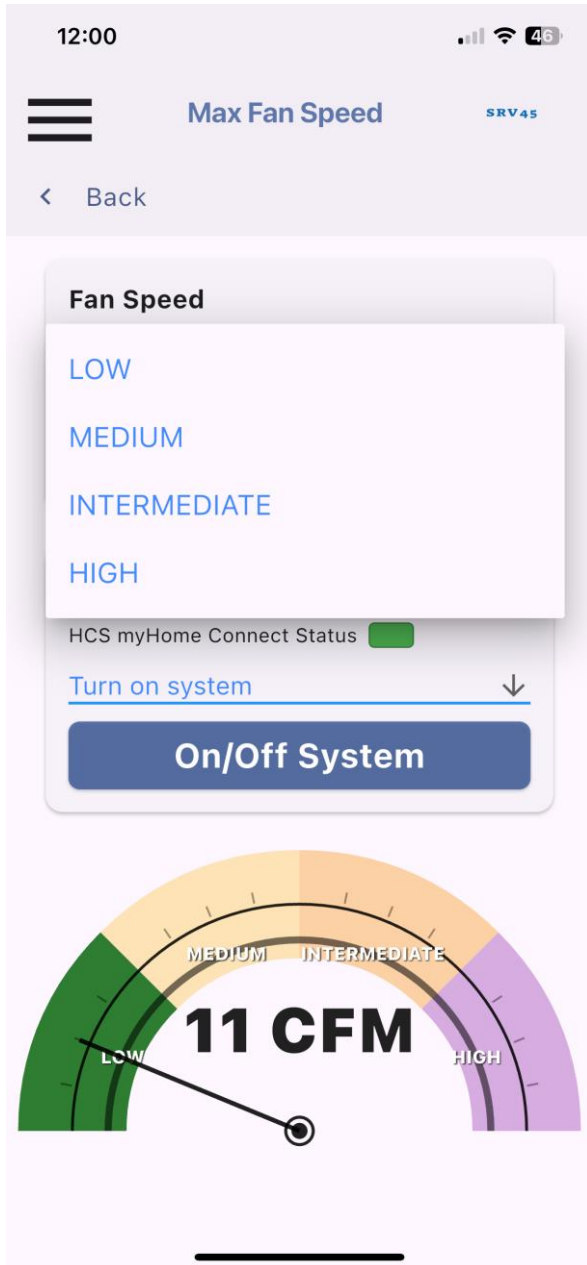


 Step 3:
Tap the desired speed

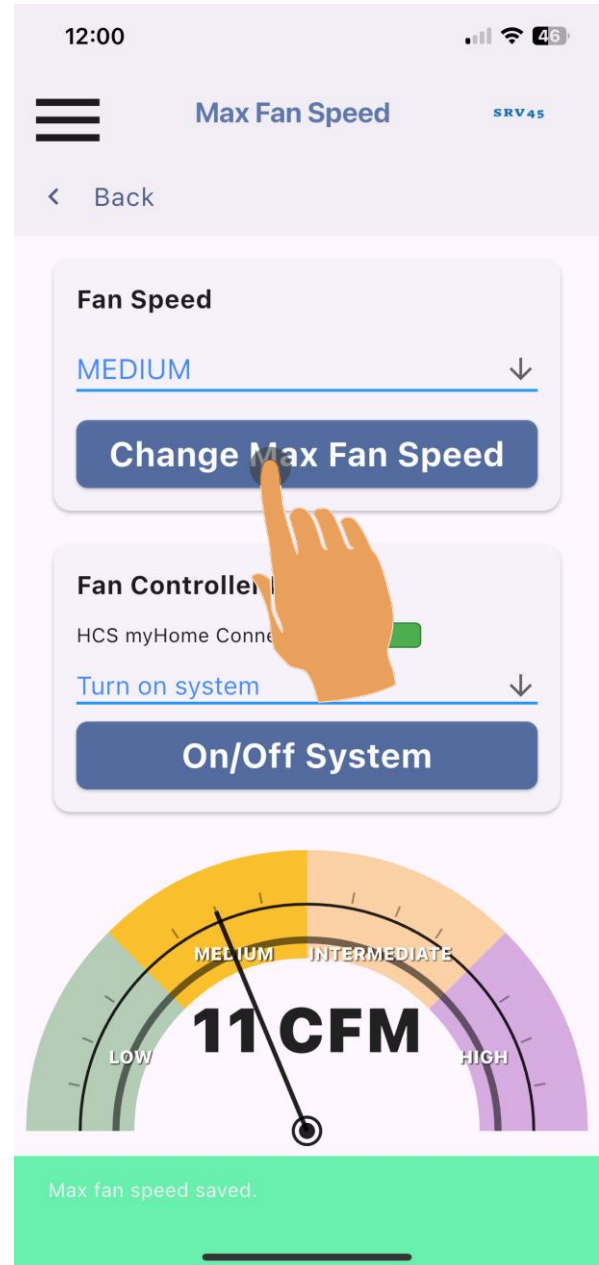


Step 4:
Once the preferred Max
Fan Speed is selected
Tap "Change Max Fan Speed"

 How to change the maximum fan speed using the menu

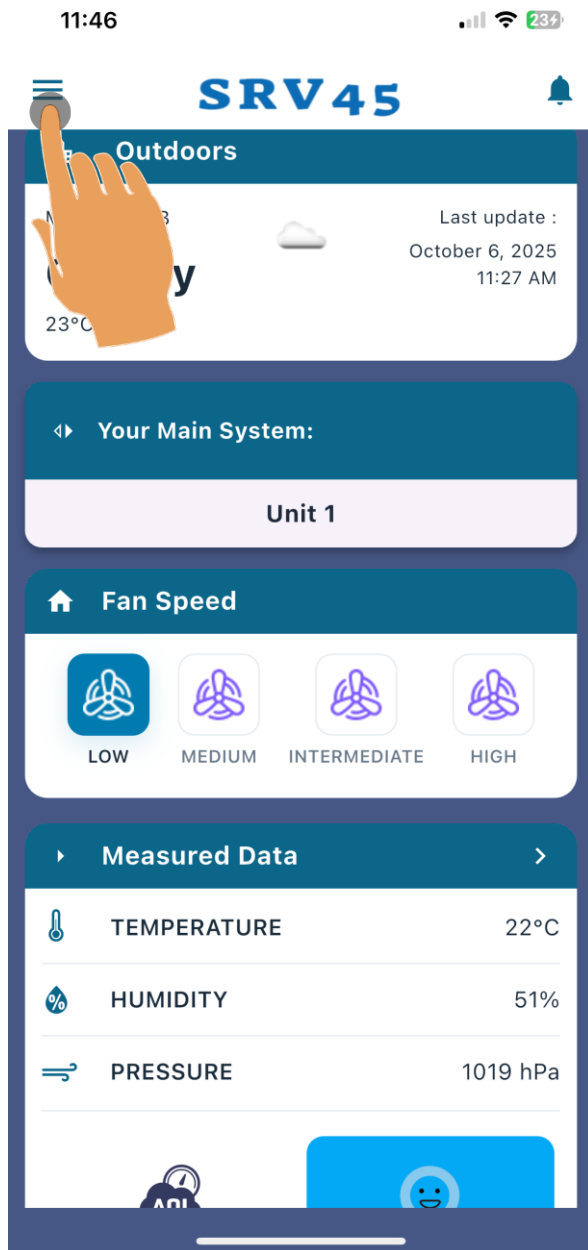


 Step 1:
Tap the menu icon

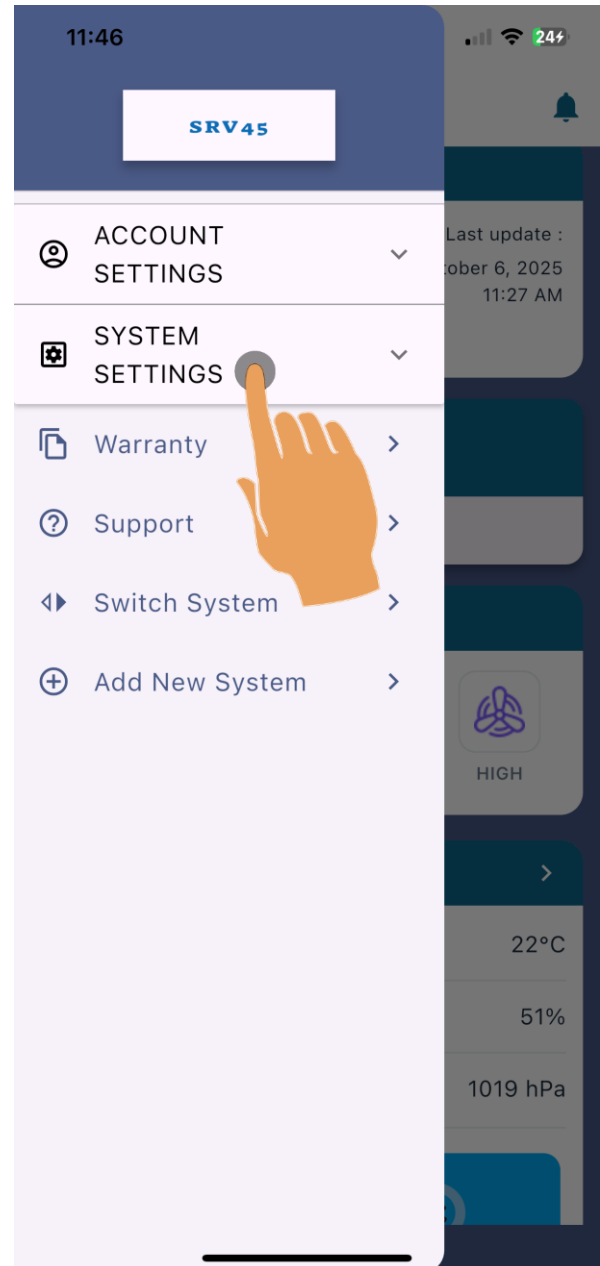


Step 2:
Tap "SYSTEM SETTINGS"

 How to change the maximum fan speed using the menu

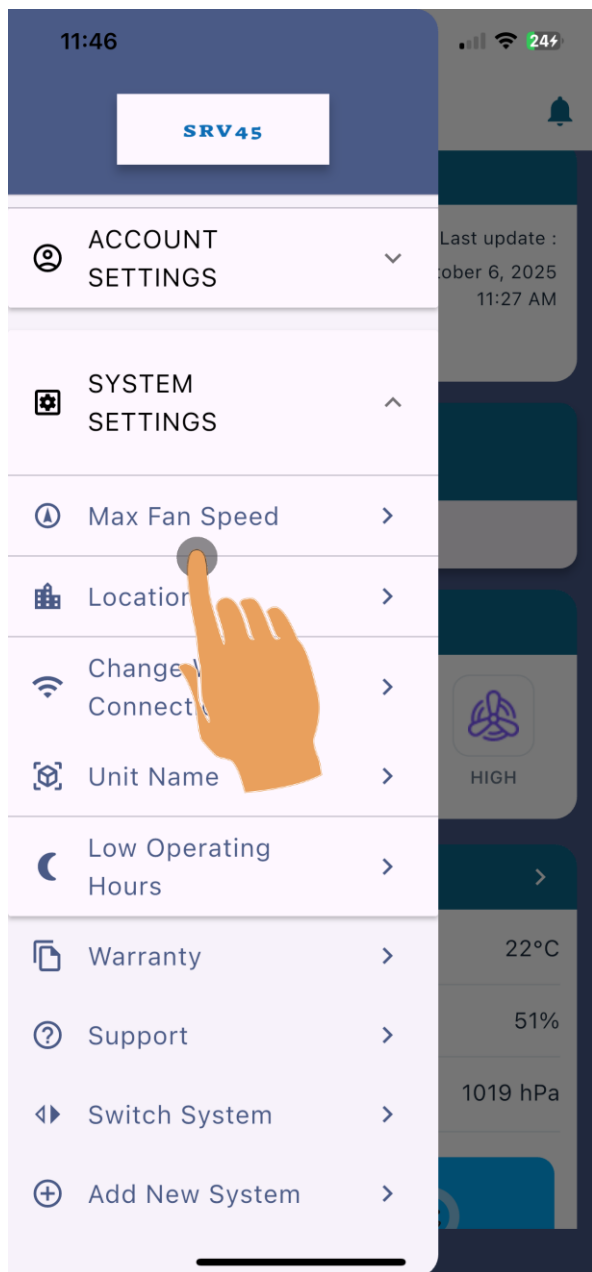


 Step 3:
Tap "Max Fan Speed"

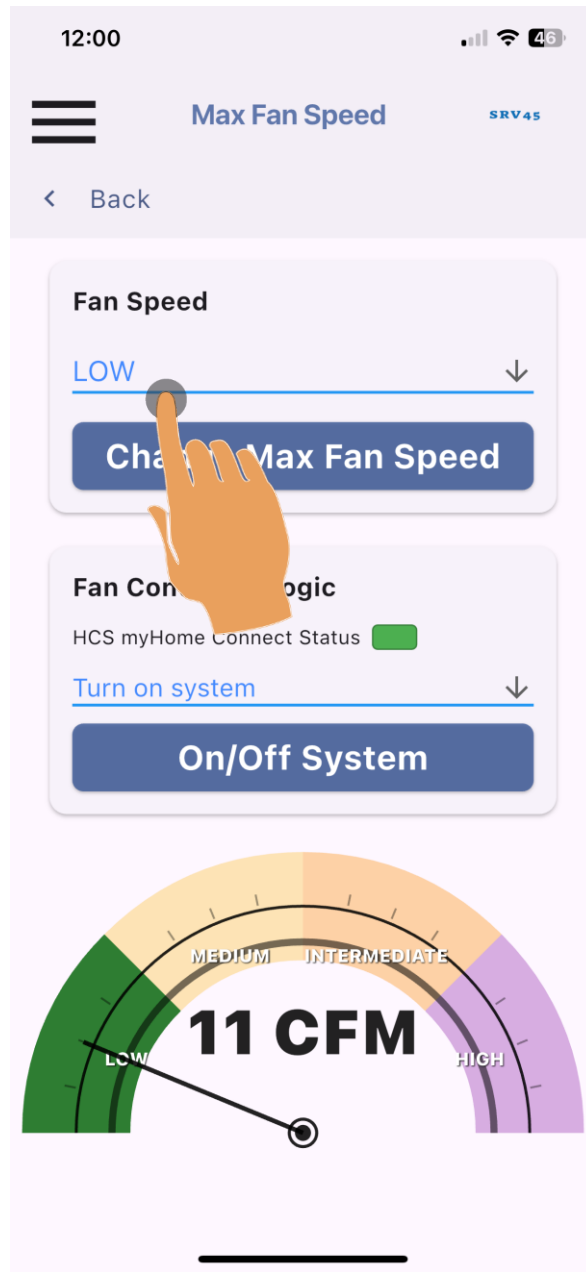


Step 4:
Tap "LOW" for available fan speeds.

 How to change the maximum fan speed using the menu

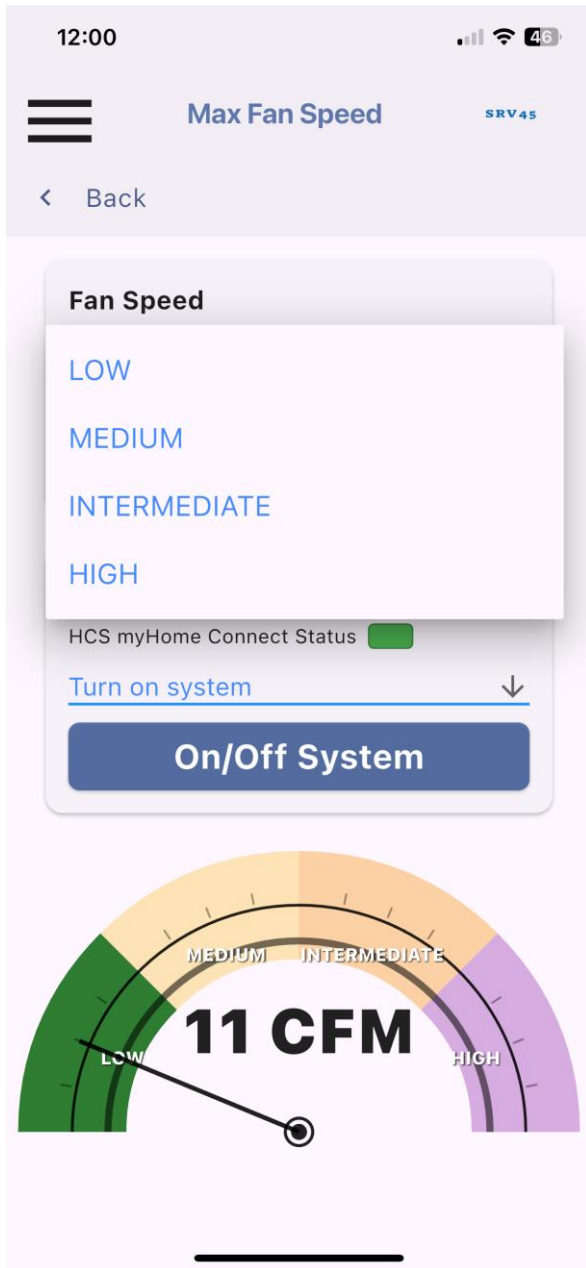


 Step 5:
Tap the desired speed

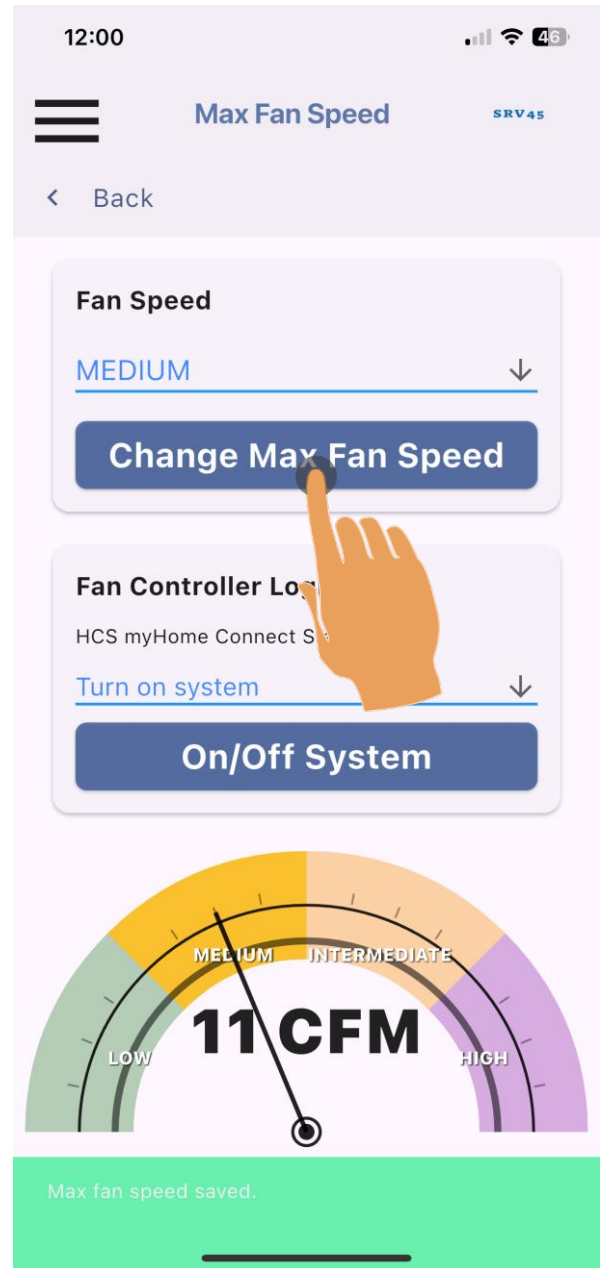


Step 6:
Once the preferred Max
Fan Speed is selected
Tap "Change Max Fan Speed"

 How to Turn On/off Your System

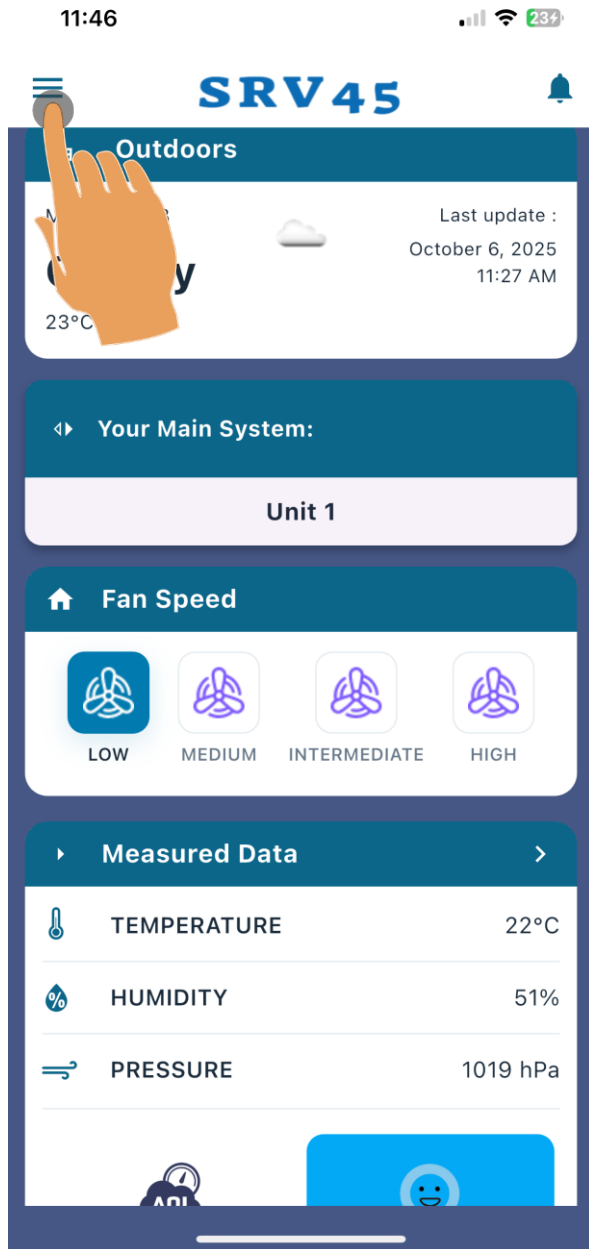


 Step 1:
Tap the menu icon

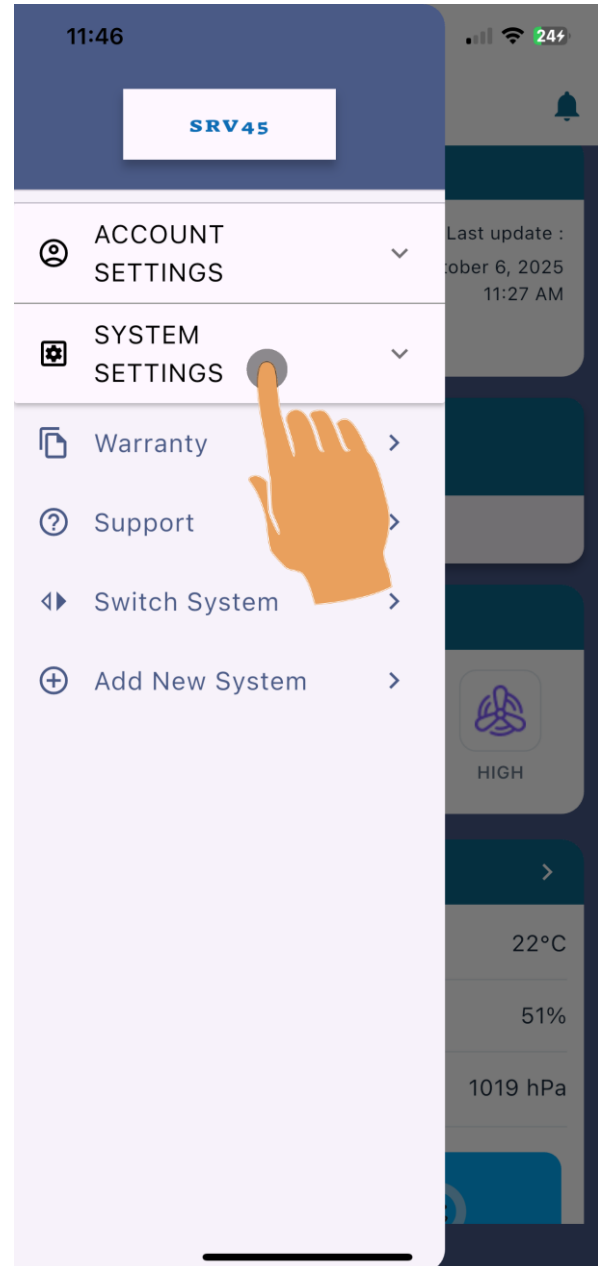


Step 2:
Tap "SYSTEM SETTINGS"

 How to Turn On/off Your System

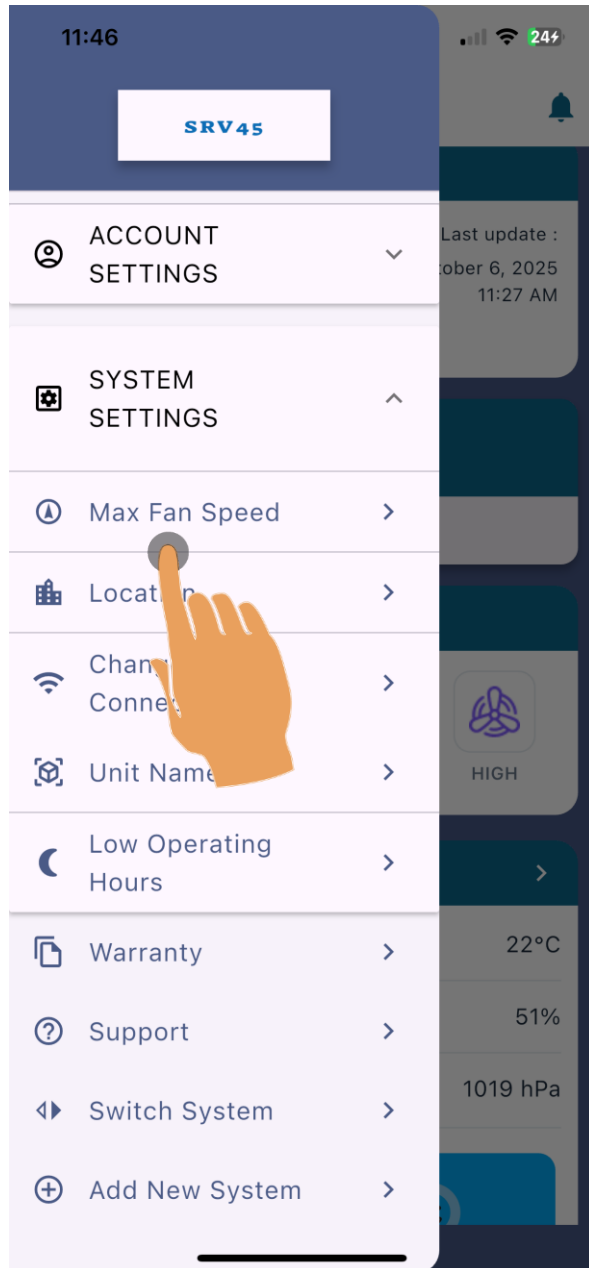


 Step 3:
Tap "Max Fan Speed"

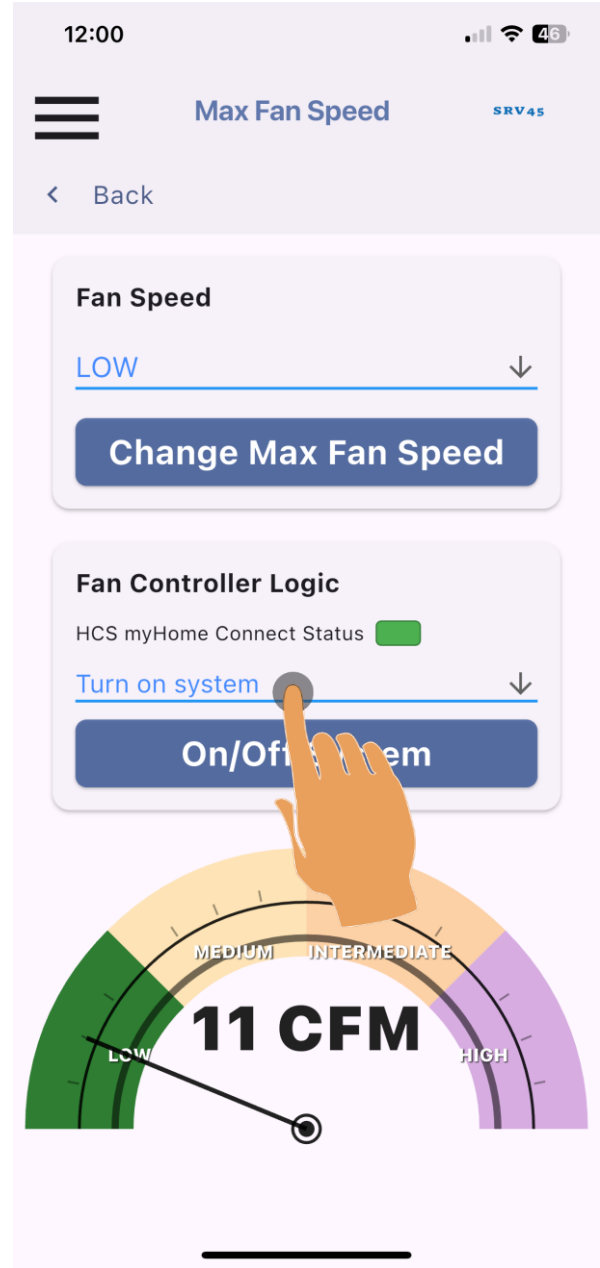


Step 4:
Tap "Turn on system"

 How to Turn On/off Your System

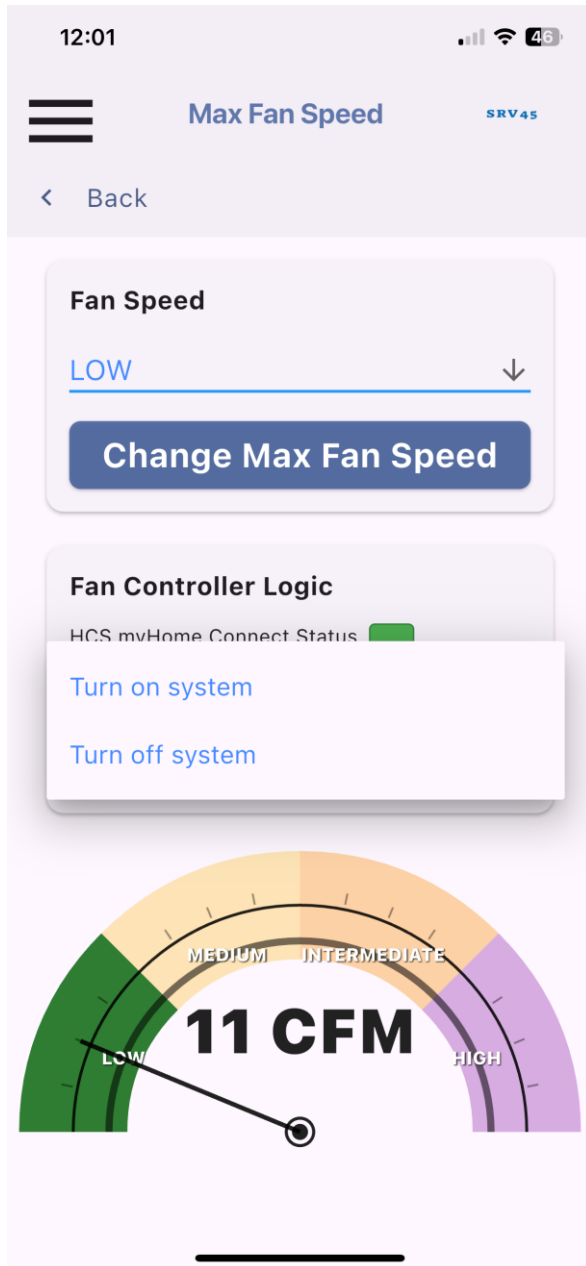


 Step 3:
Select the desired mode

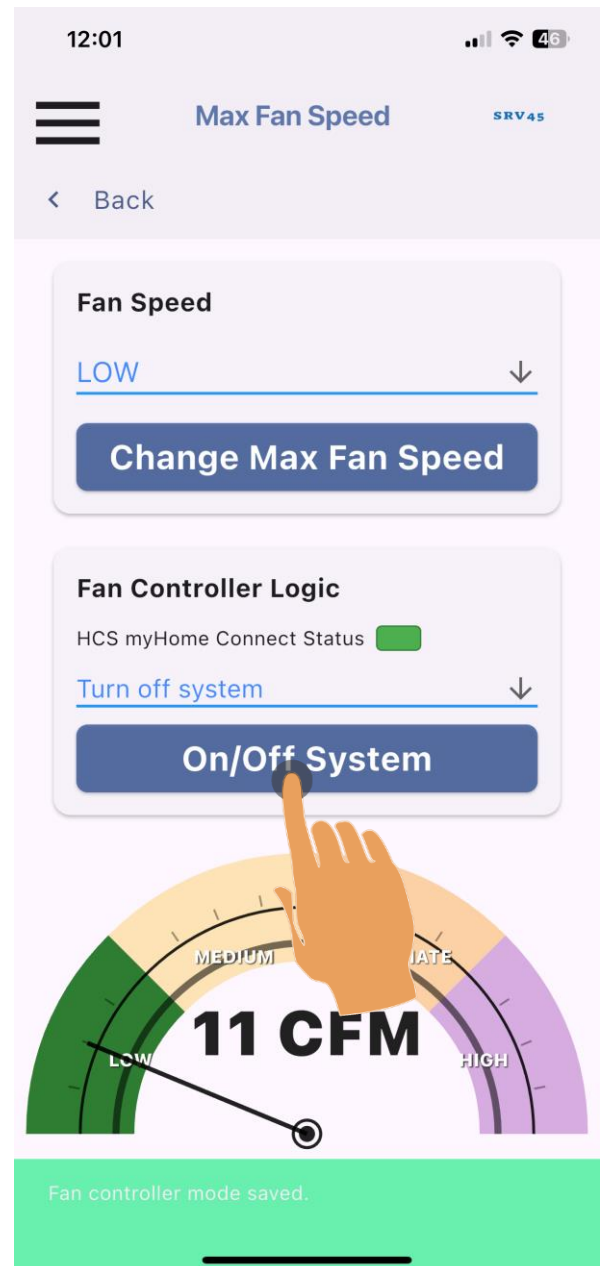


Step 4:
Tap "On/Off System".
Your fan controller mode was
successfully saved.

 How to access your unit's data history

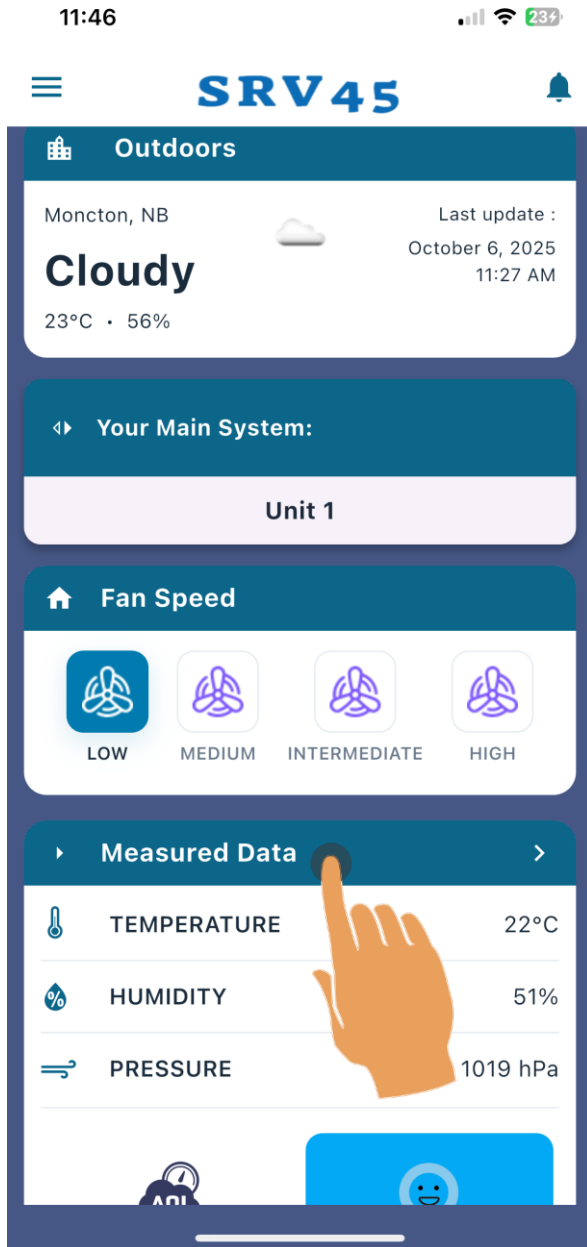


 Step 1:
Tap "Measured Data"

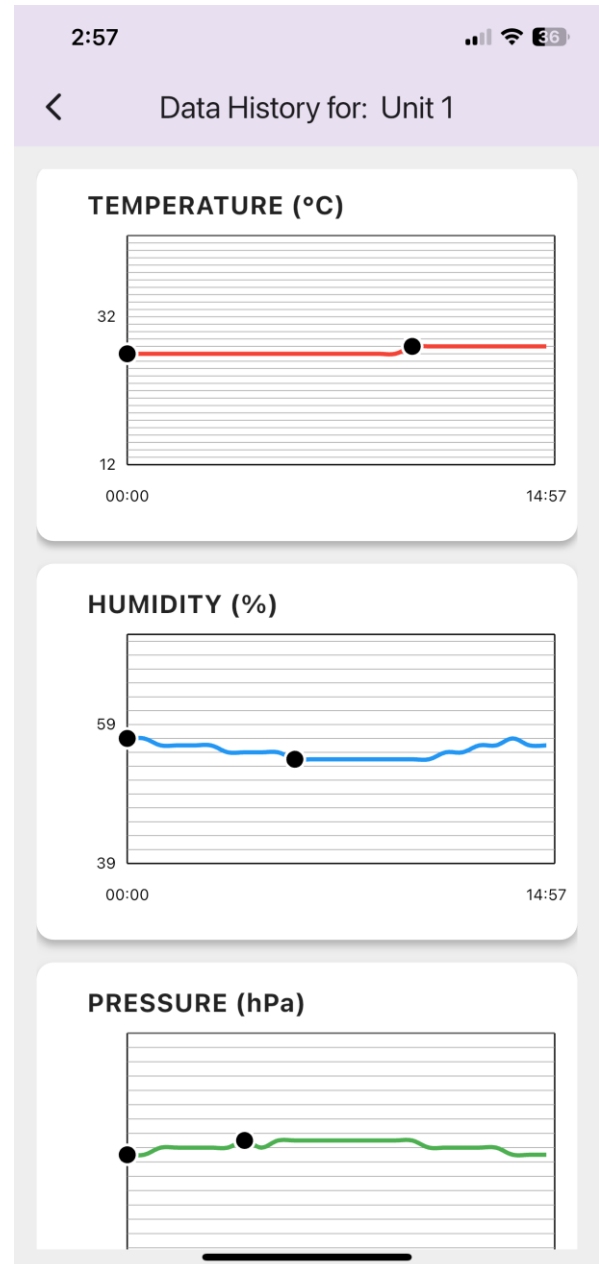


Step 2:
Daily display of measured data

 How to change your password using the menu

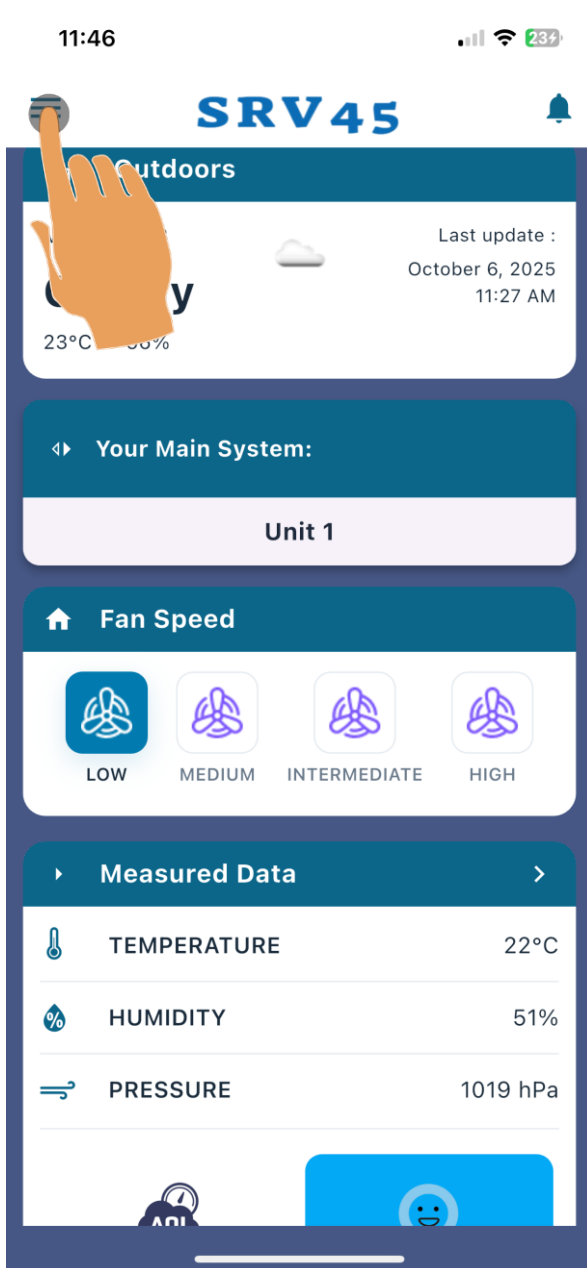


 Step 1:
Tap the menu icon

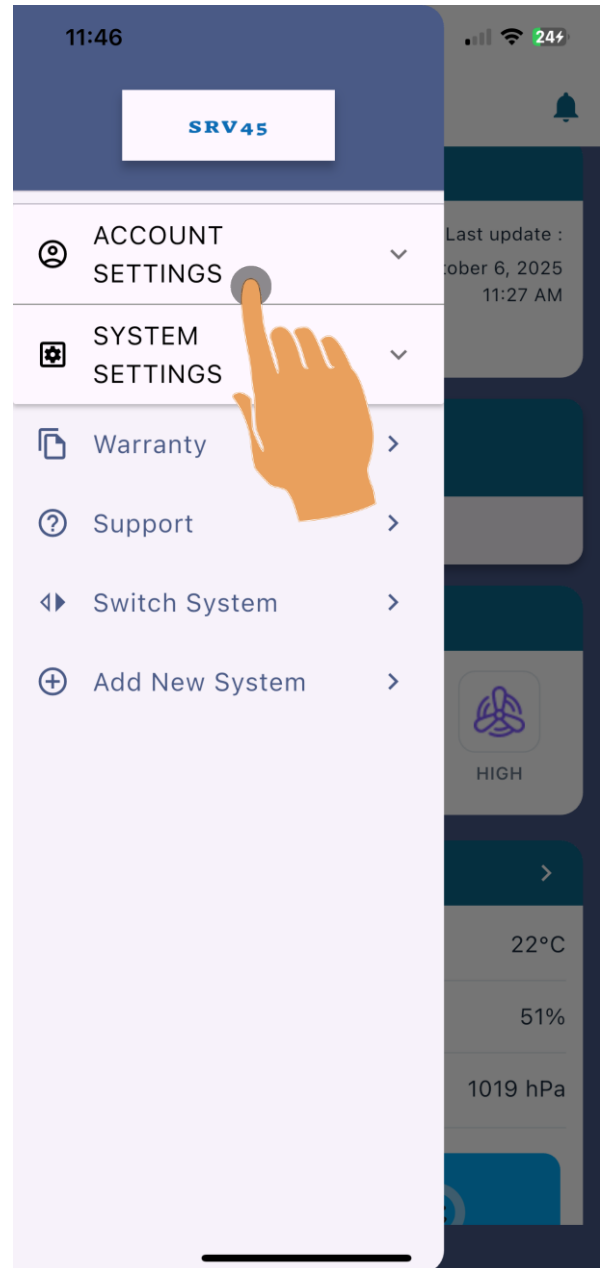


Step 2:
Tap "Account Settings"

 How to change your password using the menu

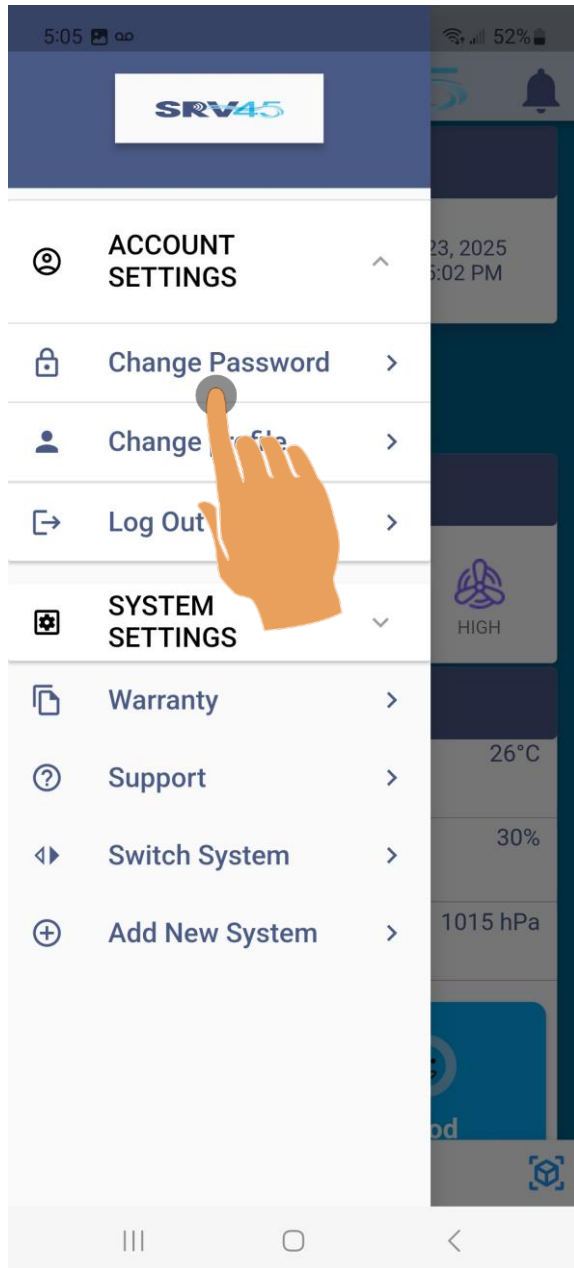


 Step 3:
Tap "Change Password"

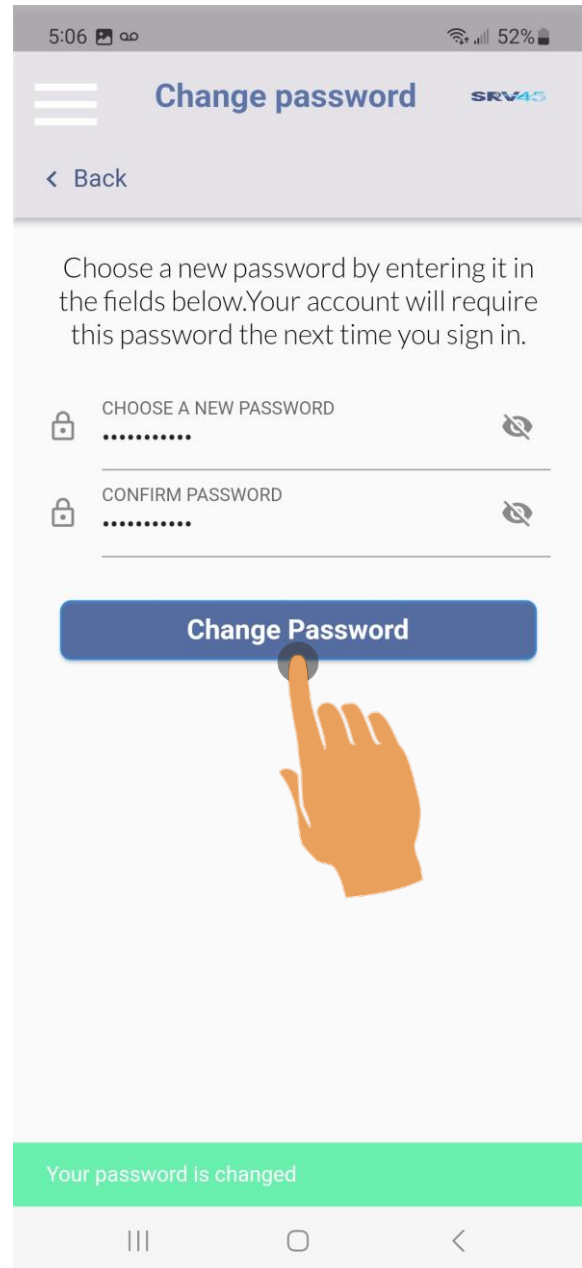


Step 4:
Enter your new password
Tap "Change Password"

 How to add or update your personal information

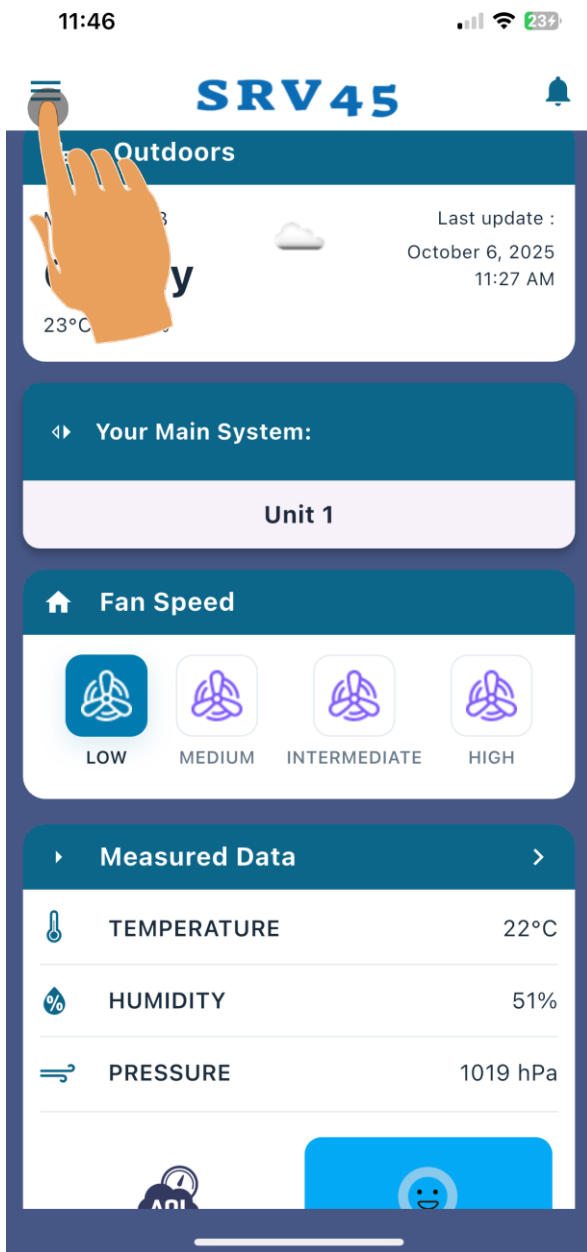


 Step 1:
Tap the menu icon

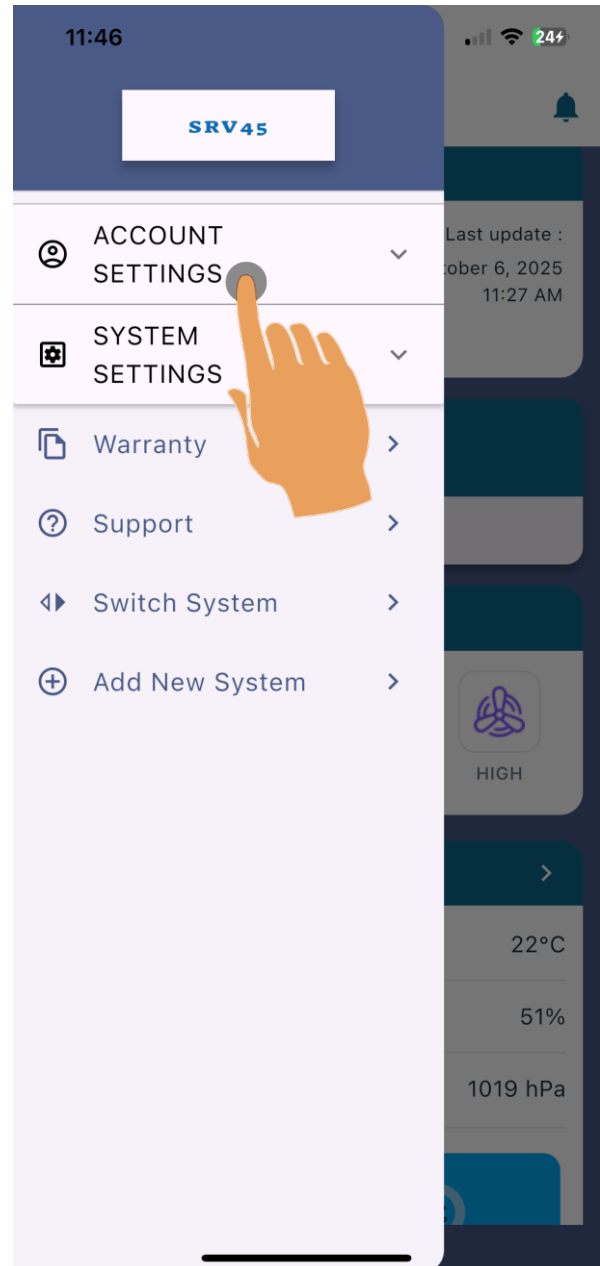


Step 2:
Tap "Account Settings"

 How to add or update your personal information

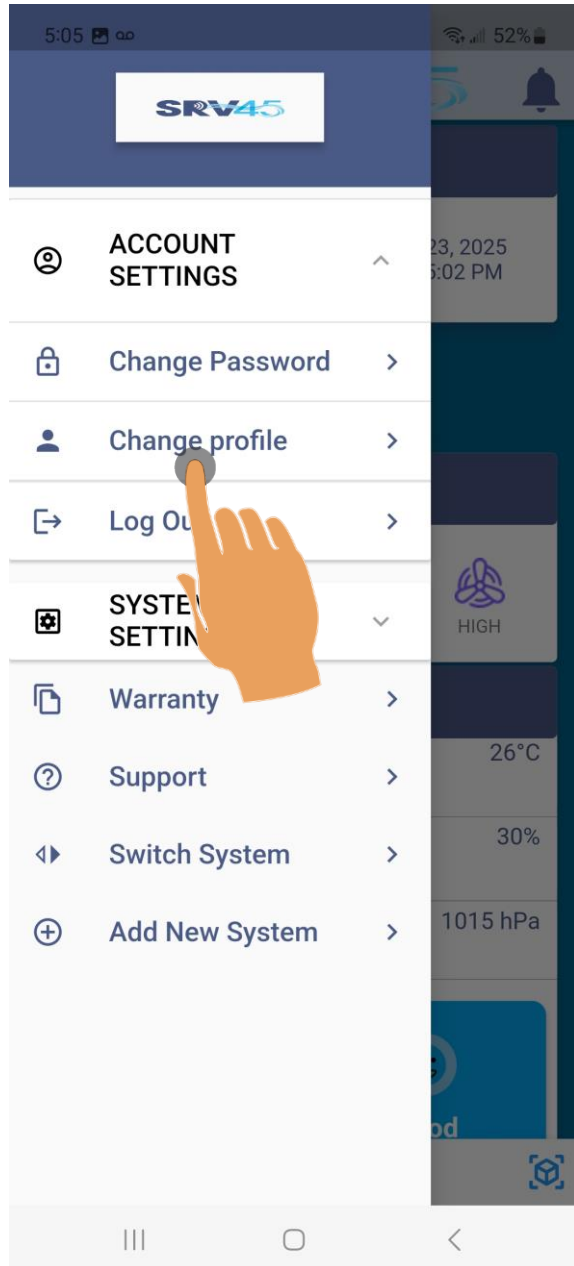


 Step 3:
Tap "Change Profile"

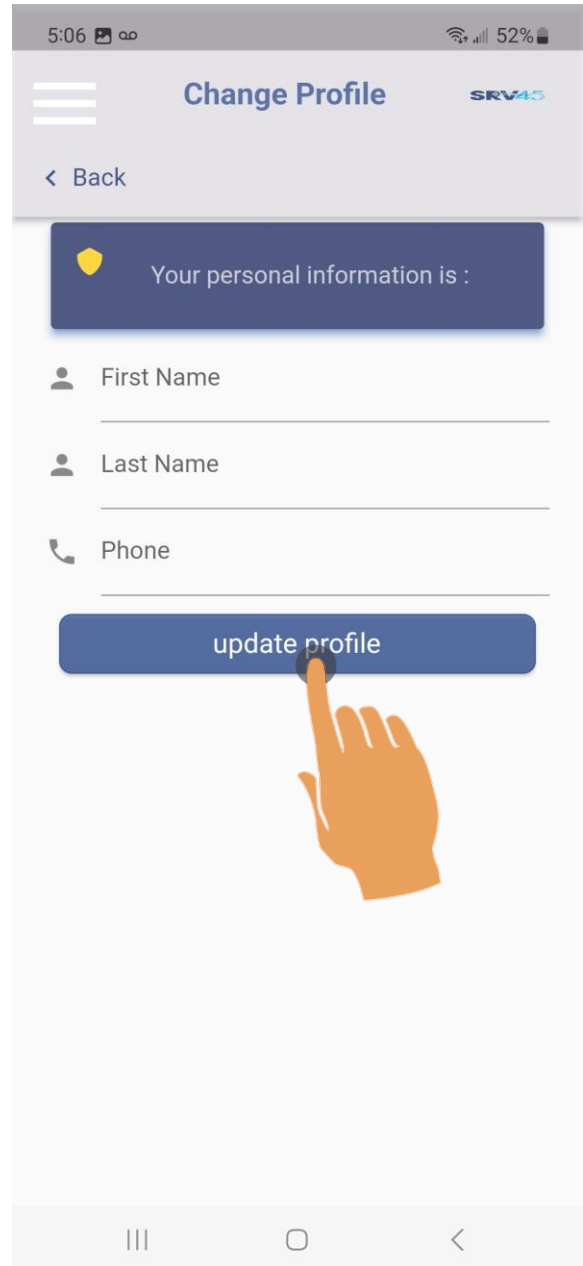


Step 4:
Enter your personal information
Tap "update profile"

 How to log out from the App

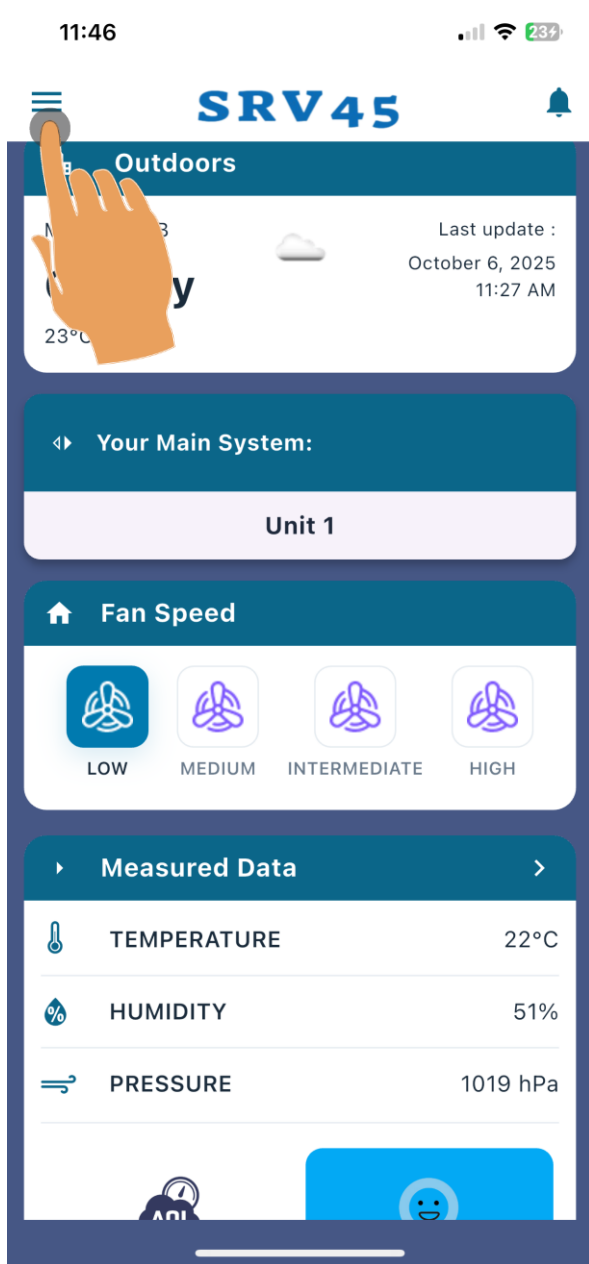


 Step 1:
Tap the menu icon

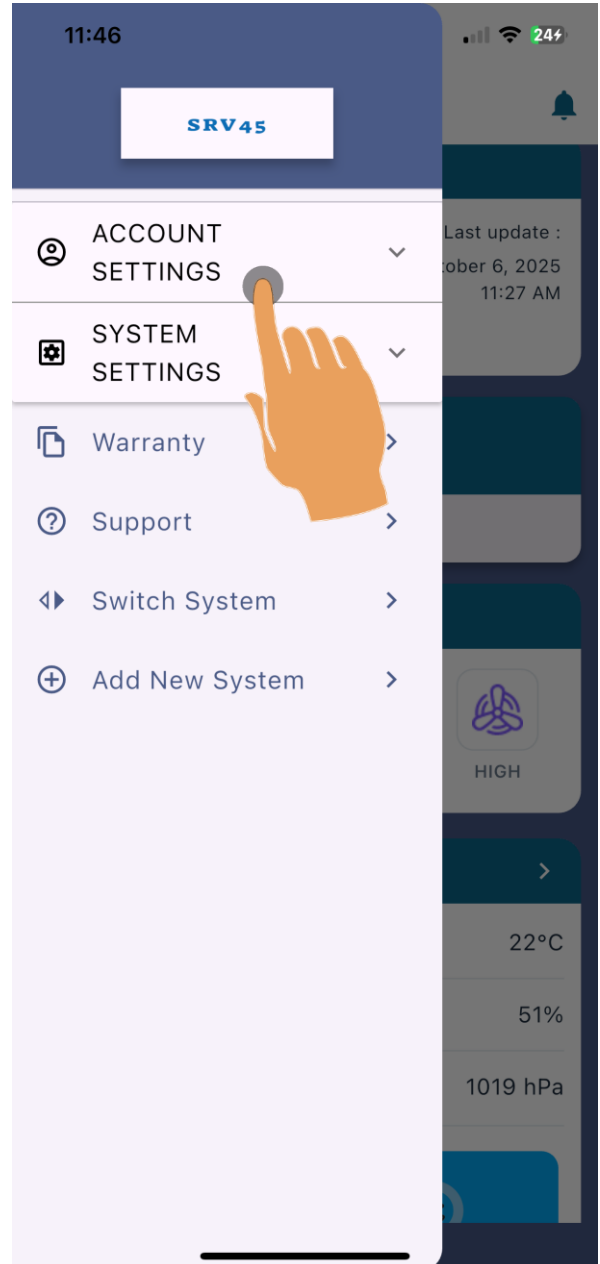


Step 2:
Tap "Account Settings"

 How to log out from the App

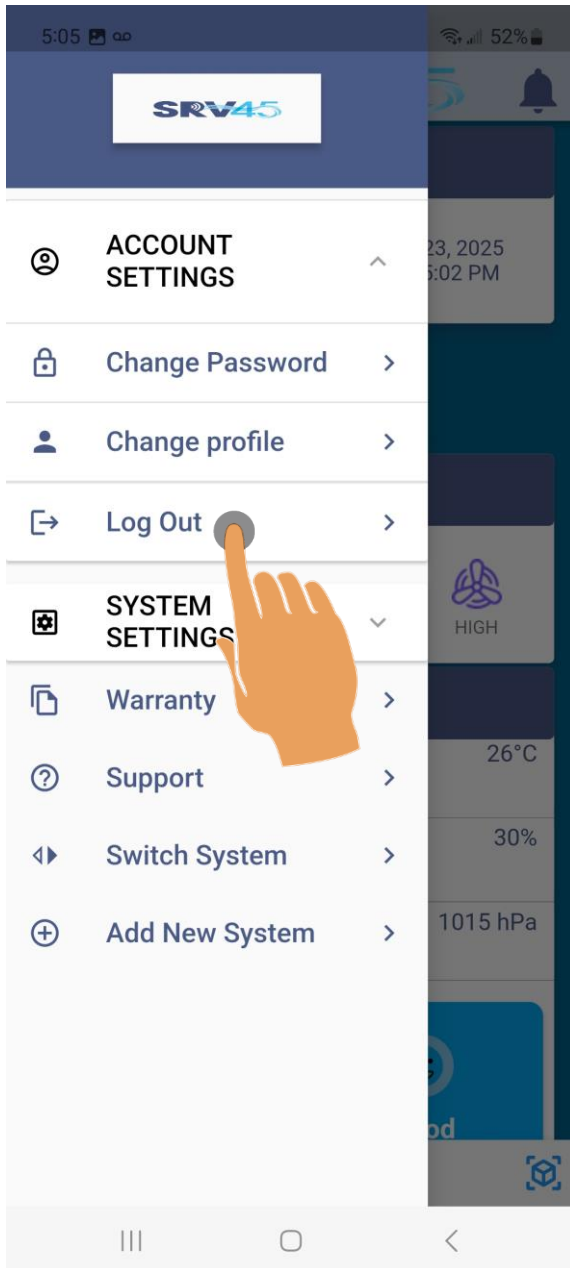


 Step 3:
Tap "Log Out"

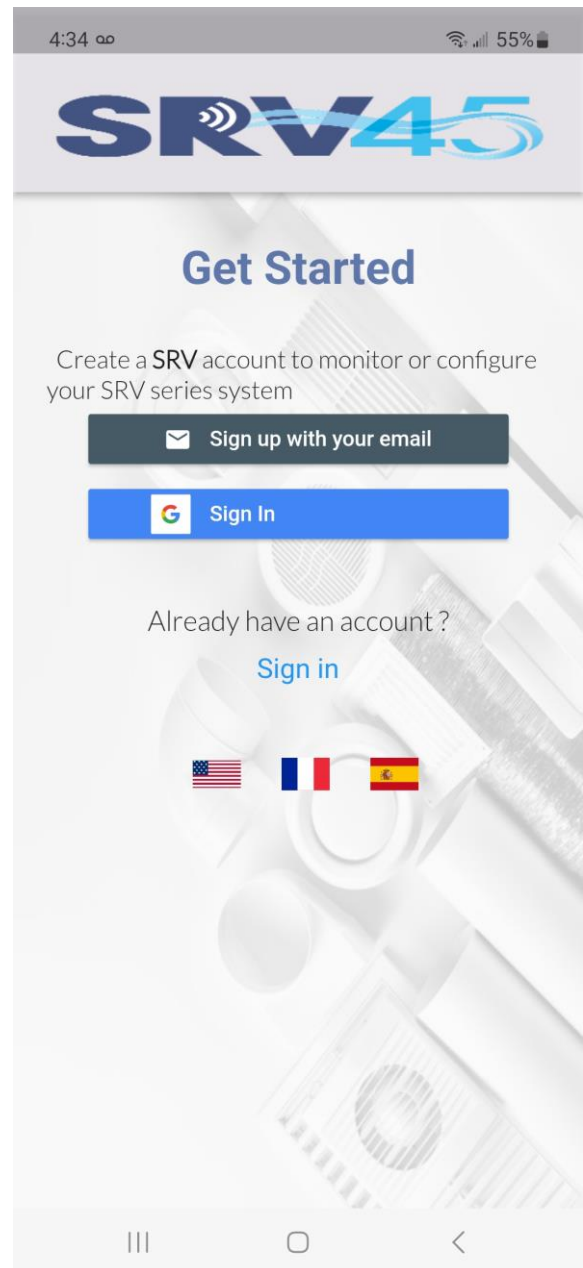


Step 4:
You have successfully Logged Out.

 How to change your system location

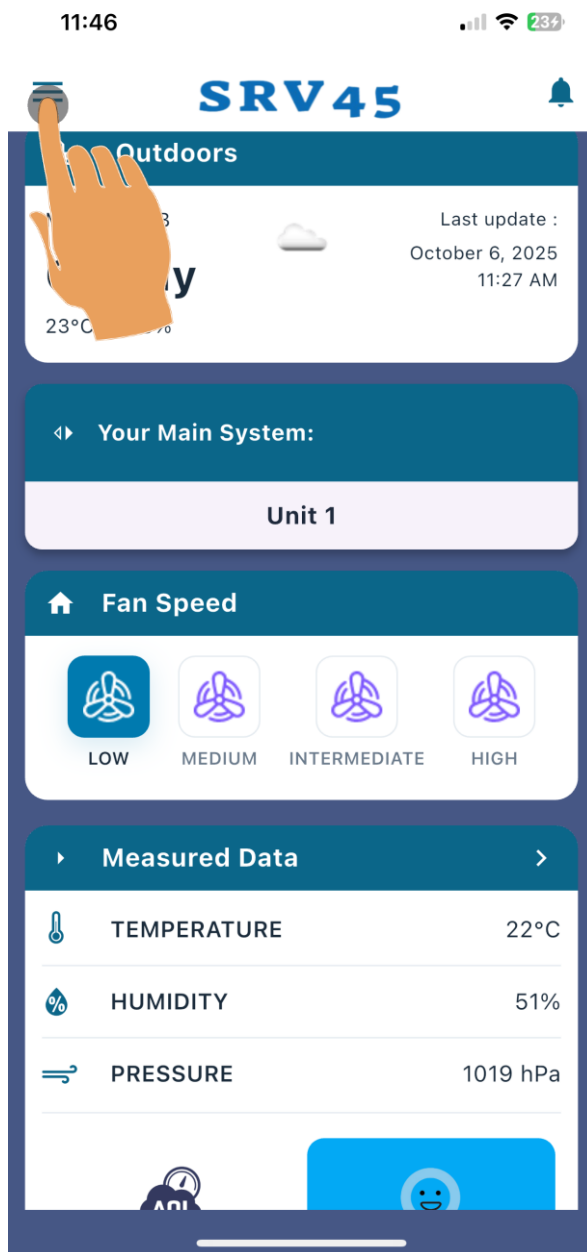


 Step 1:
Tap the menu icon

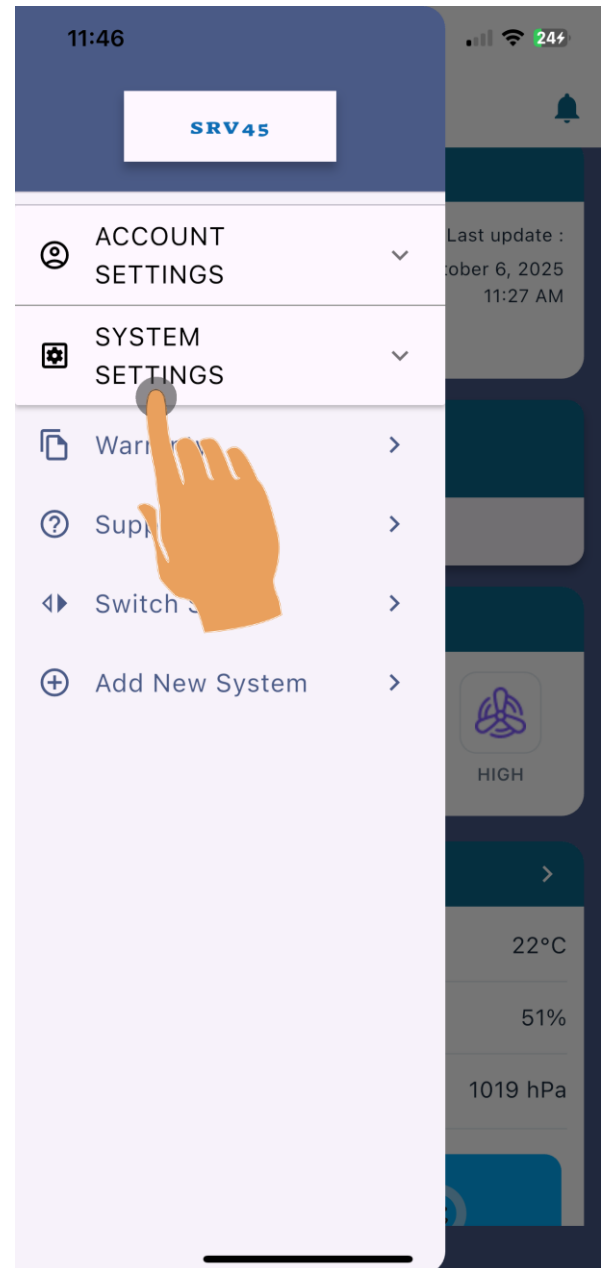


Step 2:
Tap "System Settings"

 How to change your system location

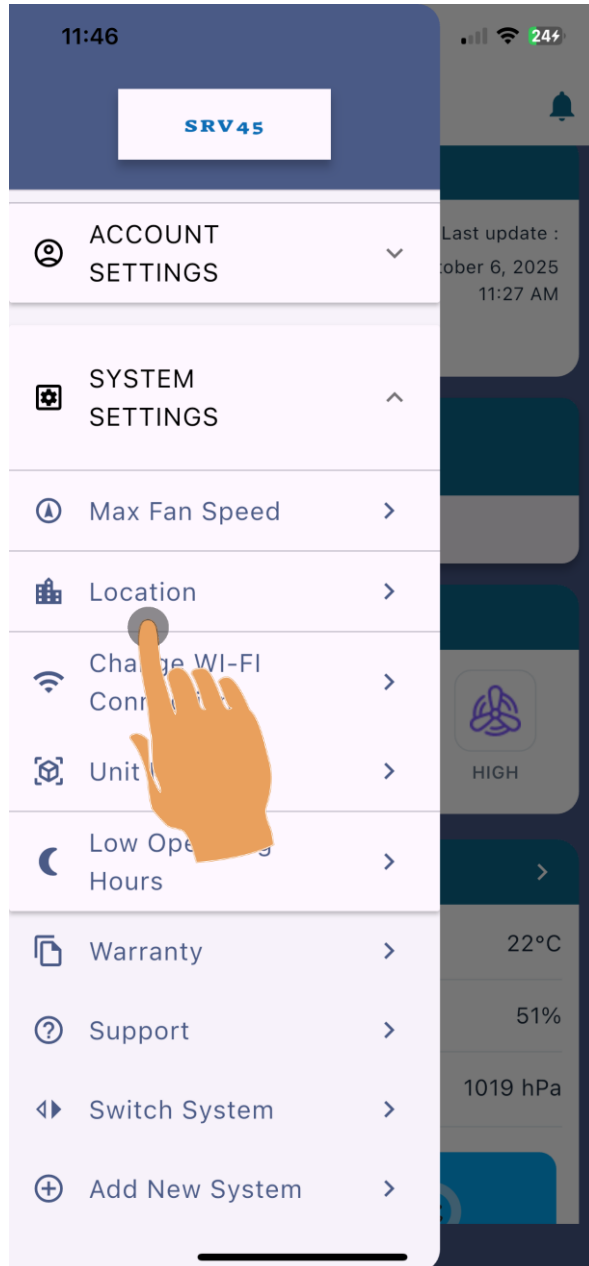

 Step 3:
Tap "Location"

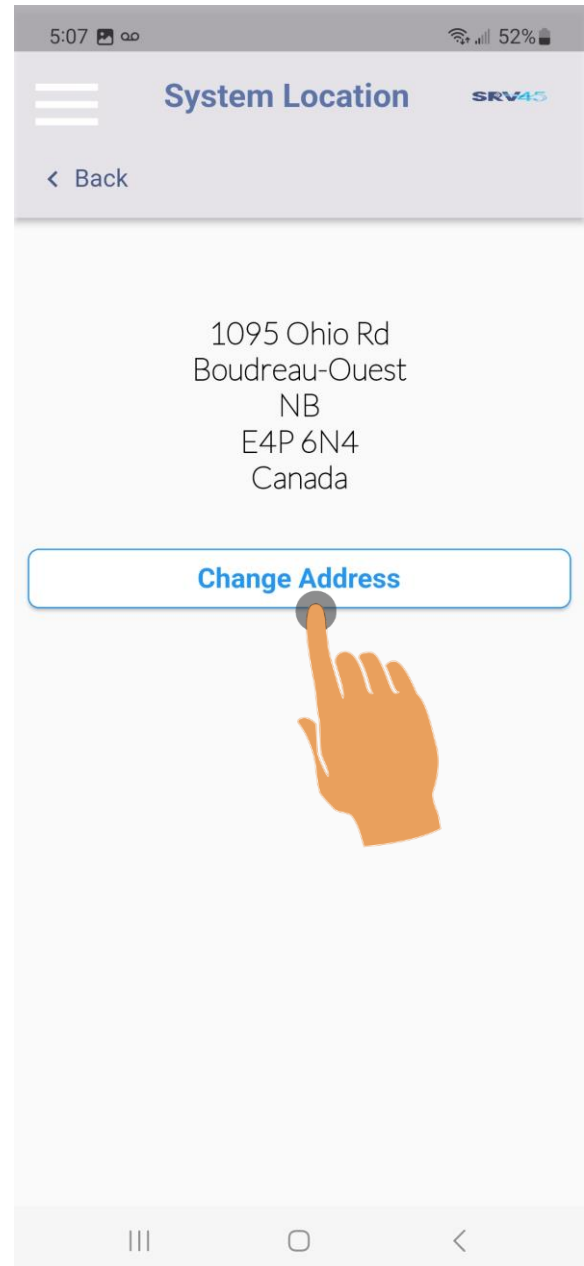

Step 4:
Tap "Change Address"

How to change your system location

5:07 52%

System Location SRV45

< Back

ADDRESS

State/Province
Select State

CITY

ZIP CODE

Save

Step 5:
Enter the address where your
system is located.
Tap "Save"

5:08 52%

System Location SRV45

< Back

ADDRESS
14 Donovan Terrace

State/Province
New Brunswick

CITY
Moncton

 
ZIP CODE
E1A4N9

Save


Address updated successfully

Step 6:
The address has been successfully
updated

How to change your Wi-Fi connection

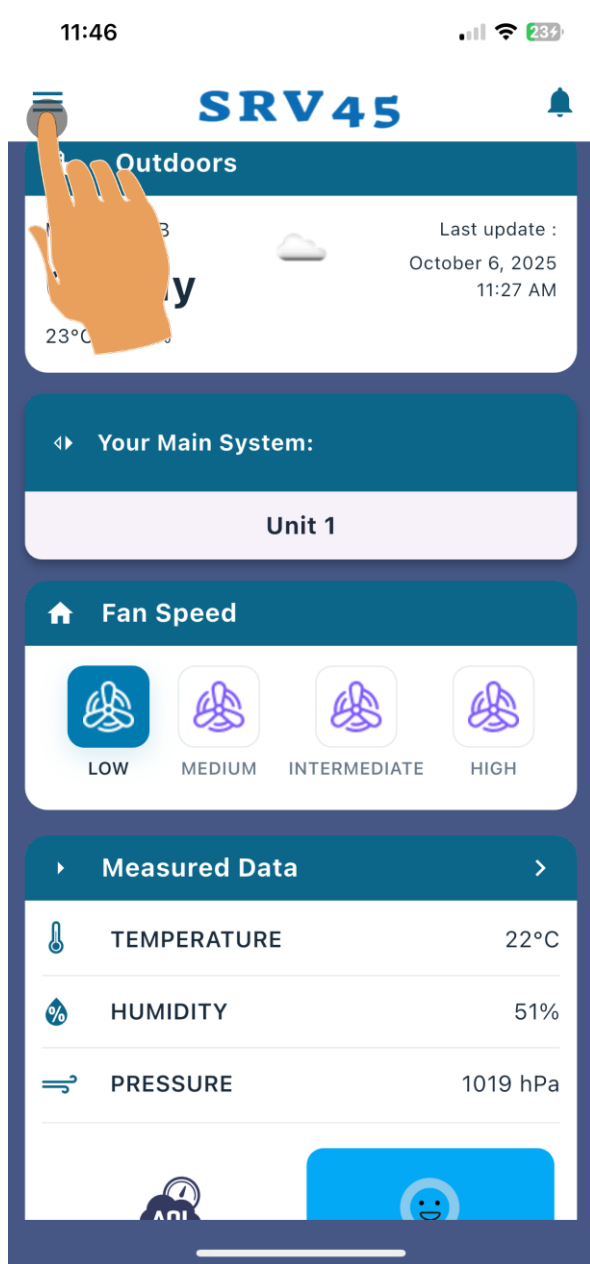


 Step 1:
Tap the menu icon

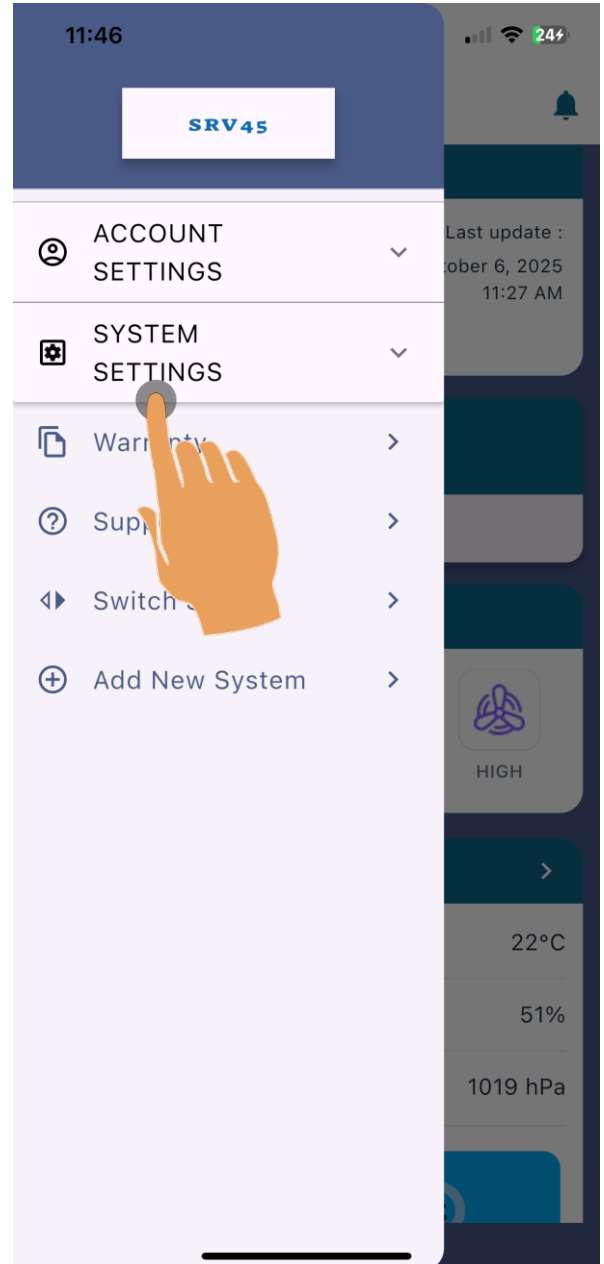


Step 2:
Tap "System Settings"

 How to change your Wi-Fi connection

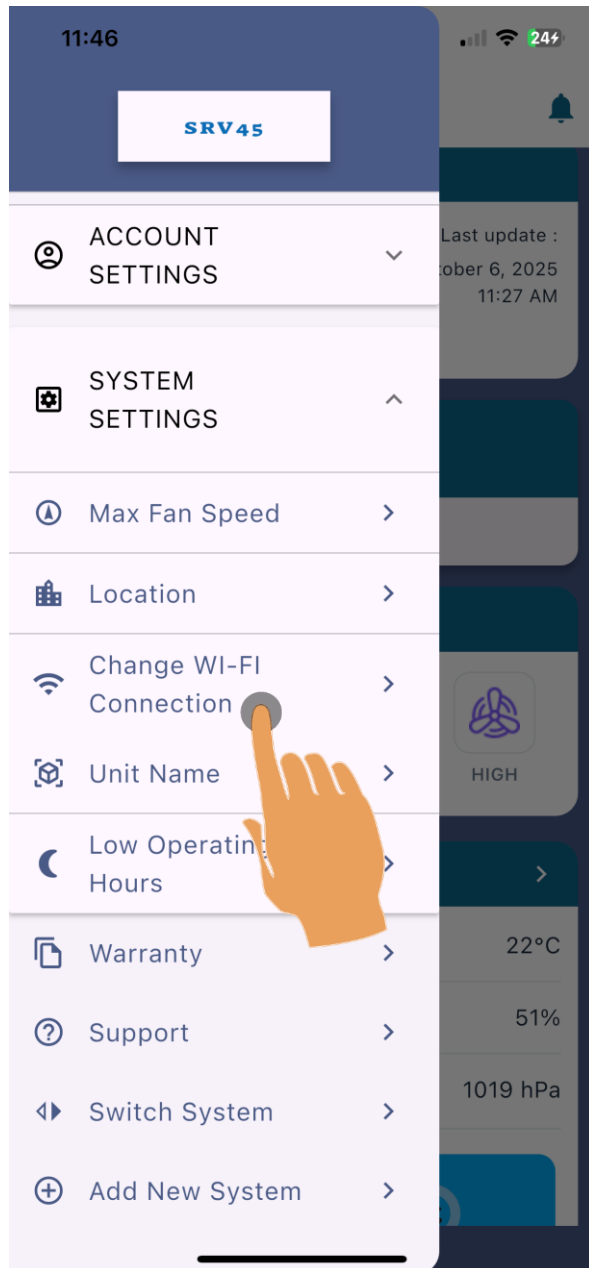

Step 3:

 
Tap "Change Wi-Fi Connection"

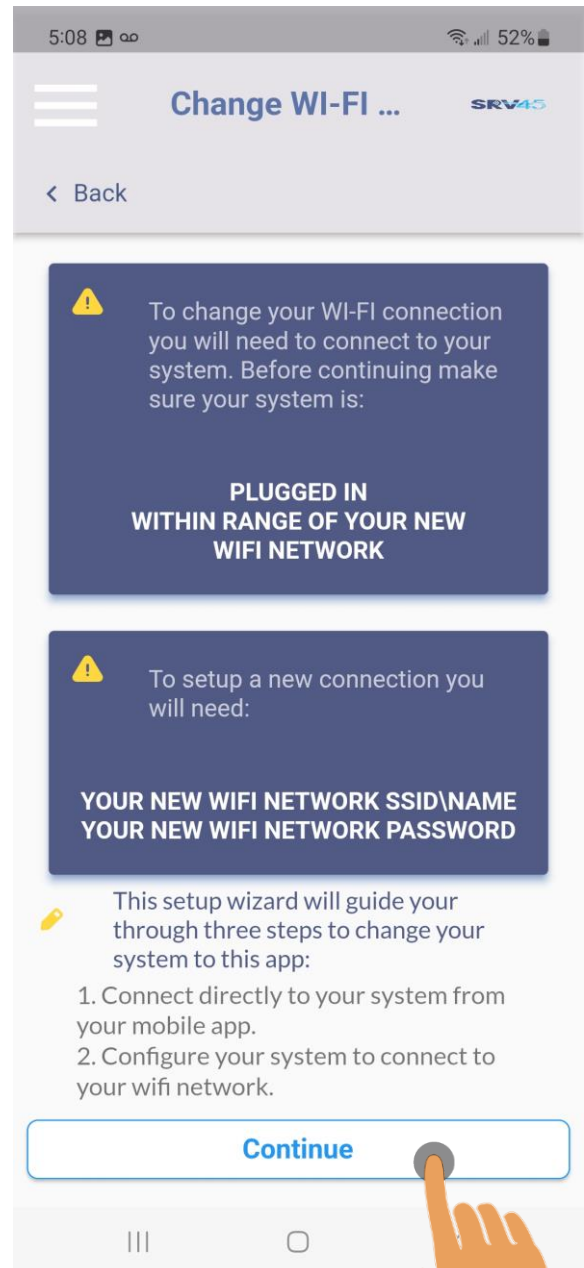


Step 4:

This screen outlines the upcoming steps.
Tap "Continue"

 How to change your Wi-Fi connection

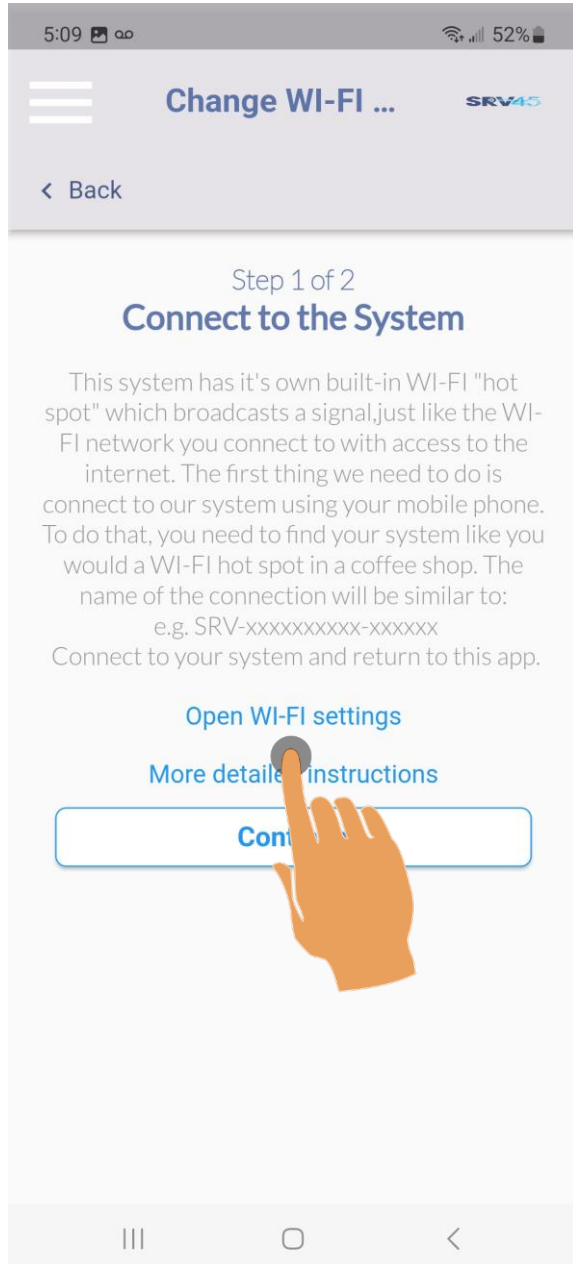


 Step 5:
Tap "Open Wi-Fi Settings"

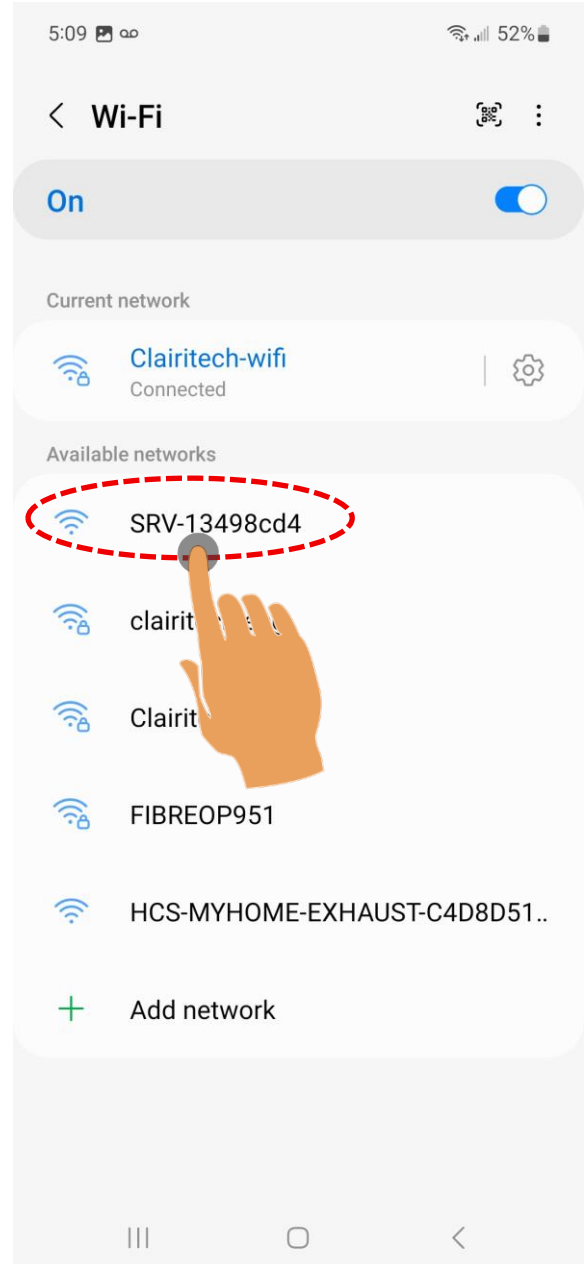


Step 6:
The system unit should show up
under OTHER NETWORKS as
"SRV45-xxxxxxxx"
Tap "SRV45-xxxxxxxx" and return to
the app

 How to change your Wi-Fi connection

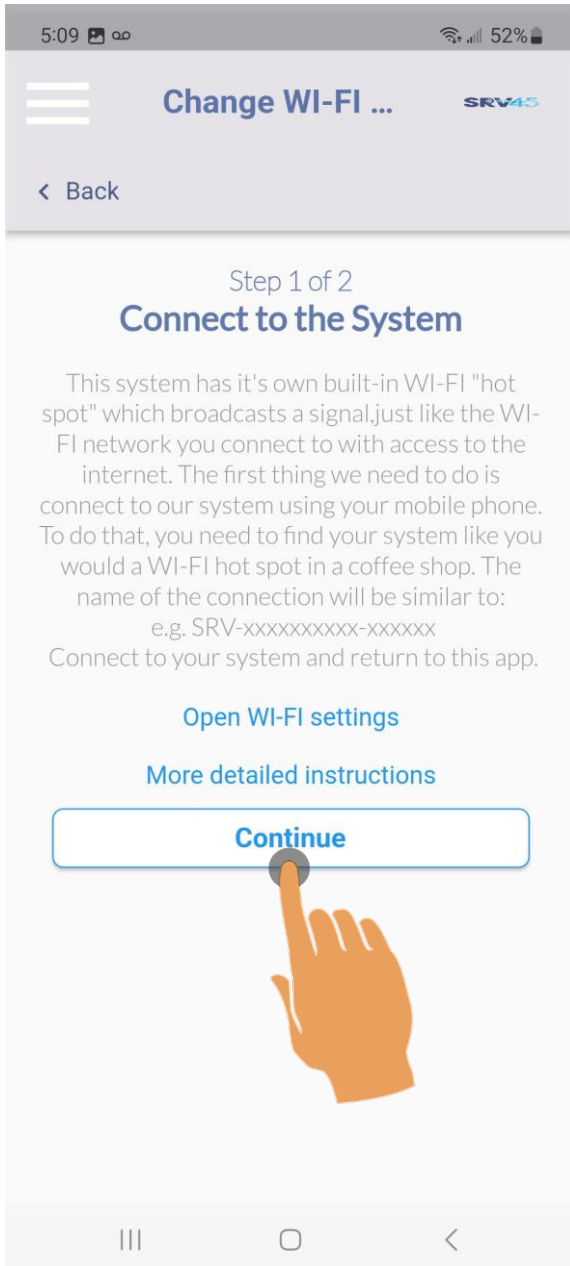

 Step 7:
Tap "Continue"

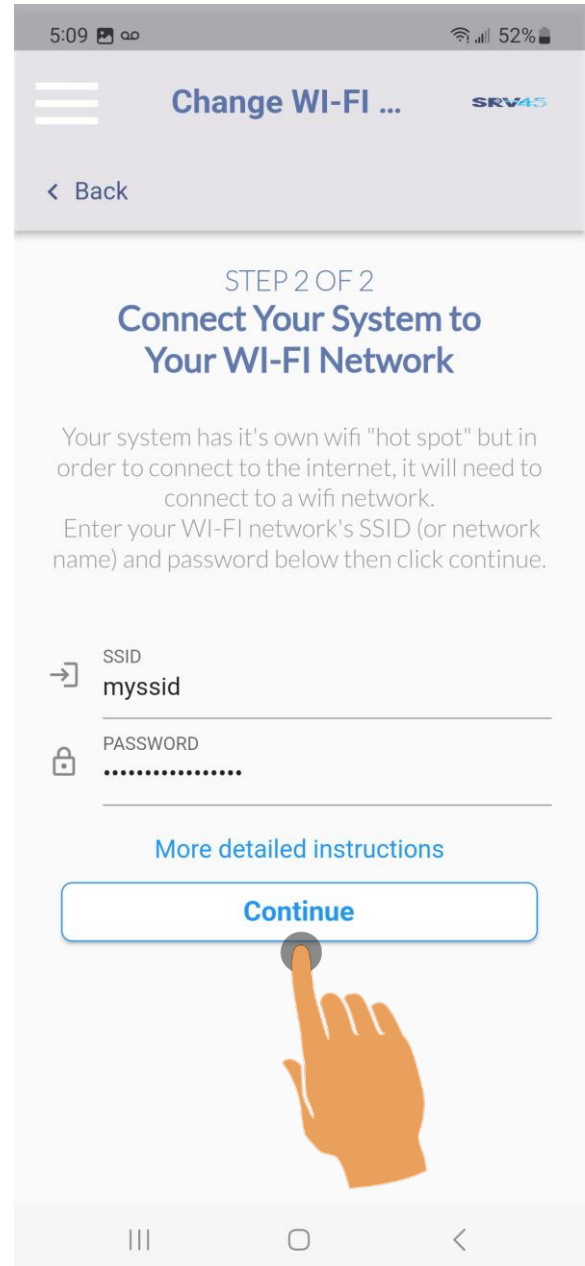

Step 8:
Enter the new Wi-Fi SSID and
password
Tap "Continue"

How to change your Wi-Fi connection

5:09 52%

Change WI-FI ... SRV45

< Back

STEP 2 OF 2

Connect Your System to Your WI-FI Network

Your system has it's own wifi "hot spot" but in order to connect to the internet, it will need to connect to a wifi network.

Enter your WI-FI network's SSID (or network name) and password below then click continue.

SSID
myssid

PASSWORD
.....

[More detailed instructions](#)

Continue

Please wait few seconds!

Step 9:
Please wait a moment longer

Change WI-FI Connection SRV45

< Back

 
WI-FI Connection Updated

You can access your system settings at any time by clicking on the menu icon in the top left corner of the screen.


Done

Step 10 :
The system is successfully connected to the new Wi-Fi SSID.
Tap "Done"

How to change your unit's name

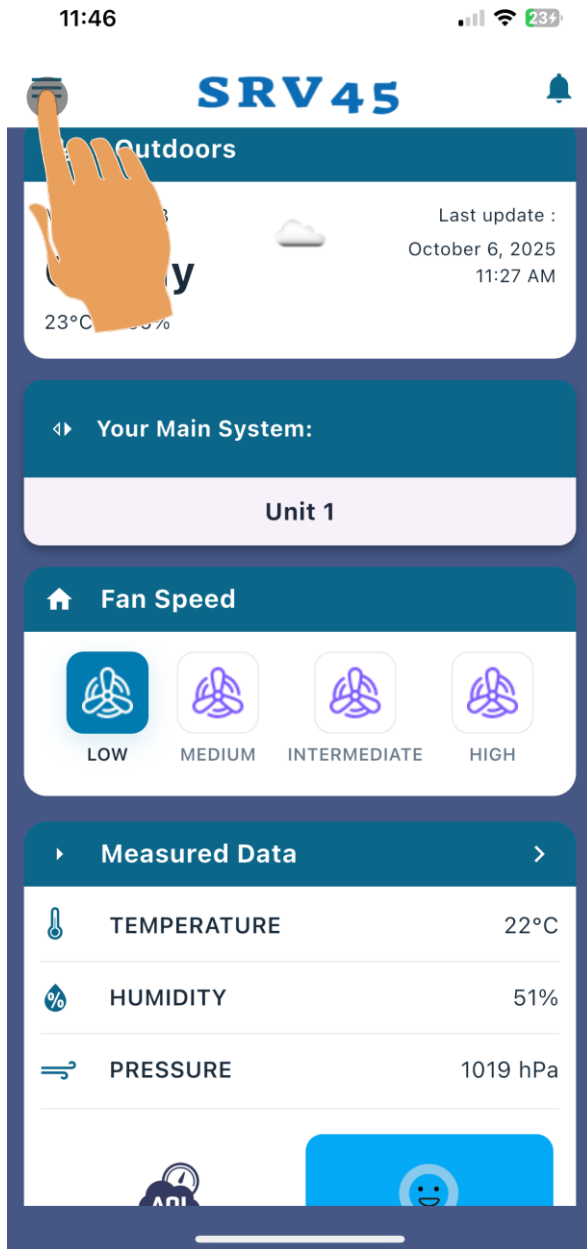


 Step 1:
Tap the menu icon

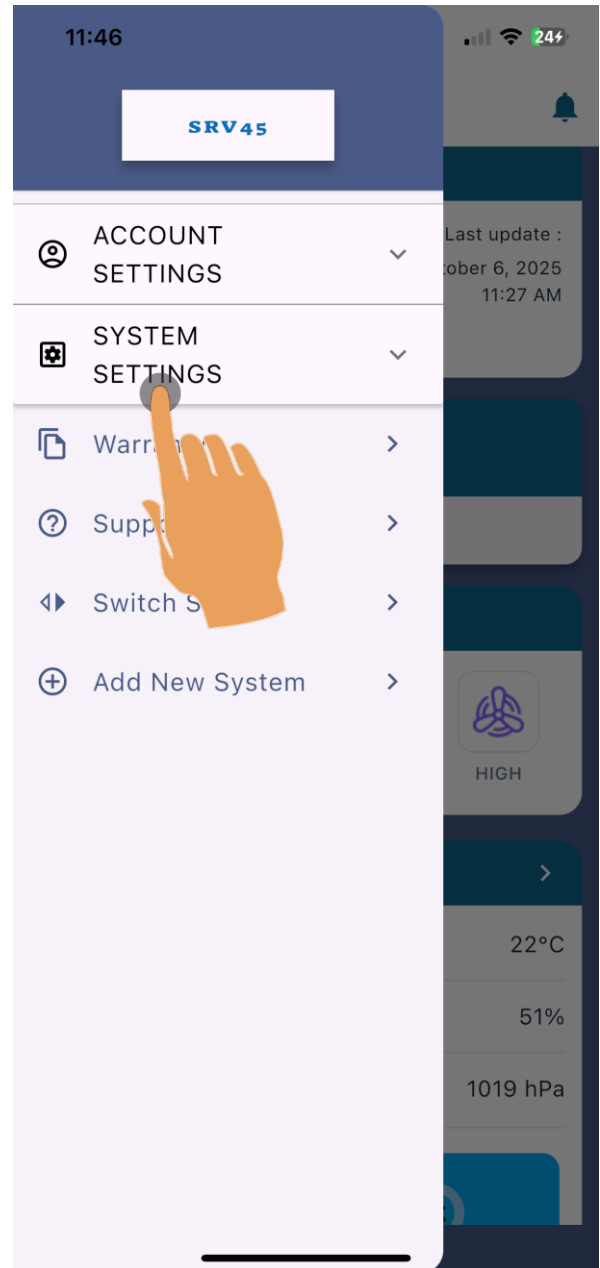


Step 2:
Tap "System Settings"

 How to change your unit's name

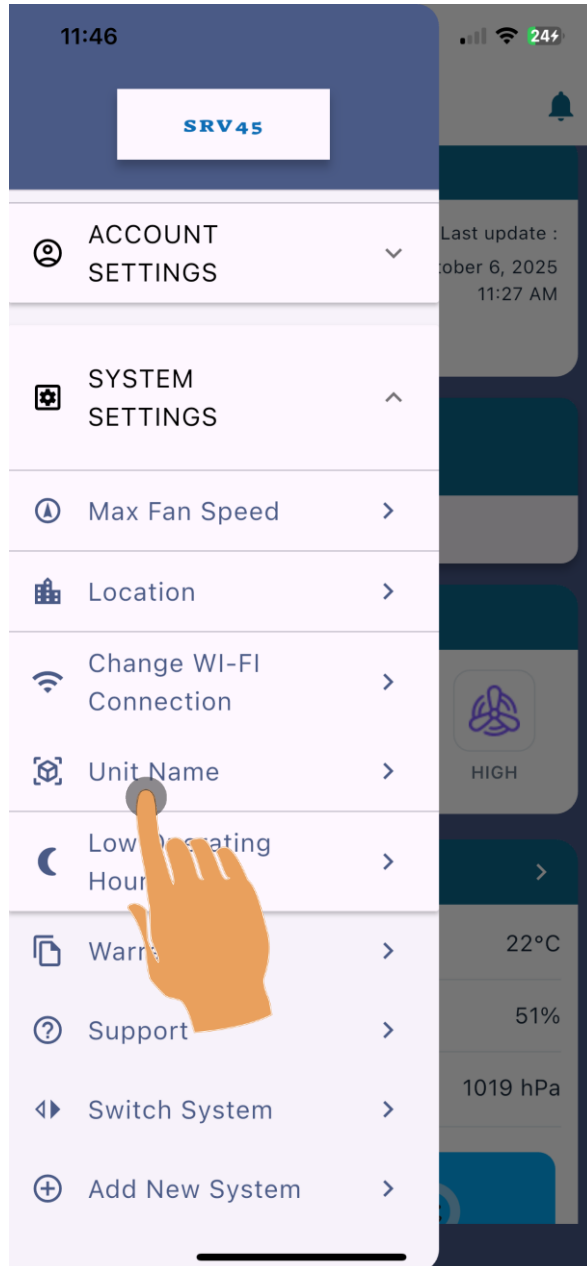

 Step 3:
Tap "Unit Name"

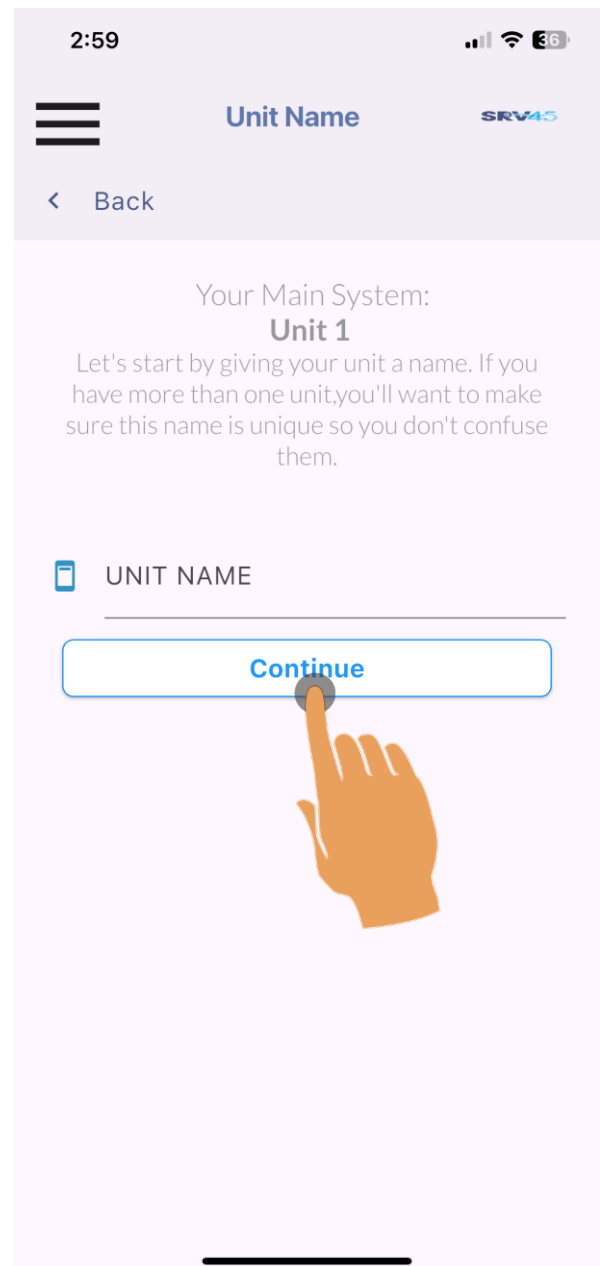

Step 4:
Enter your unit's name
Tap OK

How to change your unit's name

3:00

Unit Name SRV45

< Back

Your Main System:
Unit ***

Let's start by giving your unit a name. If you have more than one unit, you'll want to make sure this name is unique so you don't confuse them.

UNIT NAME
Unit ***

 
Continue

The unit Name is changed


Step 5:
Unit name updated successfully



How to schedule low operating hours

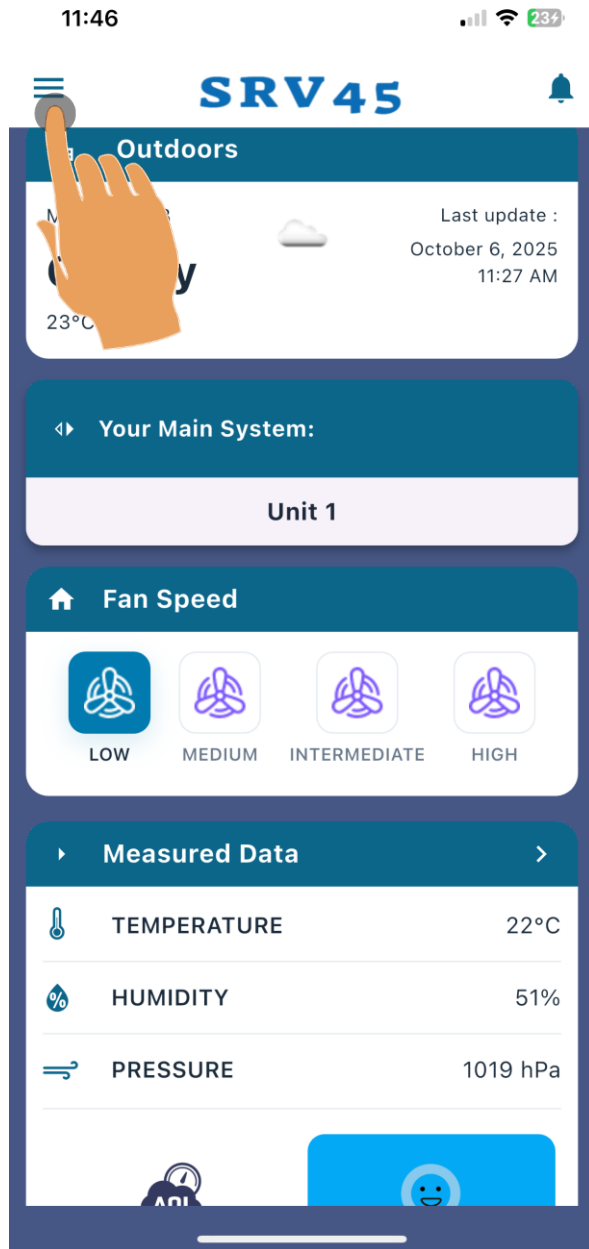


 Step 1 :
Tap the menu icon

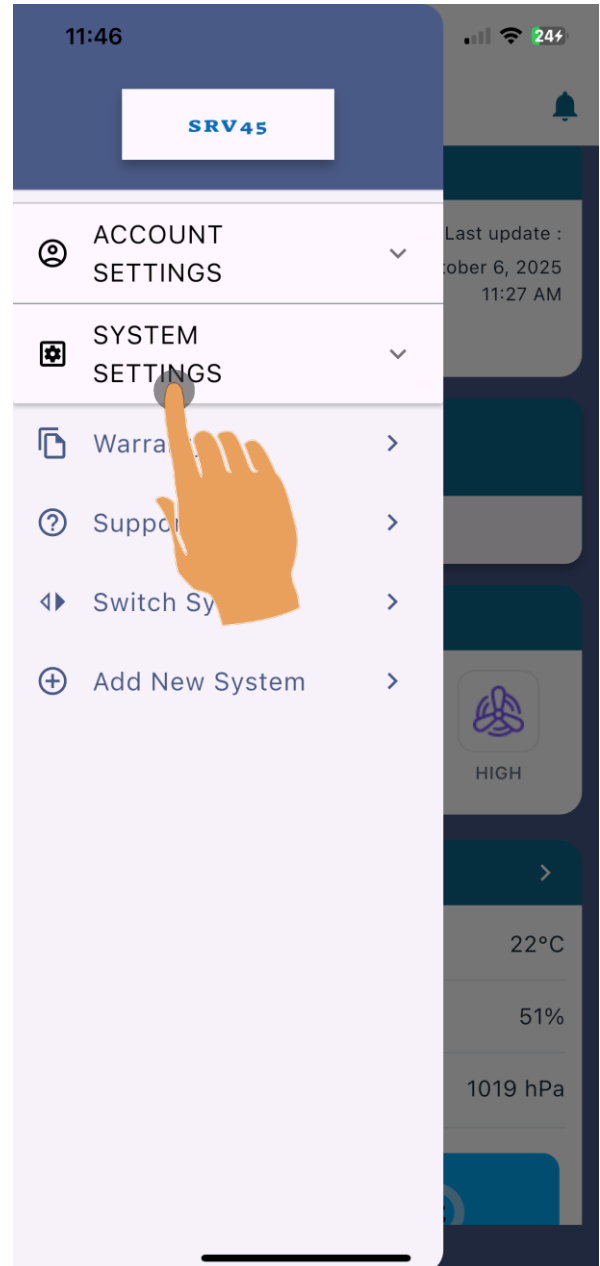


Step 2:
Tap "System Settings"

 How to schedule low operating hours

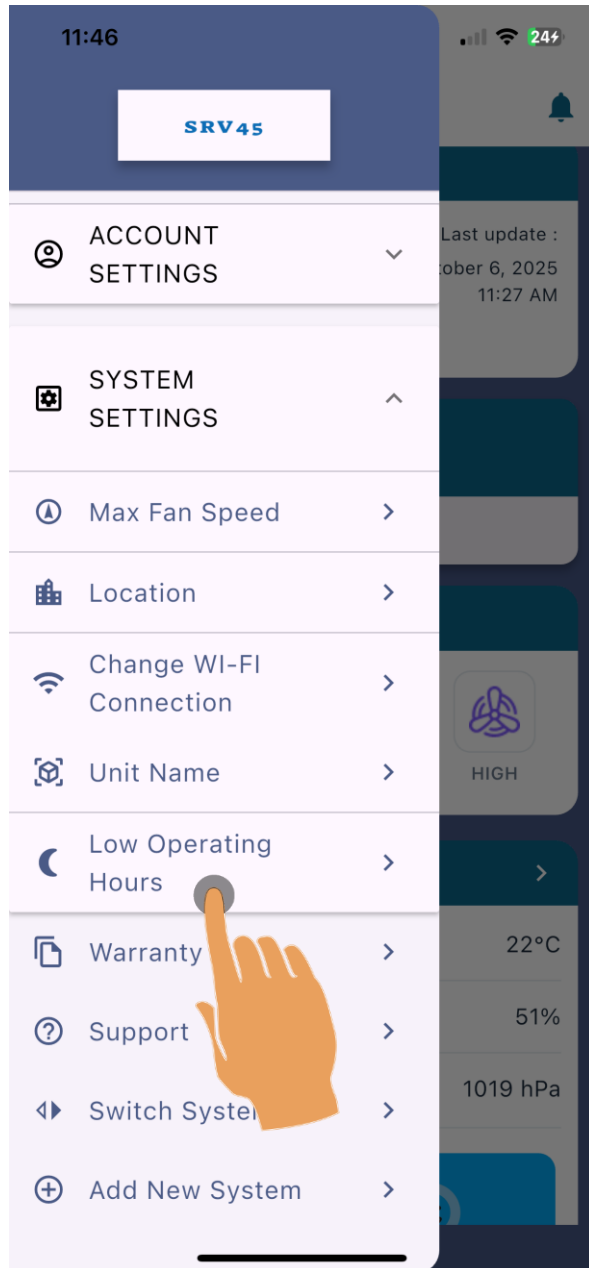


 Step 3 :
Tap
"Low Operating Hours"

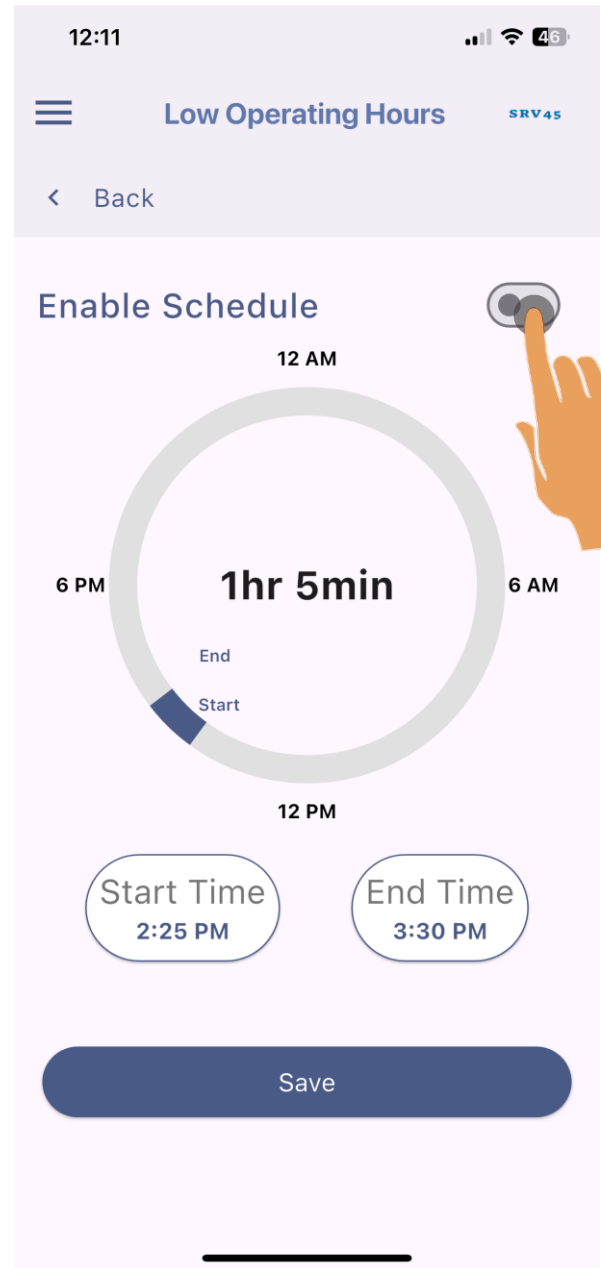


Step 4:
Press the button to enable schedule

 How to schedule low operating hours

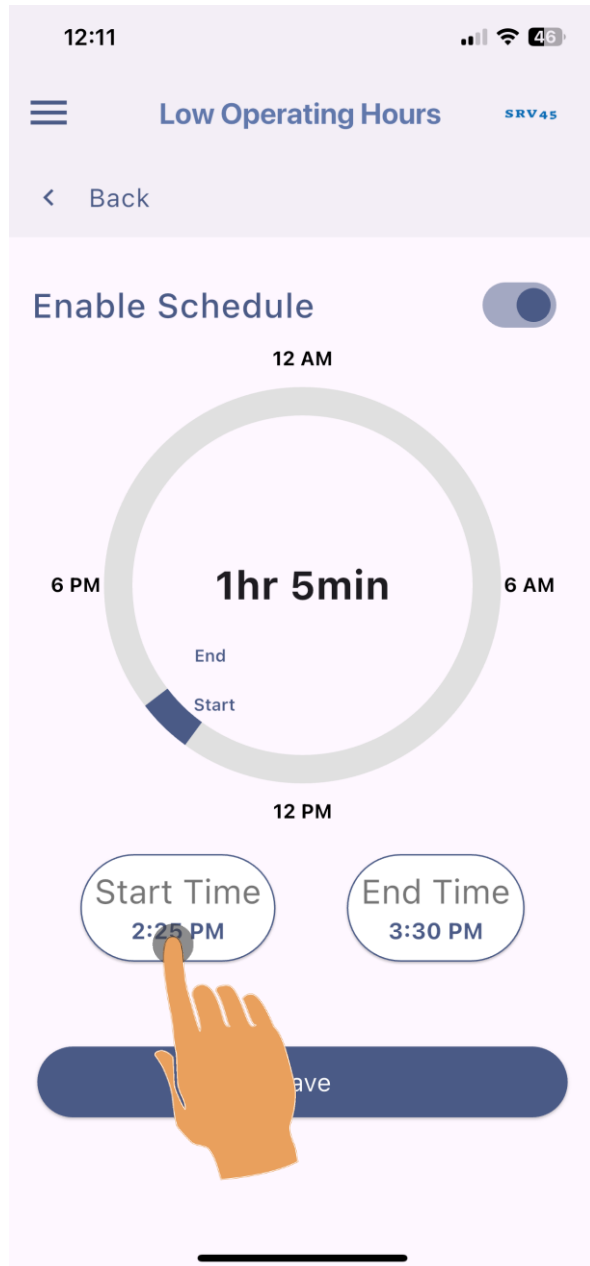


 Step 5 :
Tap
"Start Time"

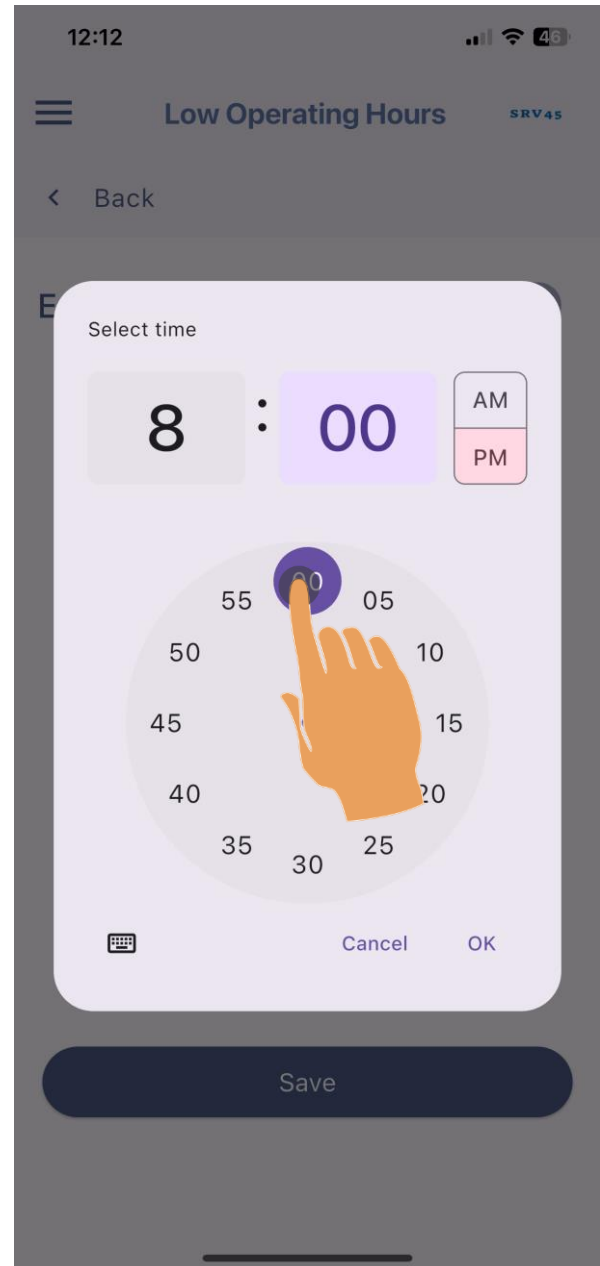


Step 6:
Select the hour, then the minutes by
touching the corresponding number

 How to schedule low operating hours

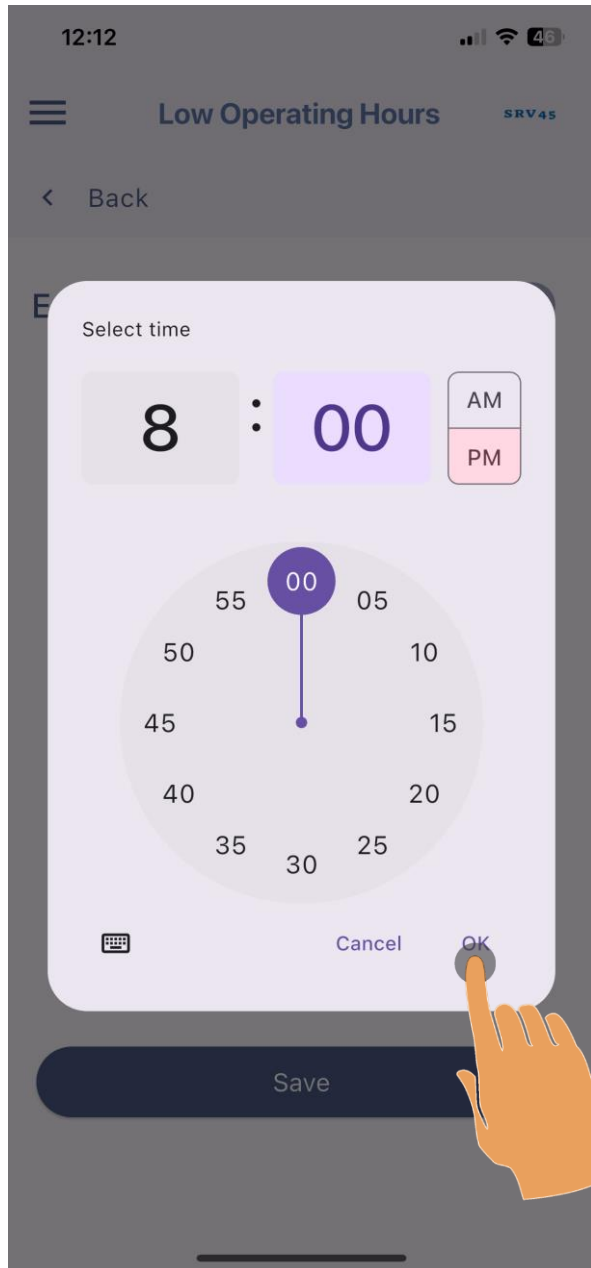

Step 7 :

 
Tap "OK" to validate your choice

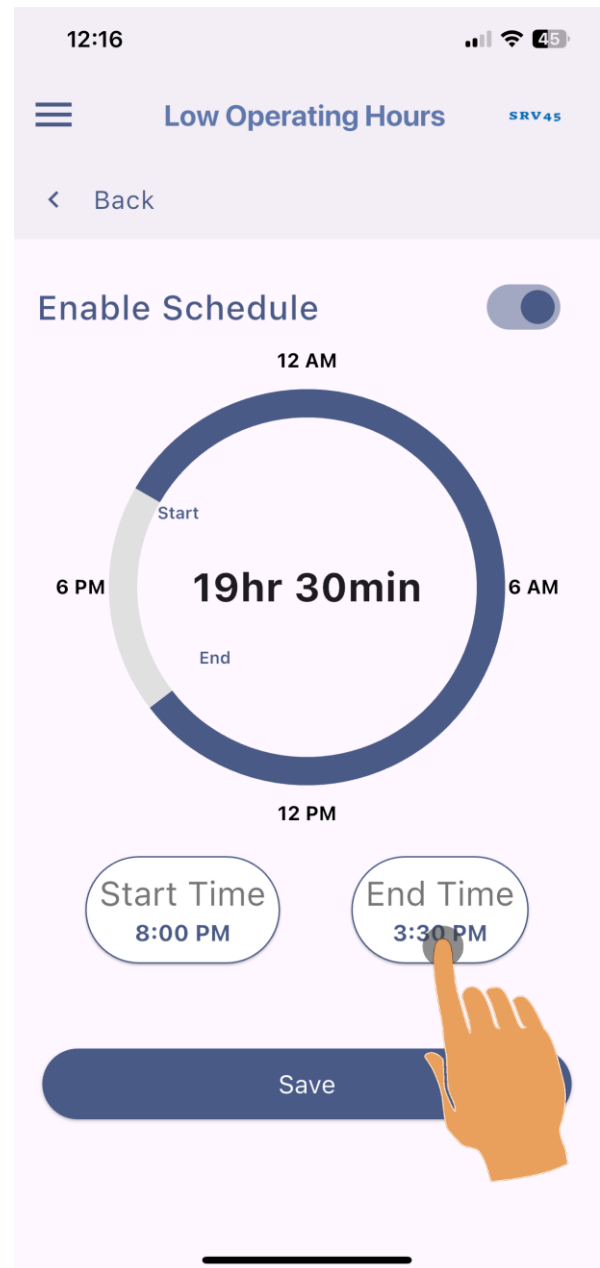

Step 8:


Tap "End Time"

 How to schedule low operating hours

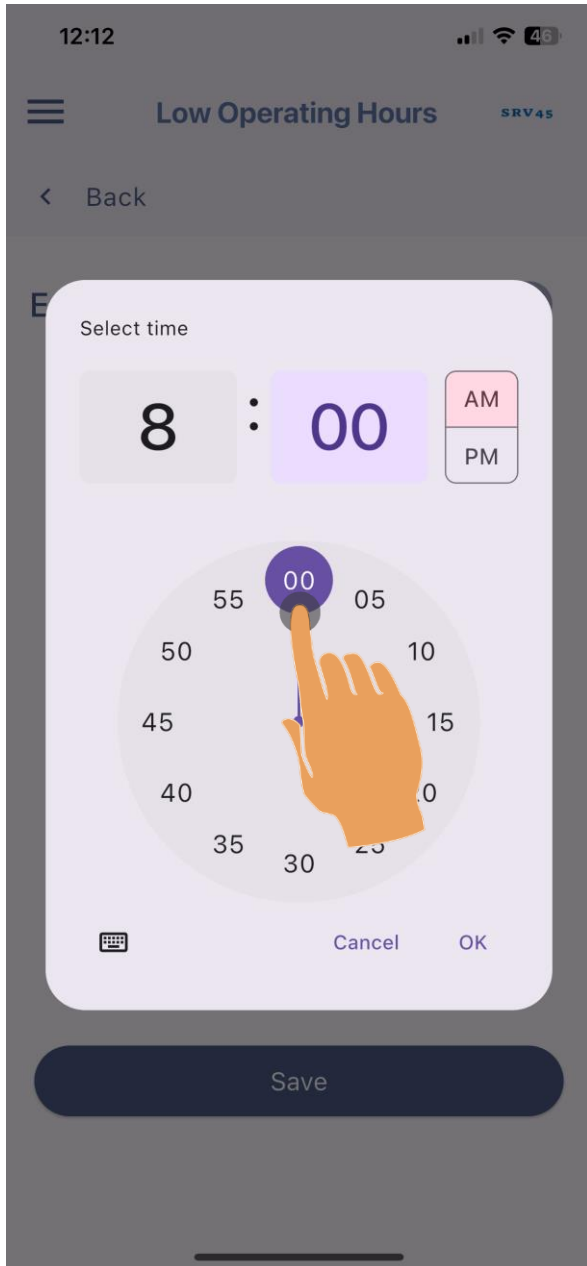

Step 9 :

 
Select the hour, then the minutes by touching the corresponding number

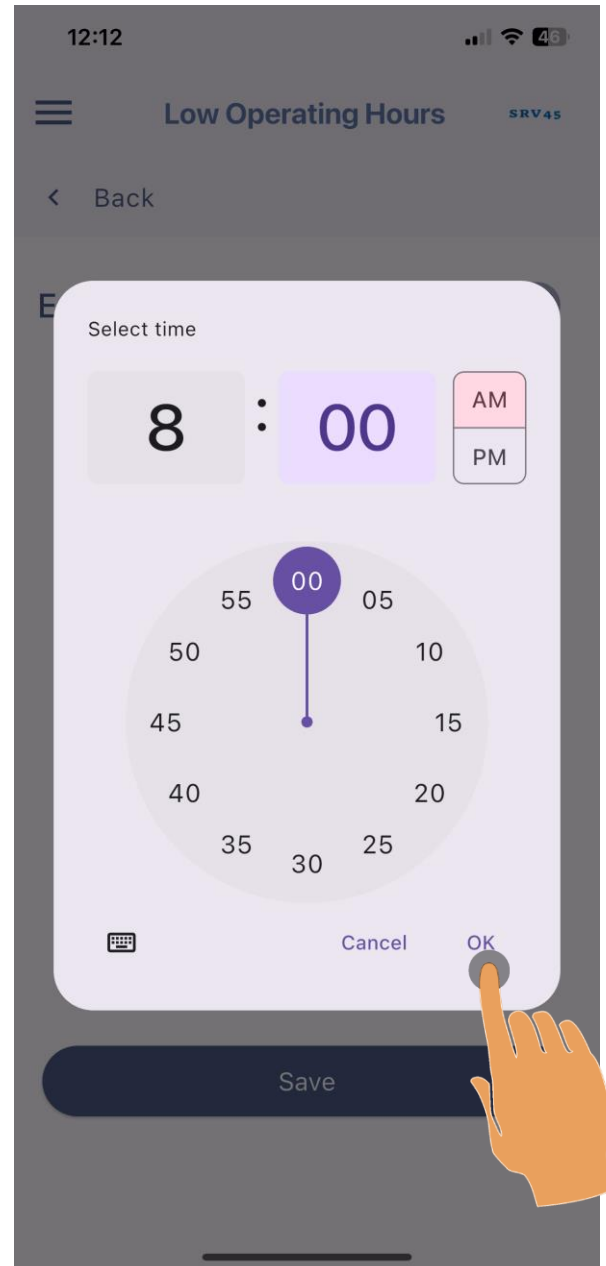


Step 10:

Tap "OK" to validate your choice

 How to schedule low operating hours

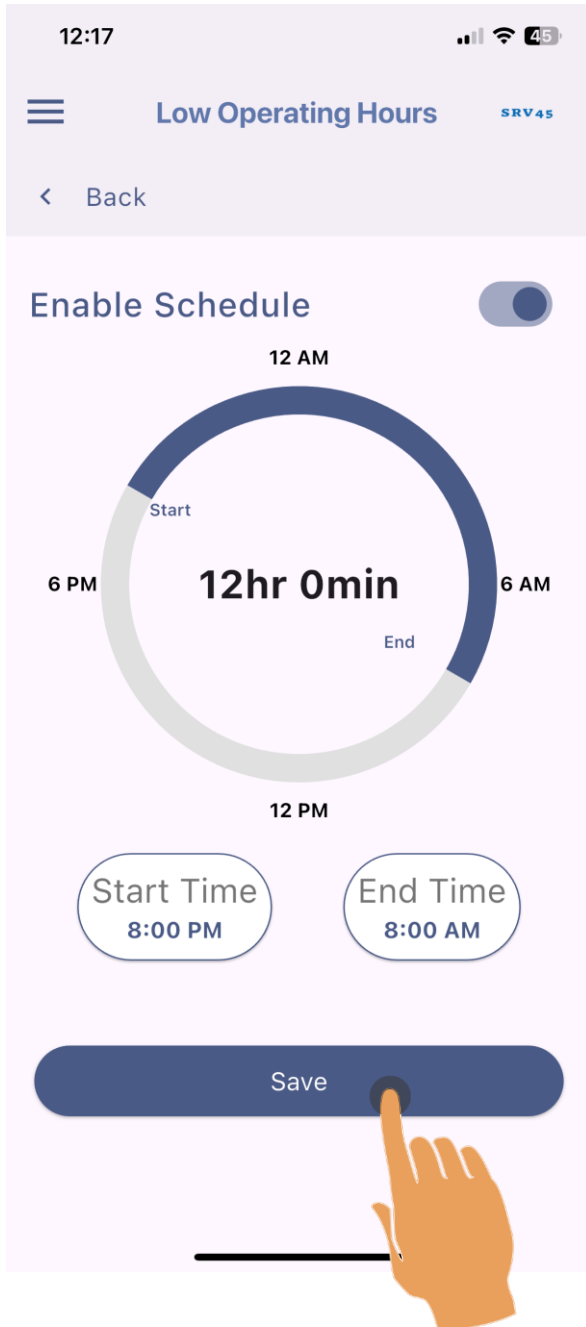


 Step 11 :
Tap "Save"

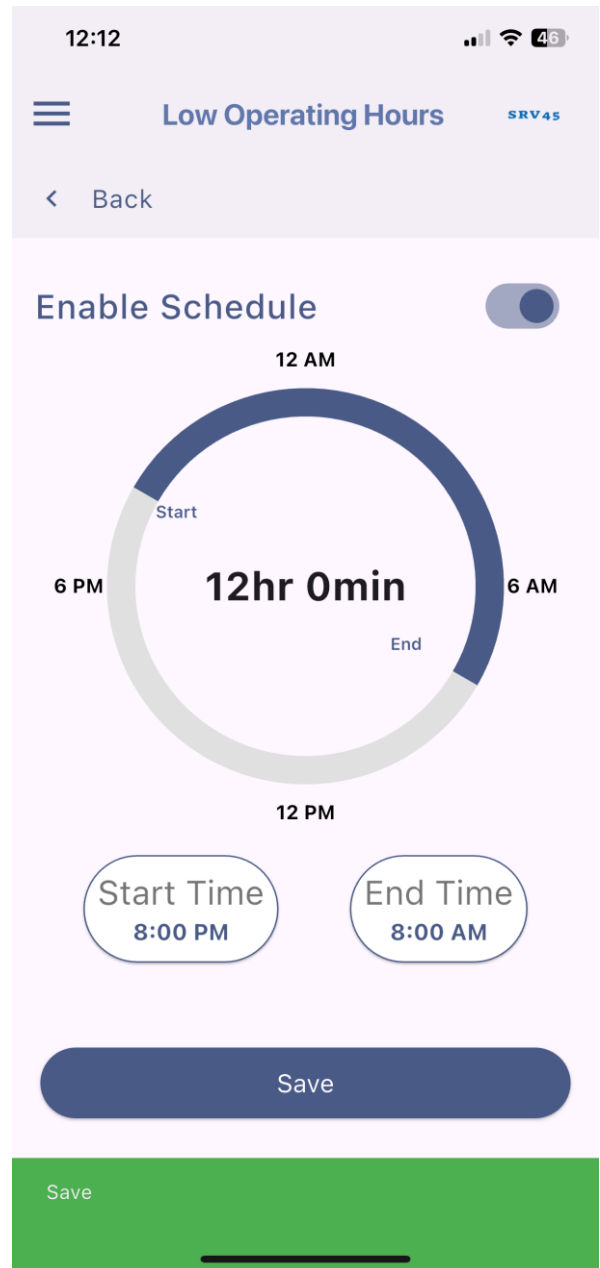


Step 12:
Changes saved successfully

 How to register your unit

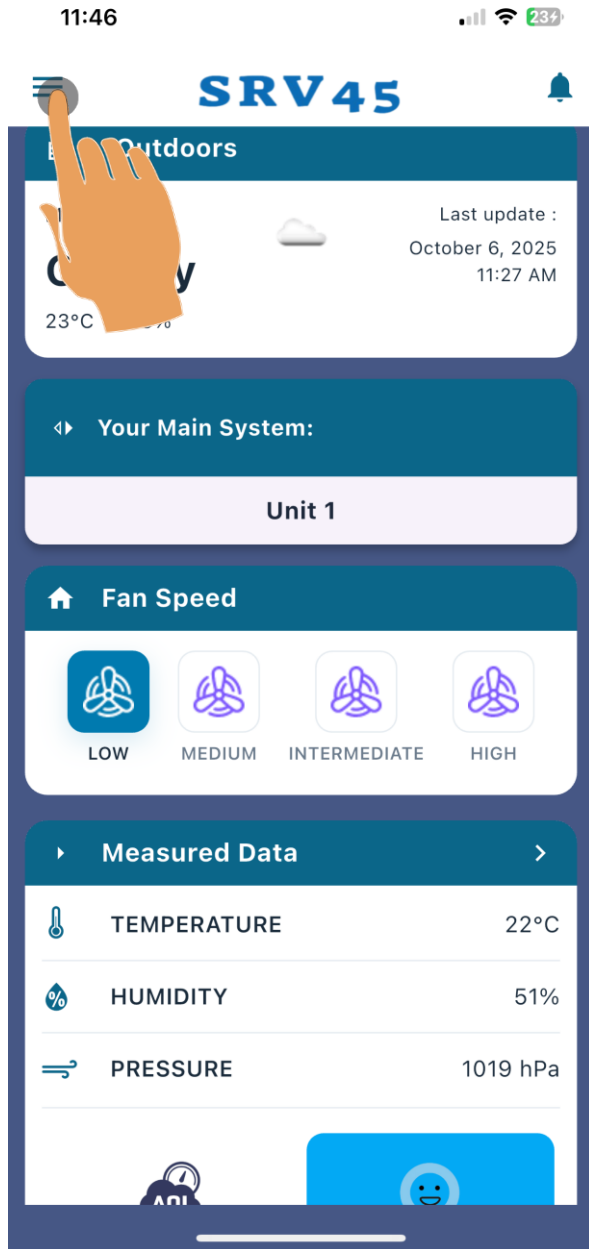


 Step 1:
Tap the menu icon

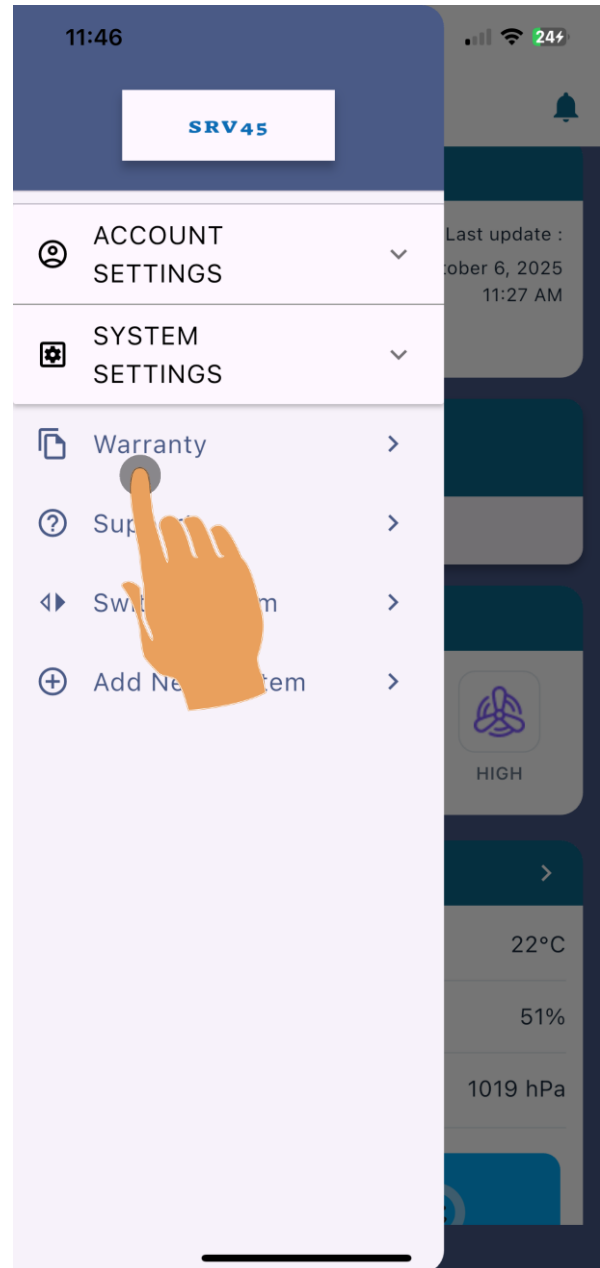


Step 2:
Tap "Warranty"

 How to register your unit

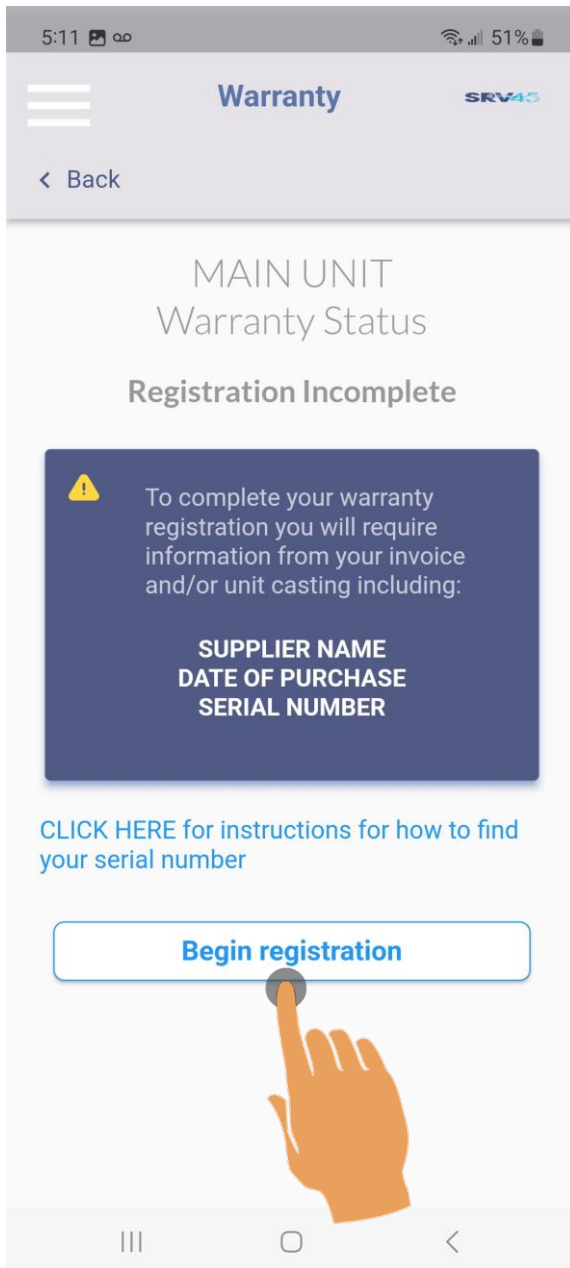


 Step 3:
Tap "Begin Registration"

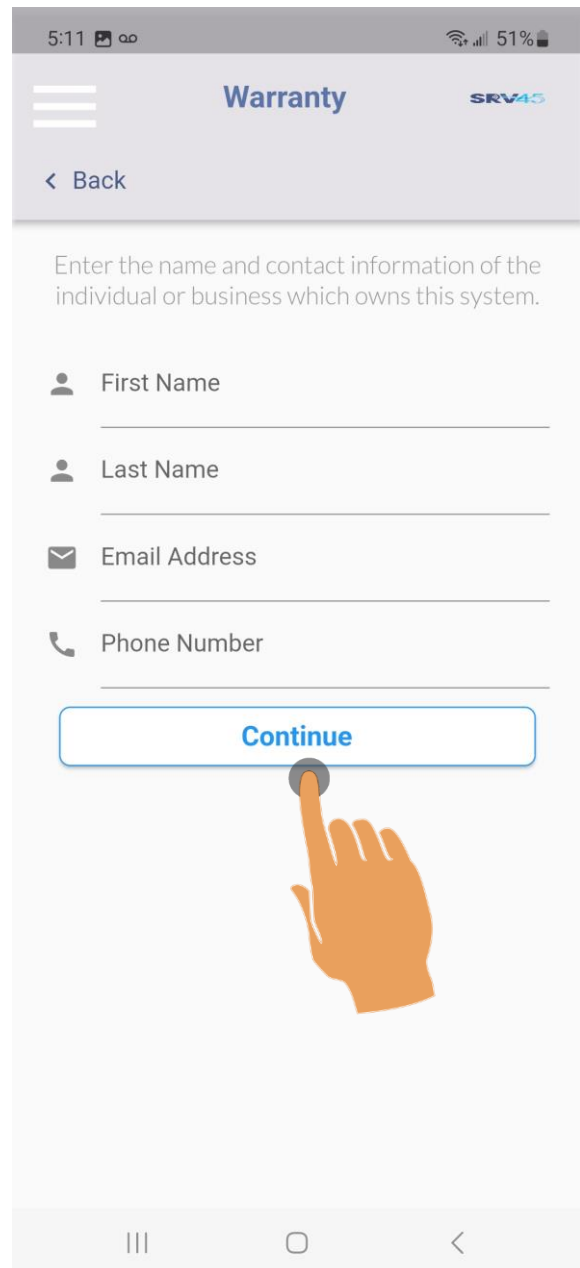

Step 4:
Enter the contact information
Of the system's owner.
Tap "Continue"

 How to register your unit

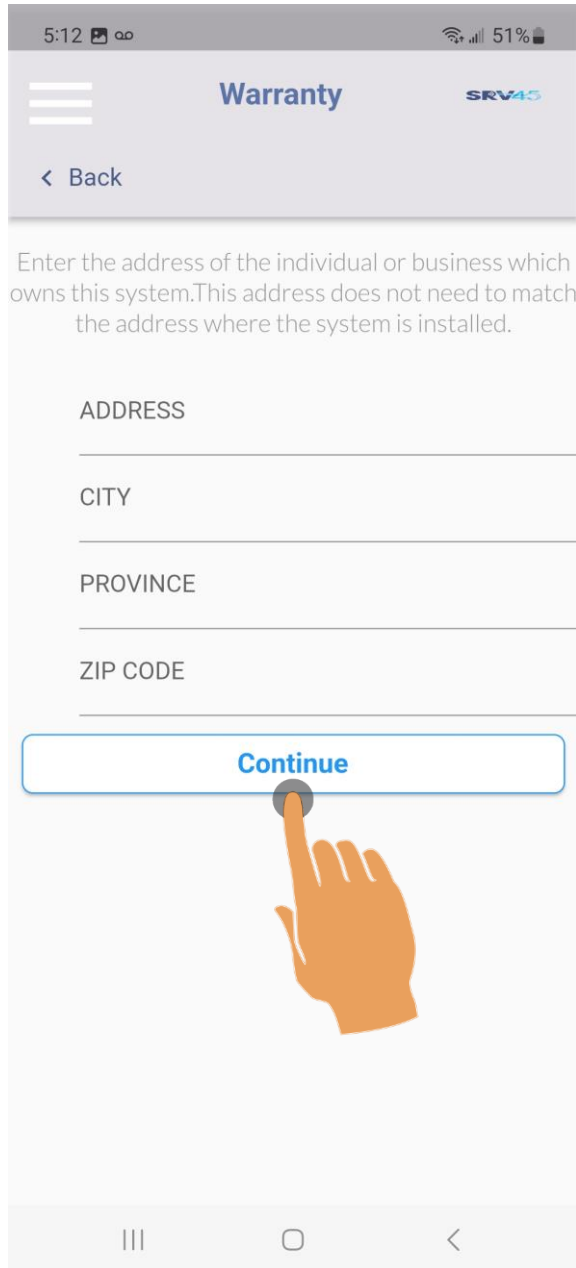

5:12 51%

Warranty SRV45

< Back

Enter the address of the individual or business which owns this system. This address does not need to match the address where the system is installed.

ADDRESS

 
CITY

PROVINCE

ZIP CODE

Continue

Step 5:
Enter the physical address of the system's owner.
Tap "Continue"

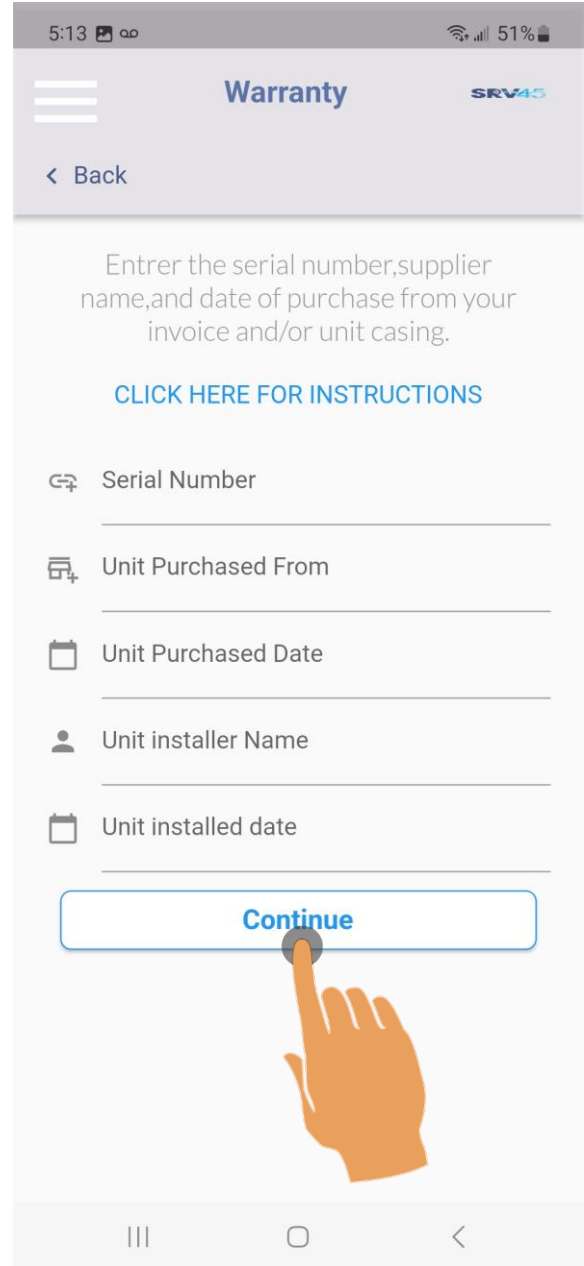

5:13 51%

Warranty SRV45

< Back

Enter the serial number, supplier name, and date of purchase from your invoice and/or unit casing.

[CLICK HERE FOR INSTRUCTIONS](#)

Serial Number

Unit Purchased From

Unit Purchased Date

 
Unit installer Name

Unit installed date

Continue

Step 6:
Enter the required information.
Tap "Continue"


How to register your unit

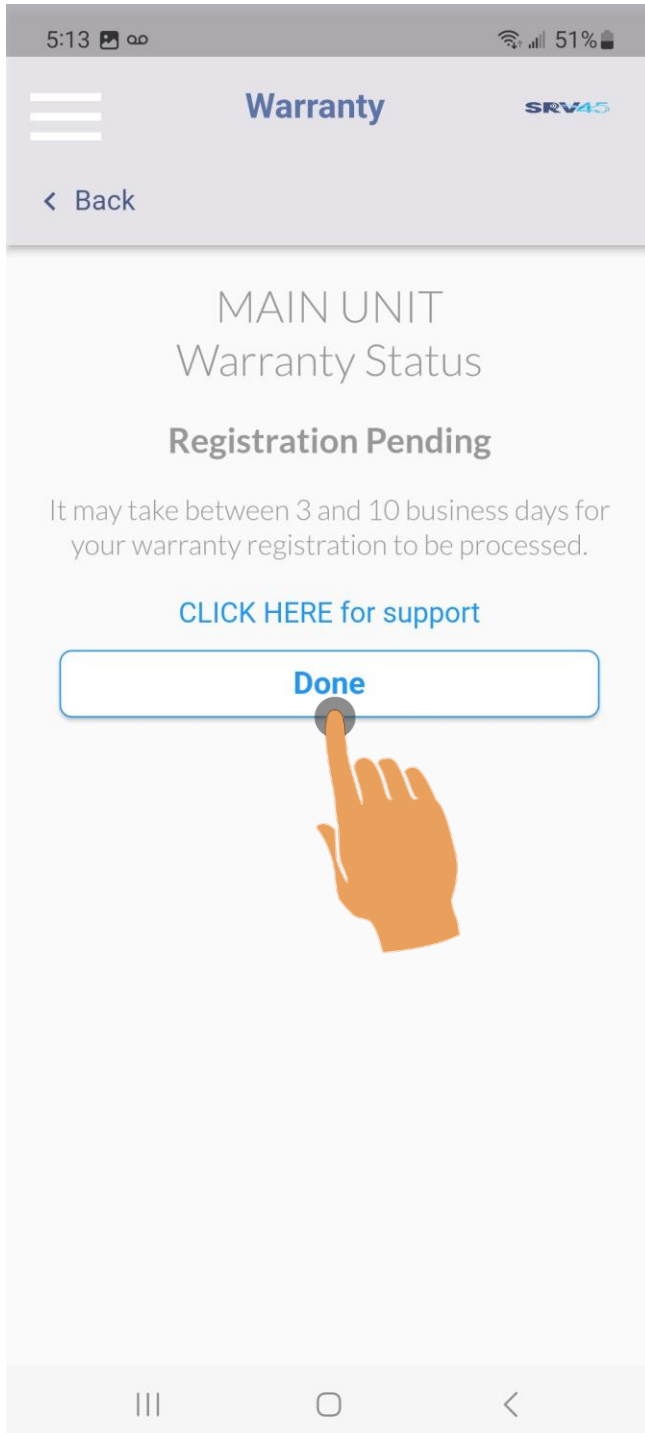


Step 7:
Tap "Done"



 How to contact support

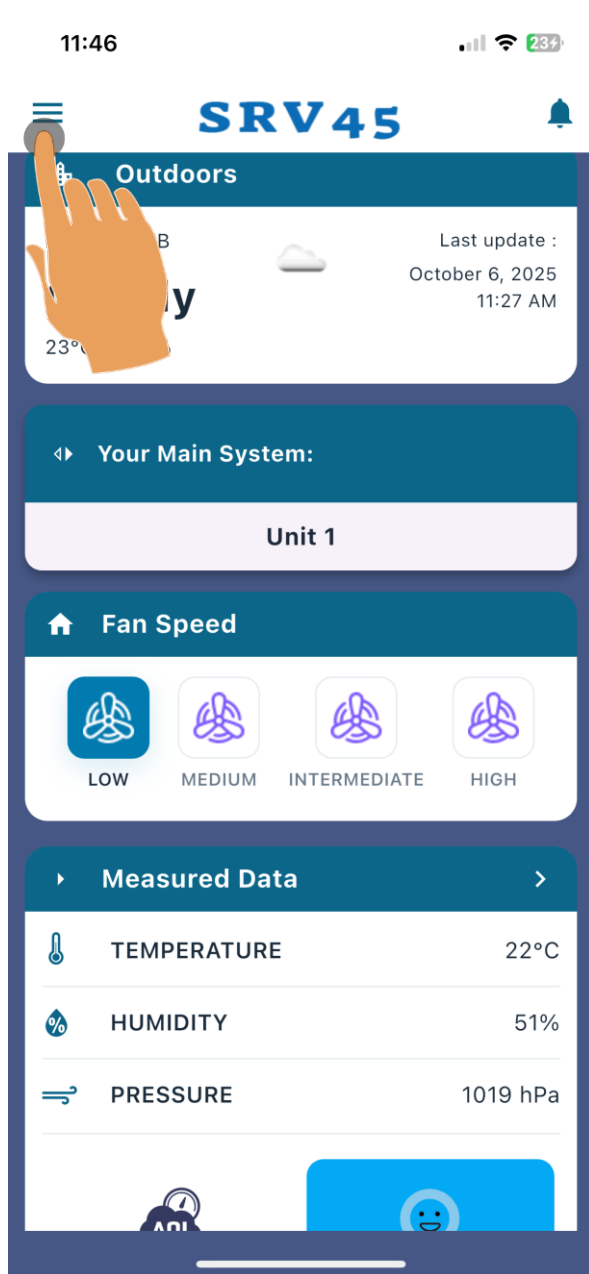


 Step 1:
Tap the menu icon

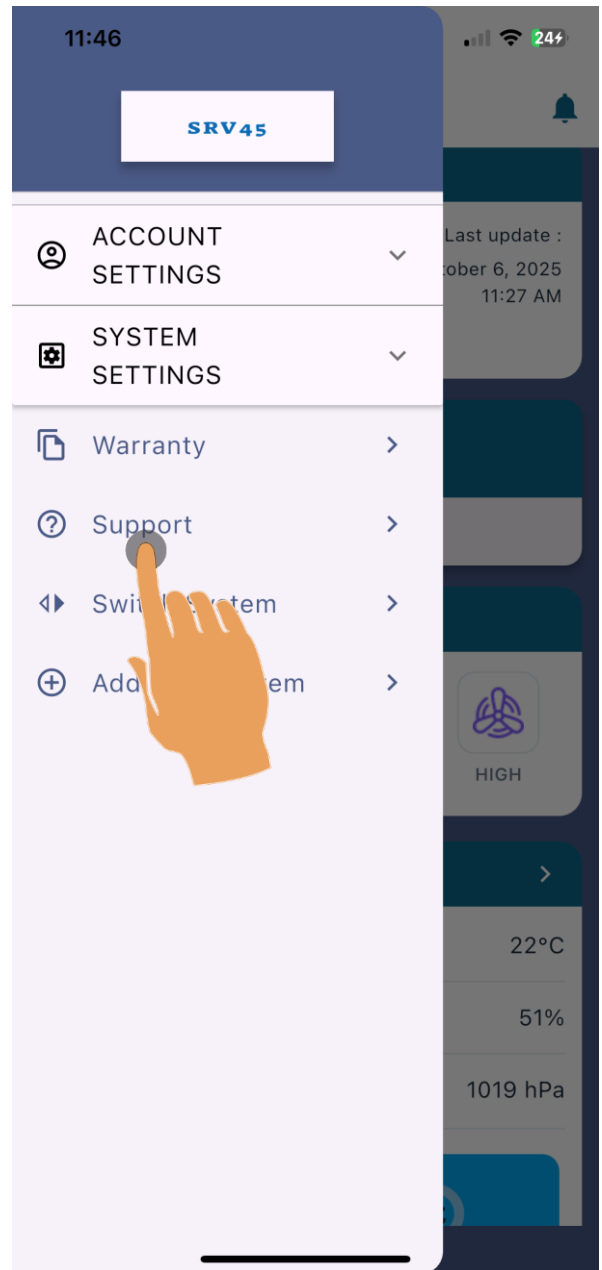

Step 2:
Tap "Support"

 
How to contact support

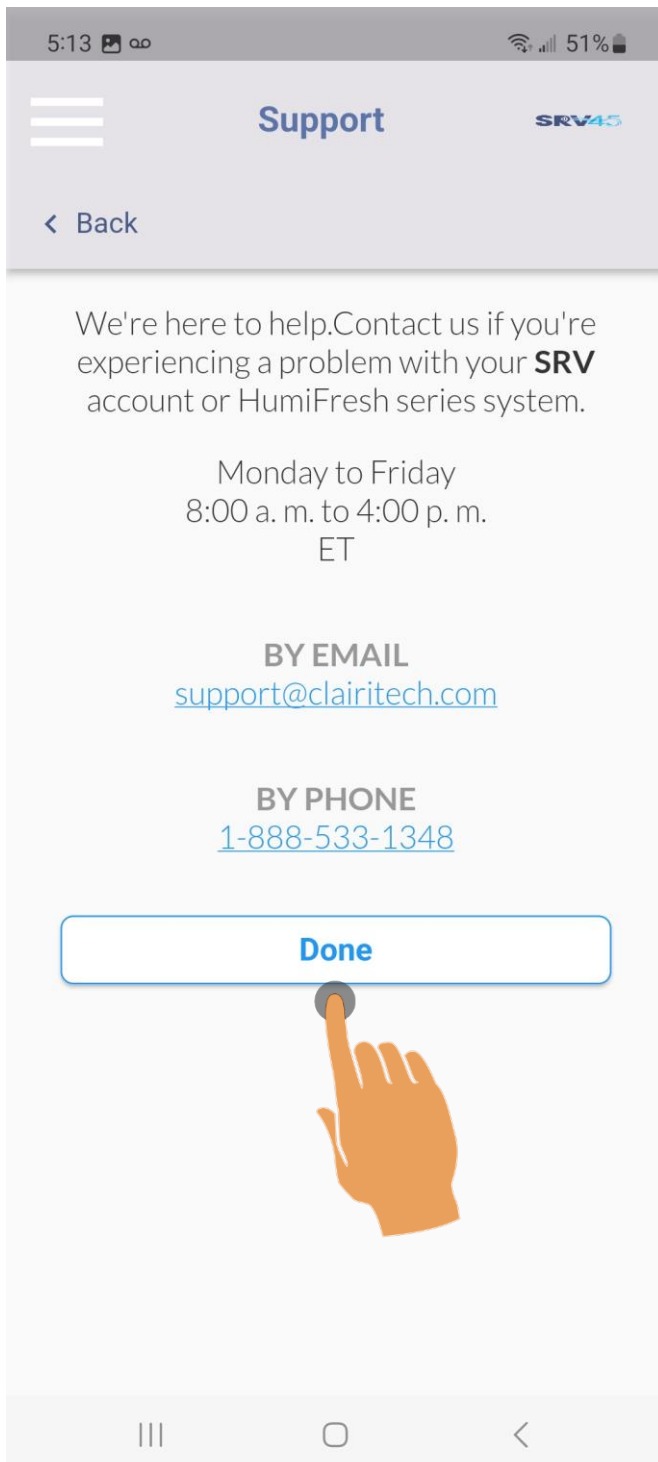


Step 3:
You may contact support via
email or phone



 How to switch your system

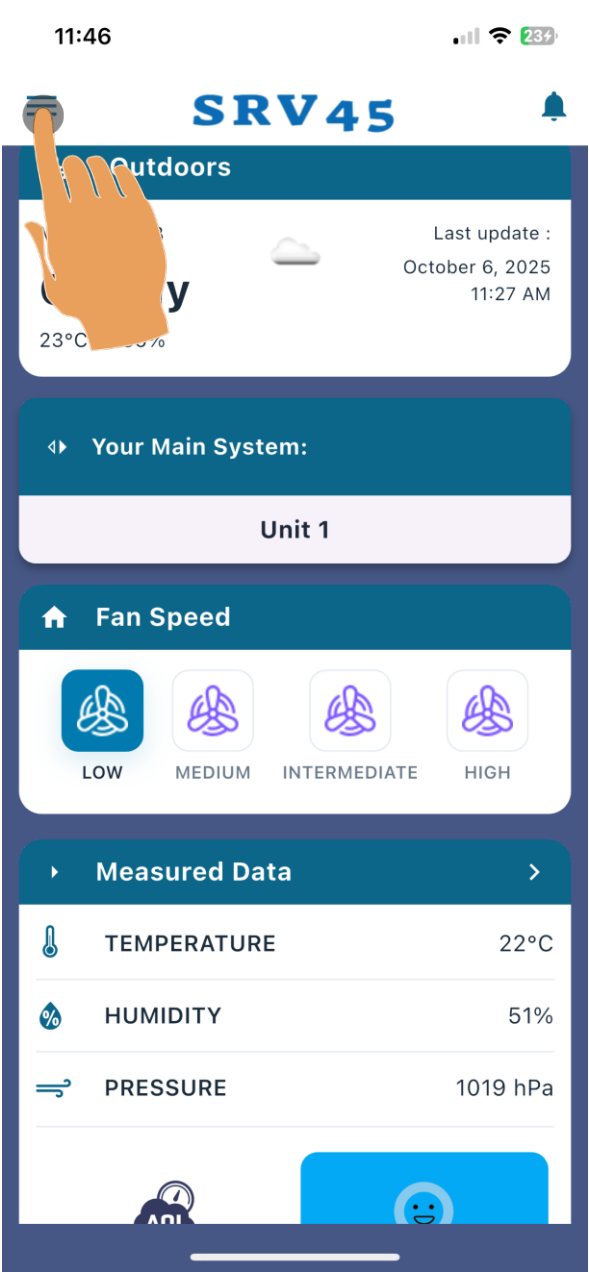


 Step 1:
Tap the menu icon

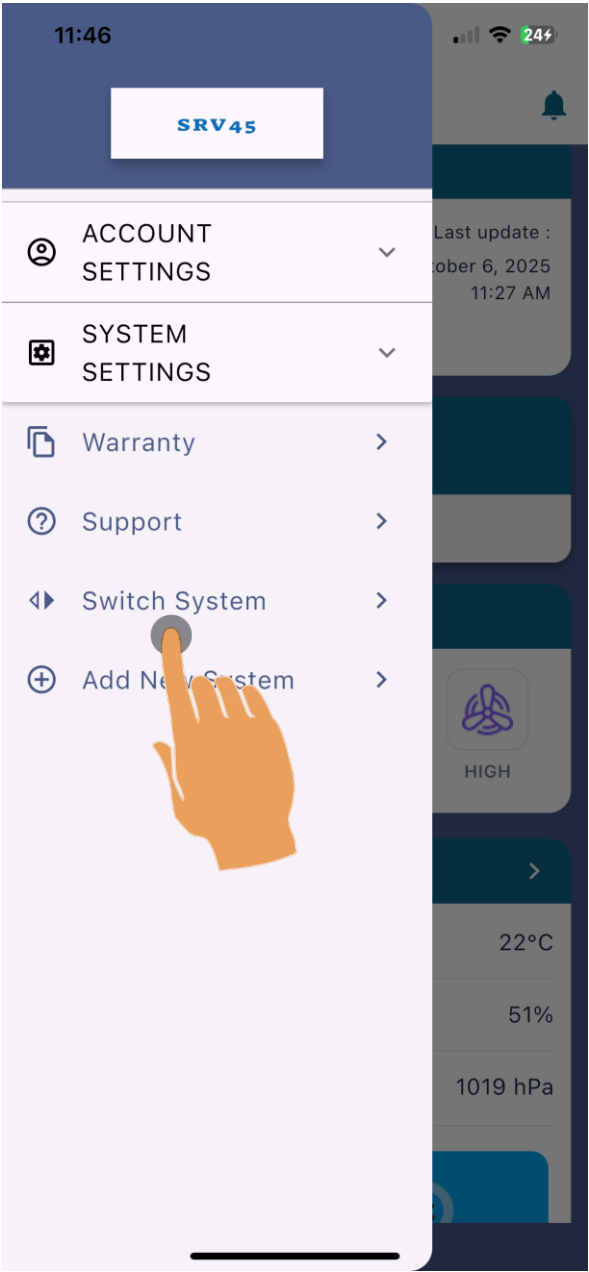


Step 2:
Tap "Switch System"

 How to switch your system

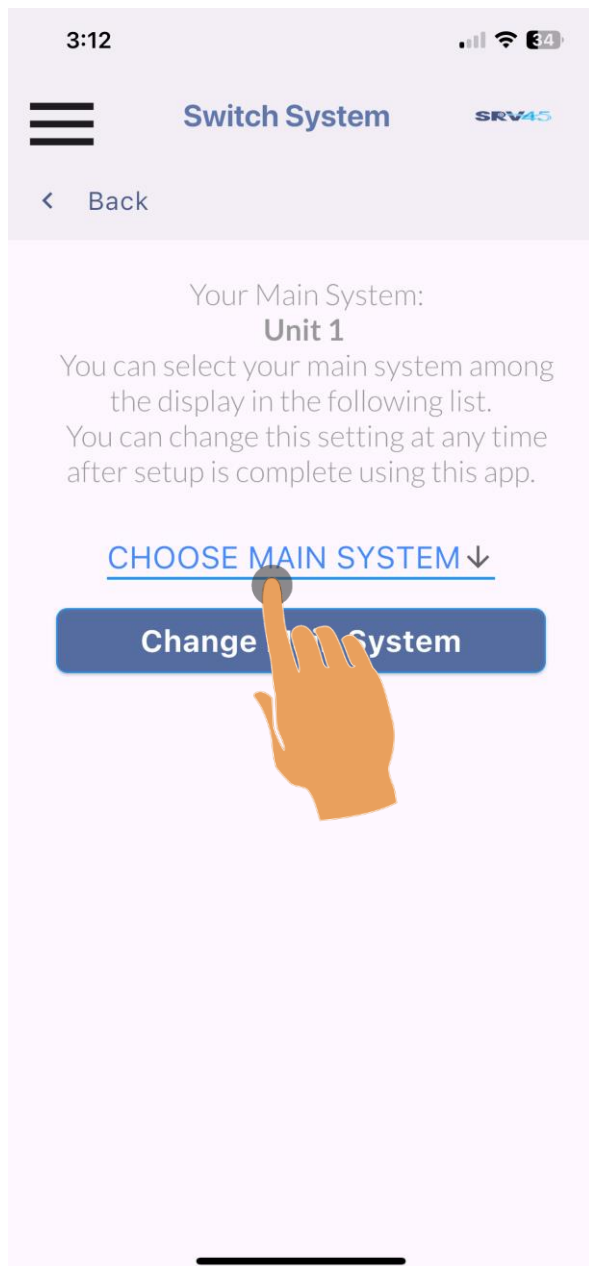


 Step 3:
Tap "CHOOSE MAIN SYSTEM"

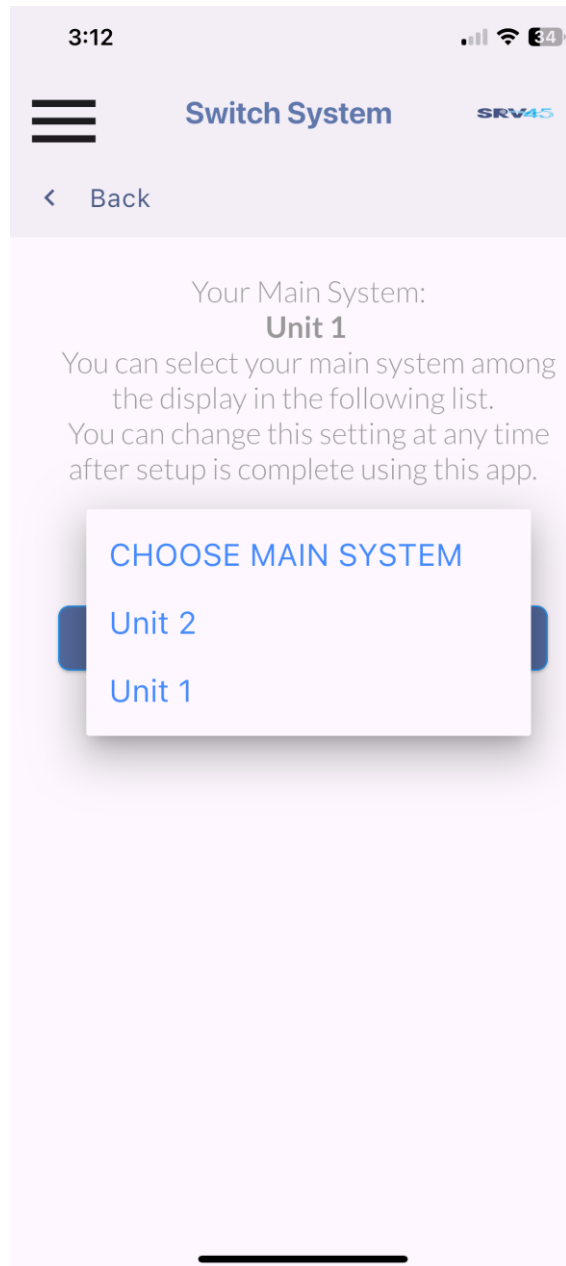


Step 4:
Tap the unit you want to designate as the main system

 How to switch your system

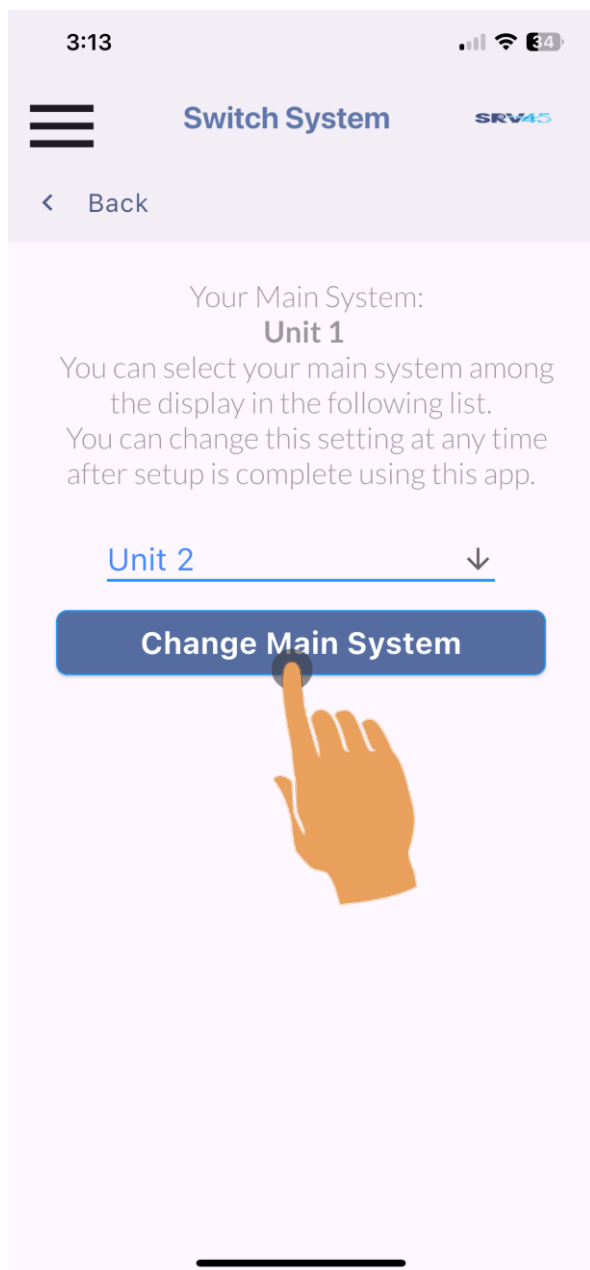


 Step 5:
Tap "Change Main System"

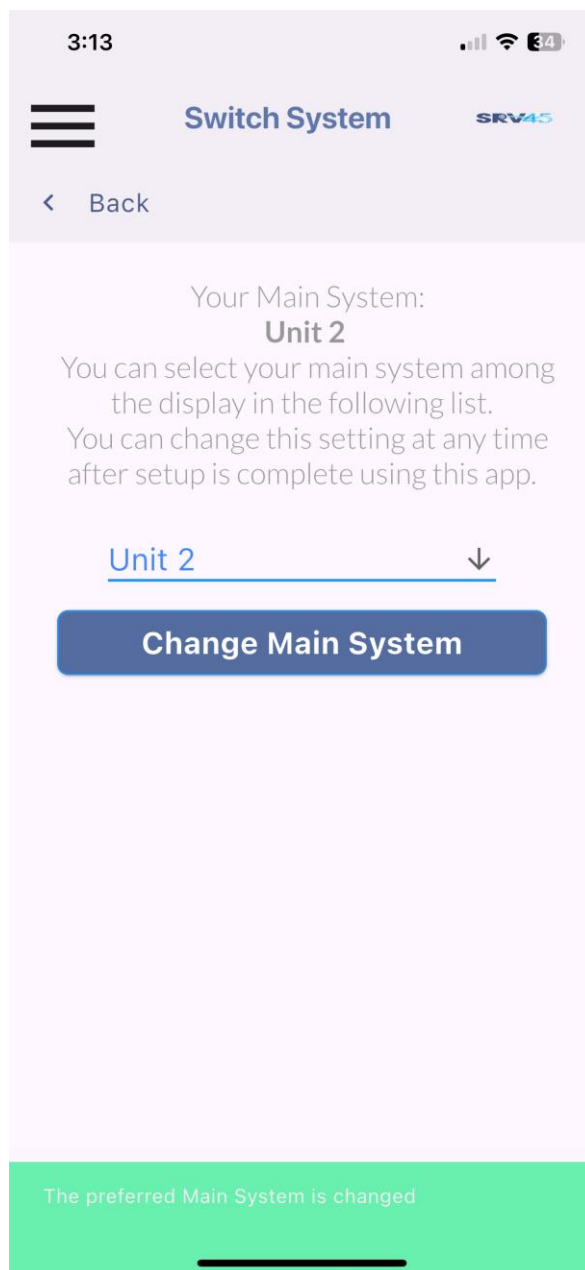


Step 6:
The preferred main system has
been successfully modified

 How to add new system

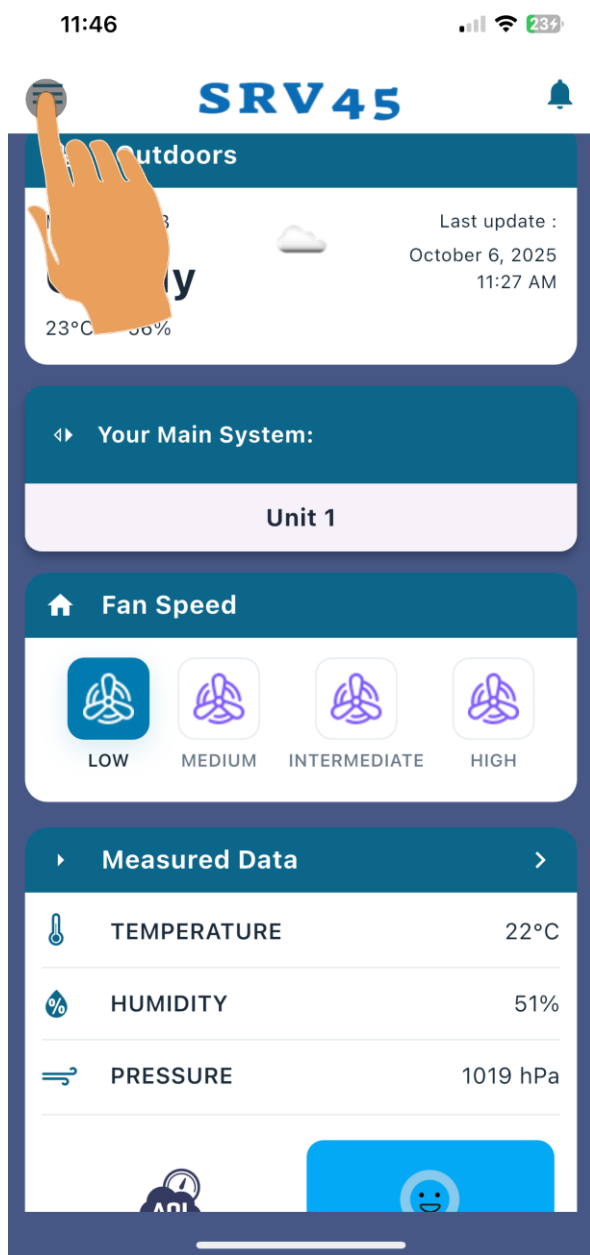

 Step 1:
Tap the menu icon

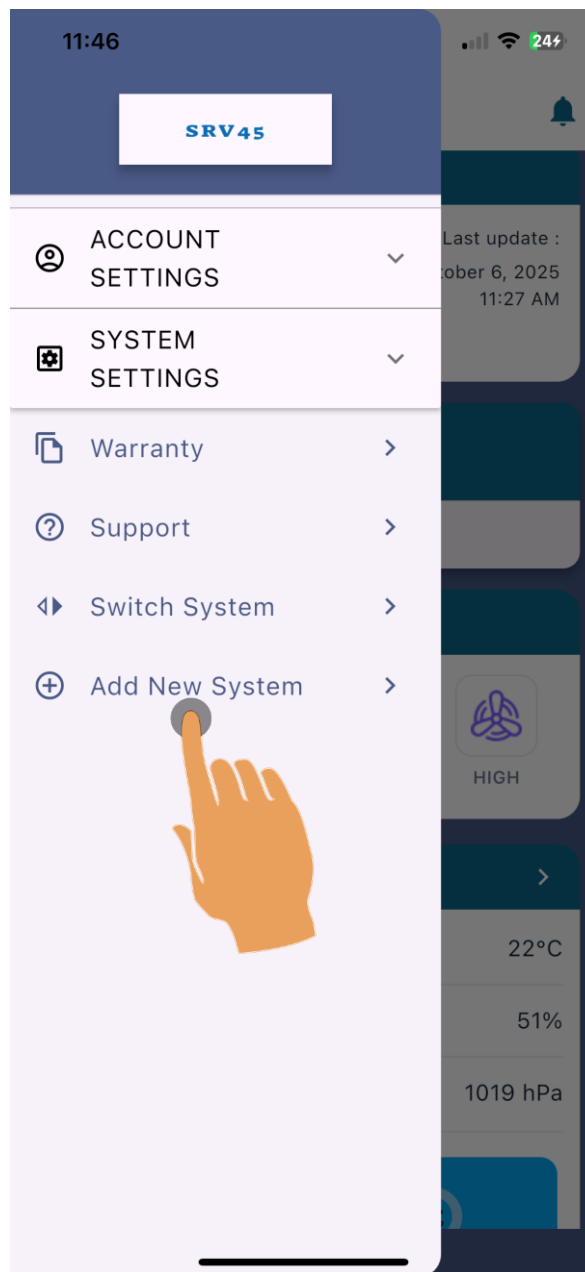

Step 2:
Tap "Add New System"